



# **AIR-TO-WATER HEAT PUMP**

### **Installation & Owner's manual**

Air-to-water heat pump

Models: CH-HP07MNK

# CONTENT

1. Pretace	1
2. Safety Precautions	2
2.1 Mark notes	. 2
2.2 Icon notes	. 2
2.3 Warning	3
2.4 Attention	. 4
3. Overall information of the heat pump	5
3.1 Device description	
3.2 Features of the air heat pump	
3.3 Heat pump dimension and view	
3.4 Specification data	
4. Installation	
4.1 Installation Schematic	
4.2 Transit	_
4.3 Installation occasions	
4.4 Water loop connection	
4.5 Installation space	
4.6 Water tank selection	
4.7 Power supply connection	
4.8 Cable and switch	16
4.9 Trial running	
5. Controlling and Operation.	
5.1 Function of wire controller	
5.2 Usage of wire controller	
5.3 Color Display Calibration	25
6. Troubleshooting and extra information	
6.1Parameter list and breakdown table	
7. The main controller terminals	
7.1 Wire control interface diagram and definition	
7.2 Controller interface diagram and definition	
7.3 The extended module	30
8. Appendix	30
8.1 Caution & Warning	31
8.2 Cable specification	

Welcome to air source water heat pump. Your decision to purchase heat pump will reward you for many years.

This is your assurance that you have purchased quality heat pump system available, one that is manufactured in a state-of-the-art facility and go with innovation.

# Necessary reading

Carefully read these operating and installation instructions and keep them safe. Should the equipment change hands, pass these instructions to the subsequent owner. Pass them to the trained contractors for servicing purposes.

## Protection

Where children or persons with limited physical, sensory or mental capabilities are to be allowed to control this equipment ensure that this will only happen under supervision or after appropriate instructions by a person responsible for their safety. Children should be supervised to ensure that they do not play with the equipment.

# Qualified only

Positioning, installation and commissioning must be carried out by trained personnel working in accordance with these operating and installation instructions.

## For information

The pictures and drawings in this manual is for your information only.

The manufacture has the right to chance or improve the product when it is needed, without prior notification to the users of this device.

# Quality check at first receipt of this product

When the product is delivered to the users, please check whether there is any damage on the unit during transportation; If there is any please talk with the forwarder or the contractor.

If the heat pump unit just can be installed a while latter, please keep it free from damage, rust or abrasion by following methods.

- 1, all the access like the water connections must be sealed correctly;
- 2, the unit must be free from sunshine, and placed under  $45^{\circ}$ C;
- 3, the unit must be free from heavy dust to avoid dirty on the evaporator;
- 4, the unit must be placed free from chaos to avoid accident.
- 5, please check the unit during stock

# Safety Precautions

To prevent the users and others from the harm of this unit, and avoid damage on the unit or other property, and use the heat pump properly, please read this manual carefully and understand the following information correctly.

The piping connection and wiring should be installed according to the local legal laws and regulations as well as the profession standard.

# Mark Notes

Mark	Meaning		
WARNING	A wrong operation may lead to death or heavy injury on people.		
ATTENTION	A wrong operation may lead to harm on people or loss of material.		

# Icon Notes

Icon	Meaning		
$\Diamond$	Prohibition. What is prohibited will be nearby this icon		
9	Compulsory implement. The listed action need to be taken.		
Ţ.	ATTENTION (include WARNING) Please pay attention to what is indicated.		

# Warning

Installation	Meaning
Professional installer is required.	The heat pump must be installed by qualified personals, to avoid improper installation which can lead to water leakage, electrical shock or fire.
Earthing is required	Please make sure that the unit and power connection have good earthing, otherwise may cause electrical shock.

Operation	Meaning	
PROHIBITION	DO NOT put fingers or others into the fans and evaporator of the unit, otherwise harm may be occurred.	
Shut off the power	When there is something wrong or strange smell, the power supply need to be shut off to stop the unit. Continue to run may cause electrical short or fire.	

Move and repair	Meaning	
<b>Q</b> Entrust	When the heat pump need to be moved or installed again, please entrust dealer or qualified person to carry it out.  Improper installation will lead to water leakage, electrical shock, injury or fire.	
<b>Q</b> Entrust	When the heat pump need to be repaired, please entrust dealer or qualified person to carry it out. Improper movement or repair on the unit will lead to water leakage, electrical shock, injury or fire.	
Prohibit	It is prohibited to repair the unit by the user himself, otherwise electrical shock or fire may be occur.	

# Attention

Installation	Meaning		
Installation Place	The unit CANNOT be installed near the flammable gas.  Once there is any leakage of the gas, fire can be occur.		
Fix the unit	Make sure that the basement of the heat pump is strong enough, to avoid any decline or fall down of the unit		
Need circuit breaker	Make sure that there is circuit breaker for the unit, lack of circuit breaker can lead to electrical shock or fire.		

Operation	Meaning		
Check the installation basement	Please check the installation basement in a period (one month), to avoid any decline or damage on the basement, which may hurt people or damage the unit		
Switch off the power	Please switch off the power for clean or maintenance.		
Prohibition	It is prohibited to use copper or iron as fuse. The right fuse must be fixed by electrician for the heat pump.		
Prohibition	It is prohibited to spray the flammable gas to the heat pump, as it may cause fire.		

# Overall information of the heat pump

#### 3.1. Device description

The air source heat pump extracts heat from ambient air and transfer it to water. By circulating the water, the energy is used to warm the house efficiently. Through the usage of floor heating, the heat pump COP can be as high as 4.5

In reverse, cooling is also available when it is needed.

Compared with oil boiler, gas boiler and electrical heater, heat pump is the best solution with high efficiency, safety and environment protect.

This air source heat pump use advanced heating tech-nology and intelligent control system, to produce hot water at more than  $55^{\circ}$ C. So it can work with the floor heating pipe, the fan coil or the radiator, and replace the boiler directly.

In addition, the air heat pump can be used to provide hot water for sanitary use, like kitchen, shower, etc.

#### 3.2. Features of the AIR HEAT PUMP

1, Save our planet---earth, by green technology
Heat pump transfer heat from air to the space for heating, so that there is no burning,
no waste, no dirty gas, thus maintain good environment for human and save earth from waste.

#### 2, Serve people by high efficiency and money saving

The heat pump is driven by electricity, and annually average efficiency can be higher than 4. By timer function, users can make use of the electric power at the low point of a day, thus save money for every family.

#### 3, Good for life with safe running


To use heat pump for heating can avoid electrical shot and burning, thus keep people free from explosion or poisoning.

#### 4. Easy operation

Heat pump is controlled and protected by micro-computor based contro-ller, the desired water temperature is set according to real requirement. System protection program will guarantee the unit to be running at hard environment.

# 3.3. Heat pump dimension and view

### Unit Model: CH-HP07MNK

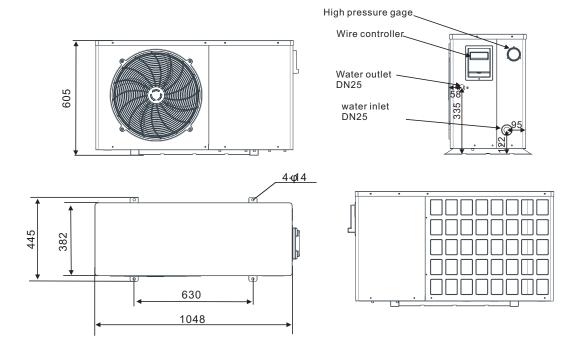

# Overall information of the heat pump

### 3.4. Specification data


Model		CH-HP07MNK
*Heating Capacity	kW	9.5
Treating Capacity	kcal/h	8168
**Heating Capacity	kW	6.3
Treating Capacity	kcal/h	5589
***Heating Capacity	kW	7.4
ricating Capacity	kcal/h	6363
Cooling Capacity	kW	5.9
	kcal/h	5073
*Power Input for Heating	kW	2.5
**Power Input for Heating	kW	2.1
***Power Input for Heating	kW	1.8
Power Input for Cooling	kW	2.3
Running Current (*Heating/**Heating//Cooling)	Α	10.3/9.2/8.1/10.2
Power Supply		230V∼/50Hz
Compressor Quantity		1
Compressor Type		Ratary
Fan Quantity		1
Fan Power Input	W	85
Fan Rotate Speed	RPM	830
Noise	dB(A)	56
Water Connection	inch	1
Water Flow Rate	m³/h	1.55
Water Pressure Drop	kPa	60
Unit Dimension (L/W/H)	mm	(Subject to drawings of the heat pump)
Packing Size (L/W/H)	mm	(Subject to data on the package)
Net Weight	kg	(Subject to data on the nameplate)
Gross Weight	kg	(Subject to data on the package)


<sup>1.\*</sup>Hot Water: outdoor temperature DB/WB20°C/15°C , outlet water circulation from 15°C to  $55^{\circ}$ C ;

 $<sup>2.**</sup>Heating: outdoor temperature DB/WB7°C/6°C \ , \ outlet \ water 55°C, \ inlet \ water \ (return) \ 50°C;$ 

<sup>3.\*\*\*</sup>Heating: outdoor temperature DB/WB7°C/6°C, outlet water 35°C, inlet water (return) 30°C;


<sup>4.</sup> Cooling: outdoor temperature DB/WB35°C/24°C, outlet water 7°C, inlet water (return)12°C.

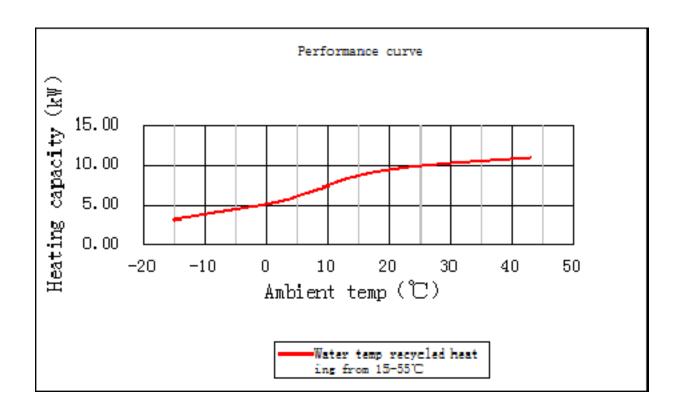

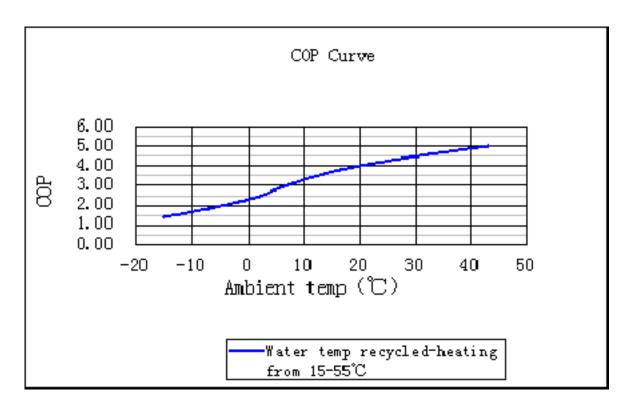


### 4.1 Installation schematic


# 4.1.1 The connection diagram of hot water project

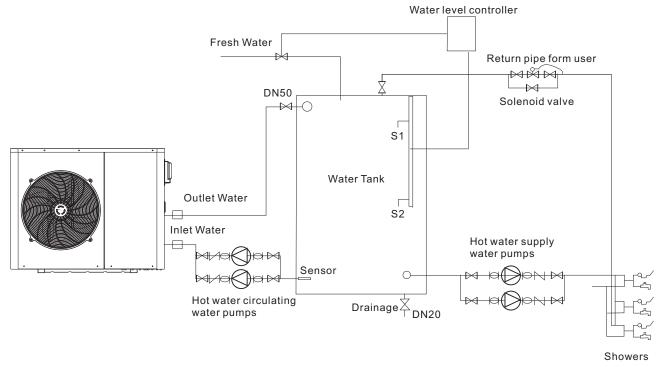

# 4.1.2 The connection diagram of space heating project

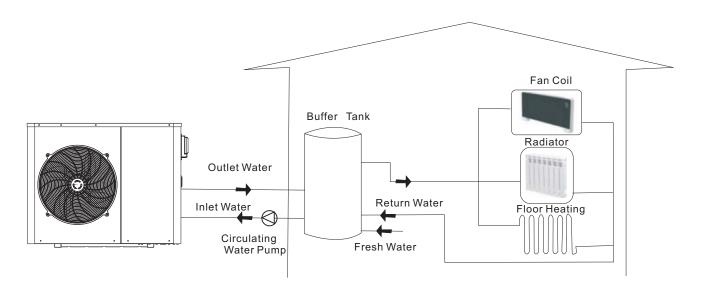

# 4.1.3 The connection diagram of hot water and space heating project

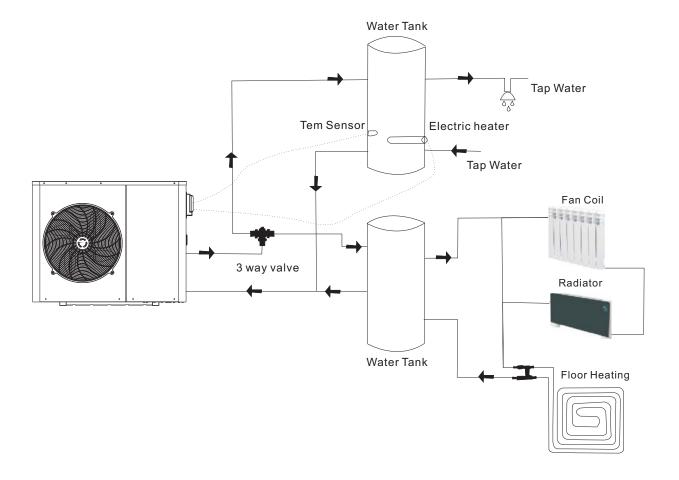

#### Function introduction

### Shutdown Protection

After heat pump being shut down, compressor will stop for 3 minutes at least before it starting up once again.

## Running protection

During high temp. ambient condition, Fan motor might stop running

### Defrosting

When there is frost formed on the unit, heat pump will enter defrosting mode(2-10min) to make heat pump running at good condition.

Fan motor will be stopped during defrosting mode.

### Running condition

The running condition for the heat pump is from -15 $^{\circ}$ C-43 $^{\circ}$ C.

Please do not use lake water, river water or untreated ground water for our heat pump.

### Power off

Please power off the heat pump when there is thunder/radio/power grid fluctuating Affecting our heat pump running. After that, power on and restart our heat pump by pressing On/off button.


### Current leakage protector

Please must connect one current leakage protector between power supply and circuit breaker.

#### 4.2.Transit

When the heat pump is transported please keep the unit stand up. The unit cannot be laid down, otherwise the inner parts of the device may be damaged.

When the unit need to be hung up during installation, a 8 meters cable is needed, and there must be soft material between the cable and the unit to prevent damage to the heat pump cabinet. (See picture 1)

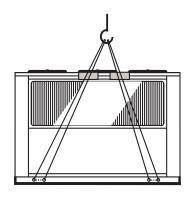

Picture 1

Or please use forklift, since there is wood chassis as package.



DO NOT touch the heat exchanger of the heat pump with fingers or other objects!

#### 4.3.Installation occasions

- The unit can be installed on any place outdoor which can carry heavy machine such as terrace, housetop, ground and so on.
- The location must have good ventilation.
- The place is free from heat radiation and other fire flame.
- A pall is needed in winter to protect the heat pump from snow.
- There must be not obstacles near the air inlet and outlet of the heat pump.
- There must be water channel around the heat pump to drain the condensing water .
- A place which is free from strong air blowing.
- There must be enough space around the unit for maintenance.


#### 4.4. Water loop connection

Please pay attention to below matters when the water pipe is connected:


- Try to reduce the resistance to the water from the piping.
- The piping must be clear and free from dirty and blocks. Water leakage test must be carried out to ensure there is no water leaking. And then the insulation can be made.
- Attention that the pipe must be tested by pressure separately. DO NOT test it together with the heat pump.
- There must be expansion tank on the top point of the water loop, and the water level in the tank must be at least 0.5 meter higher than the top point of the water loop.
- The flow switch is installed inside of the heat pump, check to ensure that the wiring and action of the switch is normal and controlled by the controller.
- The connection between the heat pump and the construction is better to be flexible type, to avoid vibration transfer. The support to the water pipe must be separate, but not rely on the heat pump unit
- Try to avoid air stayed inside of the water pipe, and there must be air vent on the top point of the water loop.
- There must be thermometer and pressure meter at the water inlet and outlet, for easy inspection during running.
- There must be drainage on the low points of the water system, and there is already drainage on the chassis of the heat pump. The water in the system must be drain out during winter if the heat pump is not running. And there must be air vent on the high point of the water system to drive air of the water. Drainage and air vent need not to be insulated, in order to maintain.

#### 4.5.Installation space

Single unit (Picture 1)

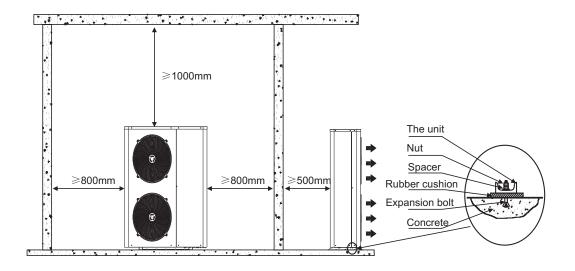

#### Multi-units (Picture 2)

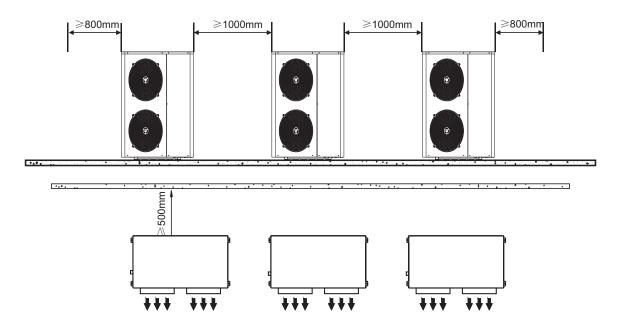

Attention: Please make sure that the height of other stacked thing around the heat pump should lower than our heat pump, and please keep distance between these two parts.

(1) when the heat pump is installed under basement, indoor/other confined space, please pay attention to the air inlet/outlet:


for PASHW030-XI, cycled air volume should no less than 3200m3/h;

for PASHW050S-XI, cycled air volume should no less than 7000m3/h;

#### 4.6. Water tank selection

Water tank should with stainless steel for inner tank, outer tank can with stainless steel or color steel, and there should be 50mm-100mm foam insulation between outer and inner tank. The water tank structure as following:

#### Water tank structure

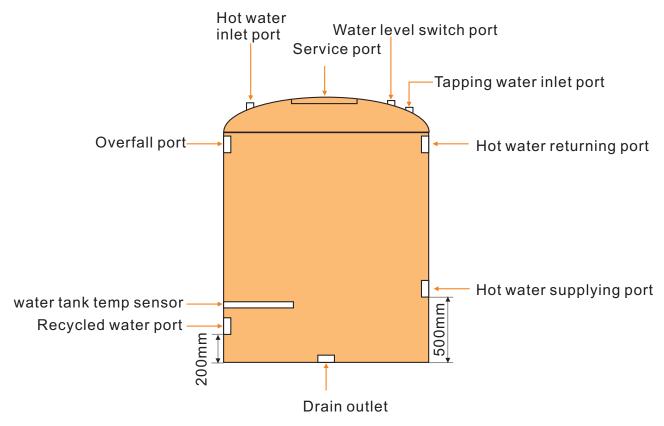

#### Attention:

- 1) The height of Hot water supplying port should 80mm higher than that recycled water port; The distance from recycled water port to the bottom of water tank is at least 100mm;
- 2) Please make sure that there is insulation for water tank to make sure that the temp decreasing is no more than  $5^{\circ}$ C after one day and night. And water tank should meet the dust prevention and fungi-proofing standard of sanitary water.

### Installation

#### 4.7. Power supply connection

- Open the front panel, and open the power supply access.
- The power supply must go through the wire access and be connected to the power supply terminals in the controlling box.
- If the outside water pump is needed, please insert the power supply wire into the wire access also and connect to the water pump terminals.
- If an additional auxiliary heater is need to be controlled by the heat pump controller, the relay (or power) of the aux-heater must be connected to the relevant output of the controller.

#### 4.8. Cable and switch

- The unit should use independent power supply, Wiring required by Table 6.1, Power supply voltage must in line with rated voltage.
- Power supply circuit must be equipped with an All-pole disconnect device have at least 3mm contact opening distance.
- The wiring must be completed by professional technicians in accordance with circuit diagram.
- Power supply circuit must have earth wire, the earth wire of power should be connected with external earth wire safely. And the external earth wire must be in order.
- The creepage protection device must be settled in accordance with the relevant national technical standards for electronic equipment.
- The power wire and signal wire should be neatly arranged. High voltage wire and low voltage wire must be separated and free from any interference, and they must be free from any pipe and valves of the unit.
- When all the wiring is completed, the power can only be connected after a double check.

#### 4.9. Trial running

Inspection before trial running

- Check the indoor unit, and make sure that the pipe connection is right and the relevant valves are open.
- Check the water loop, to ensure that the water inside of the expansion tank is enough, the water supply is good, the water loop is full of water and without any air. Also make sure there is good insulation for the water pipe.
- Check the electrical wiring. Make sure that the power voltage is normal, the screws are fastened, the wiring is made in line with the diagram, and the earthing is connected.
- Check the heat pump unit including all of the screws and parts of the heat pump to see if they are in good order. When power on, review the indicator on the controller to see if there is any failure indication. The gas gauge can be connected to the check valve to see the high pressure(or low pressure) of the system during trial running.

### Trial running

- Start the heat pump by press " U "key on the controller. Check whether the water pump is running, if it runs normally there will be 0.2 MPa on the water pressure meter.
- When the water pump runs for 1 minutes, the compressor will start. Hear whether there is strange sound from the compressor. If abnormal sound occurs please stop the unit and check the compressor. If the compressor runs well please look for the pressure meter of the refrigerant.
- Then check whether the power input and running current is in line with the manual. If not please stop and check.
- Adjust the valves on the water loop, to make sure that the hot(cool) water supply to each door is good and meet the requirement of heating(or cooling).
- Review whether the outlet water temperature is stable.
- The parameters of the controller are set by the factory, it is not allowed to change then by user himself.

#### 5.1. Function of wire controller

### (1) Power on interface



### (2) Starting up interface



Remark: the wire controller can display the temperature unit as "°F" or "°C" according to the unit model you bought.

### Key function

Key number	Key name	Key function
1	On and off	Click this key to switch ON or OFF Red represents ON, while grey represents OFF
2	Mode key	Hot water mode, heating mode, cooling mode, hot water+heating mode or hot water+cooling mode can be selected by pressing this key.
3	Temperature setting	Click this key to set the target temperature
4	Fast heating	Click this key to start the rapid heating This key will be displayed during heating
(5)	Timer setting	Click this key to set the timer White represents not enabled, while green represents enabled
6	Setup key	Click this key to check the unit status, time, factory parameter, temperature curve, timer setting and Mute setting
7	Fault icon	This Icon will flash when there is an error shown up, then the display will enter Failure record interface after tapping this icon.

#### Note:

- ®is defrosting icon, the machine is in defrosting mode when this icon is shown;
- (9) is hot water mode icon, this machine is in hot water mode when this icon is shown;
- @is heating mode icon, this machine is in heating mode when this icon is shown.

### 5.2 Usage of wire controller

#### 1. On and off


As the main interface shows

(1) .In shutting down interface (on/off key is in gray status), press on/off key can start up the machine.



(2) Note: In starting up interface (on/off key is in red status), press on/off key can shut down the machine.

#### 2. Mode switch

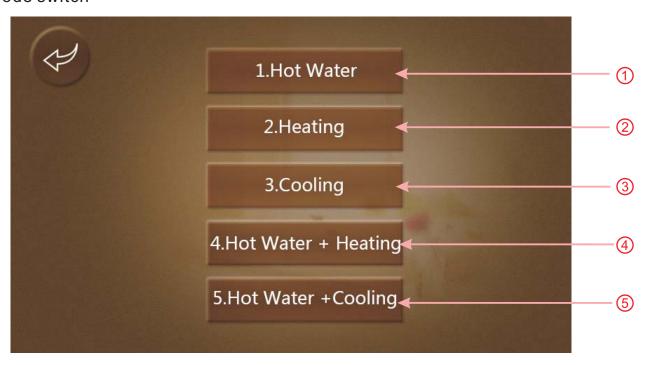

# **Controlling and Operation**

In the main interface, there are five modes can be selected after tapping the mode key.

- (1) tapping hot water mode icon ①, then the display will change to this mode interface;
- (2) tapping heating mode icon 2, then the display will enter this mode interface;
- (3) tapping cooling mode icon 3, then the display will switch to this mode interface;
- (4) tapping hot water+heating mode icon 4, then the display will go into hot water+heating mode interface;
- (5) tapping hot water+cooling mode icon (5), then the display will come to hot water+cooling mode interface;

Note: If what you have purchased is a heating-only model (without cooling function), the "cooling" will not be shown on the interface.

#### 3. Setting of target temperature




Take hot water + cooling mode for example;

Tapping (1), the wire controller back to main interface;

Tapping 2, the target temp of hot water can be set by pop-up keyboard;

Tapping 3, the target temp of cooling mode can be set by pop-up keyboard.


4. When the target temp is being set, pop-up keyboard is shown as following:

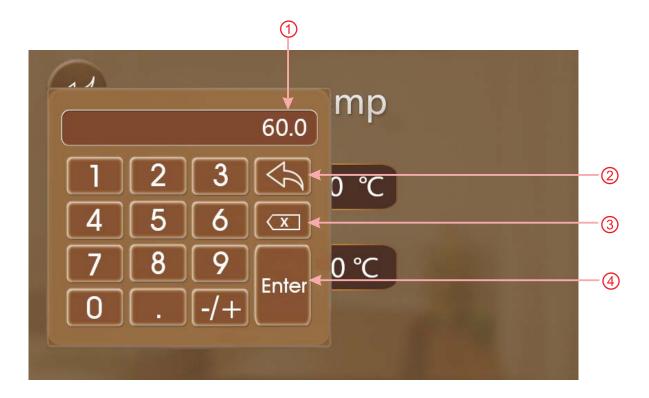

Key number	Key name	Key function
2	Return key	Tapping this key can back to the main interface.
③ Delete key		Tapping this key to undo the last action.
4 Enter key		Tapping this key can save you action and back to the main interface.


Note: ①means the new target temp under current setting

### 5. Fast heating

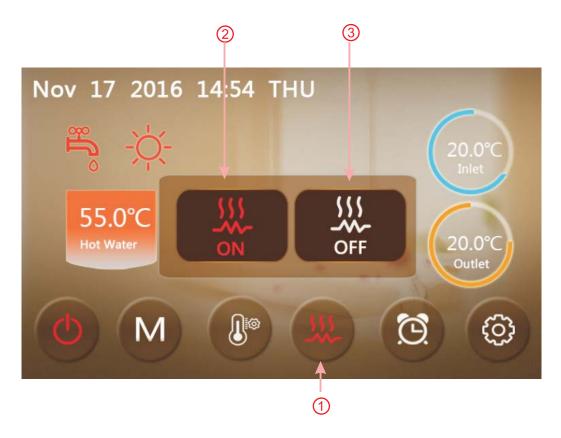

### 6. Timer setting

Click the timer setting key to enter the timer setting and the interface display is as follows:

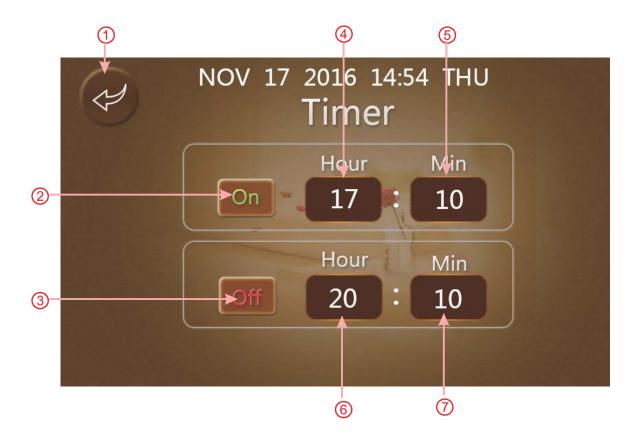


Key number	Key name	Key color	Key function
1	Return key		Click this key to return to the main in terface.
2	Enable the timer on	Enable: Green ON Disable: Gray OFF	Click this key to start or turn off the timed start-up function
3	Enable the timer off	Enable: Red ON Disable: Gray OFF	Click this key to start or turn off the timed shutdown function
4	Hour of timer on		Hour of Timer on is shown
<b>⑤</b>	Minute of timer on		Minute of Timer on is shown
6	Hour of timer off		Hour of Timer off is shown
7	Minute of timer off		Minute of Timer off is shown

Such as the above figure: Under the state of unmanned operation, it will start the timed start-up at 17:10 and will be timed shutdown when running to 20:10.

### 7. Fault interface

Click the fault icon on the main interface and the interface display is as follows:

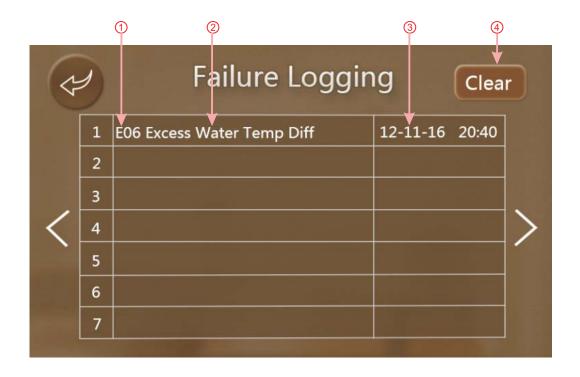

# **Controlling and Operation**

#### Note:

- ①:Fault code
- 2:Fault name
- ③:Occurrence time of the fault, Day, month and year hour: second (s)
- 4:Click this key to clear all fault records

### 5.3. Color Display Calibration

Keep click quickly at the blank area on any interface till you hear a long beep. Then you will enter the calibration interface. Click "+" to start calibration.

When you hear the beep again, you will finish calibration and exit

# 6.1. Parameter list and breakdown table

### Electronic control fault table

Can be judged according to the remote controller failure code and troubleshooting


Protect/fault	Fault display	Reason	Elimination methods
Standby	Non		
Normal boot	Non		
Inlet Temp Sensor Fault	P01	The temp. Sensor is broken or short circuit Check or change the temp.	
Outlet Temp Sensor Fault	P02	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Water Tank Temp Sensor	P03	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
AT Sensor Fault	P04	The ambient temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Coil temp1 Sensor	P153	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Coil temp2 Sensor	P154	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Suction temp Sensor	P17	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Antifreeze Sensor1(US)	P191	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Antifreeze Sensor2(US)	P193	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Antifreeze Sensor4(HSS)	P195	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Inlet Sensor(EVI)	P101	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Outlet Sensor(EVI)	P102	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Exhaust temp Sensor	P181	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Pressure Sensor fault	PP11	The system 1 pressure Sensor is broken or short circuit	Check or change the pressure Sensor or pressure
Syst2:Coil temp Sensor	P25	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Suction temp Sensor	P27	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Antifreeze Sensor1(US)	P291	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Antifreeze Sensor2(US)	P293	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Antifreeze Sensor1(HSS)	P292	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Antifreeze Sensor2(HSS)	P296	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Exhaust Temp Sensor	P281	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Pressure Sensor fault	PP21	The system 2 pressure Sensor is broken or short circuit	Check or change the pressure Sensor or pressure
Syst2:Inlet Sensor(EVI)	P201	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Outlet Sensor(EVI)	P202	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst1:Exhaust Overtemp	P182	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Syst2:Exhaust Overtemp	P282	The temp. Sensor is broken or short circuit	Check or change the temp. Sensor
Low AT Protection	TP	The ambient temp. is low	
Fan Motor1 Fault	F031	Motor is in locked-rotor state     The wire connection between     DC-fan motor module and fan     motor is in bad contact	1.Change a new fan motor     2.Check the wire connection and make sure they are in good contact
Fan Motor2 Fault	F032	Motor is in locked-rotor state     The wire connection between     DC-fan motor module and fan     motor is in bad contact	1.Change a new fan motor     2.Check the wire connection and make sure they are in good contact
Communication Fault (speed control module)	E081	Speed control module and main board communication fail	Check the communication connection

# Troubleshooting and extra information

Protect/fault	Fault display	Reason	Elimination methods	
Communication Fault	E08	Communicat ion failure between wire controller and mainboard	Check the wire connection between remote wire controller and main board	
Syst1:Comp Overcurrent	E101	The compressor is overload	Check whether the system of the compresso running normally	
Syst2:Comp Overcurrent	E201	The compressor is overload	Check whether the system of the compressor running normally	
Syst1: HP Protection	E11	The high-preesure switch is broken	Check the pressure switch and cold circuit	
Syst2: HP Protection	E21	The high-preesure switch is broken	Check the pressure switch and cold circuit	
Syst1: LP Protection	E12	The high-preesure switch is broken	Check the pressure switch and cold circuit	
Syst2: LP Protection	E22	The high-preesure switch is broken	Check the pressure switch and cold circuit	
Flow Switch Protection	E032	No water/little water in water system	Check the pipe water flow and water pump	
Aux Superheat Protection	E04	The electric-heater protection switch is broken	Check to see whether the electric heater has been running under the temperature over 150°C for a long time	
Prim Anti-freezing Prot	E19	The ambient temp. is low	over the over a long time	
Secondary Anti-freezing Prot	E29	The ambient temp. is low		
Syst1:Antifreeze(US)	E171	Use side water system temp. is low	Check the US water temp. or change the temp. Sensor     Check the pipe water flow and whether water system is jammed or not	
Syst2:Antifreeze(US)	eze(US) E271 Use side water system temp. is low		1. Check the US water temp. or change	
Syst1:Antifreeze(HSS)	E172	Heat side water system temp. is low	Check the HSS water temp. or change the temp. Sensor     Check the pipe water flow and whether water system is jammed or not	
Syst2:Antifreeze(HSS)	E272	Heat side water system temp. is low	Check the HSS water temp. or change the temp. Sensor     Check the pipe water flow and whether water system is jammed or not	
Syst1:Exhaust Overtemp	E182	The compressor is overload	Check whether the system of the compressor running normally	
Syst2:Exhaust Overtemp	E282	The compressor is overload	Check whether the system of the compressor running normally	
Excess Water Temp Diff  E06  Water flow is not enough and low pressure difference		Water flow is not enough and low pressure difference	Check the pipe water flow and whether water system is jammed or not	


# Interface diagram

# 7.1 Wire control interface diagram and definition

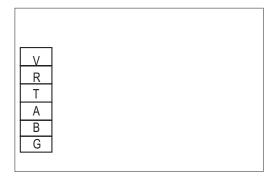

Sign	Meaning				
V	12V ( power + )				
R	No use				
Т	No use				
А	485A				
В	485B				
G	GND(power-)				

# 7.2 Controller interface diagram and definition

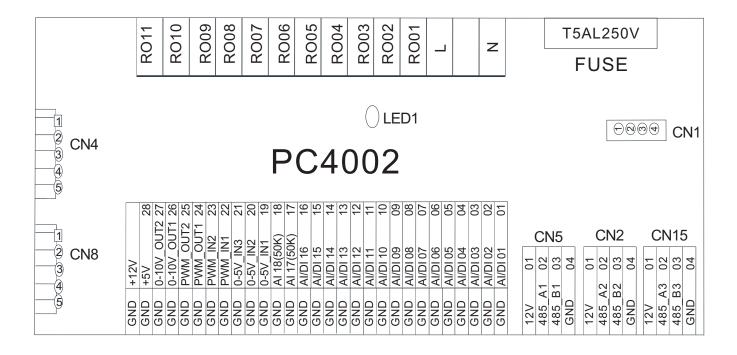


# Main board of the input and output interface instructions below

Number	Sign	Meaning			
01	AI/DI01	Water intput temperature			
02	AI/DI02	Water output temperature			
03	AI/DI03	System 1 coil temperature			
04	AI/DI04	Ambient temperature			
05	AI/DI05	System 1 suction temperature			
06	AI/DI06	System1 Antifreeze 1 Temperature / Syetem 1 Coil temperature 2			
07	AI/DI07	System1 Antifreeze 2 Temperature			
08	AI/DI08	Water tank Temperature			
09	AI/DI09	System1 Antifreeze 4 Temperature			
10	AI/DI10	Temperature of the EVI inlet of system 1			
11	AI/DI11	Temperature of the EVI outlet of system 1			
12	AI/DI12	The high-preesure switch 1			
13	AI/DI13	The low-preesure switch 1			
14	AI/DI14	Water flow switch protection			
15	AI/DI15	Emergency switch iutput			
16	AI/DI16	Mode switch			
17	AI17 (50K)	Overload switch of electric heater			
18	Al18 (50k)	System Exhaust temperature 1			
19	0~5V_IN1	System 1 compressor current detection			
20	0~5V_IN2	Water level sensor			
21	0~5V_IN3	pressure sensor 1			
22	PWM_IN1	System flow meter (reserved)			
23	PWM_IN2	No use			
24	PWM_OUT1	AC Fan control output			
25	PWM_OUT2	No use			
26	0~10V OUT1	No use			
27	0~10V OUT2	No use			
28	+5V	5V output			
29	+12V	12V output			
30	CN1	Communication ports on the expansion board			
31	CN2	Centralized control port			
32	CN4	Electronic expansion valve 1			
33	CN5	Color line controller			
34	CN8	Electronic expansion valve of EVI in system 1			
35	CN15	DTU			
36	RO11	Electromagnetic three-way valve 2			
37	RO10	Electromagnetic three-way valve 1			
38	RO09	Hot water pump			
39	RO08	Alarm output			
40	R007	AUX superheat			

41	RO06	4-way valve			
42	R005	Water pump			
43	R004	Fan 2 / Fan low speed			
44	R003	Fan 1 / Fan high speed			
45	R002	Compressor 2			
46	R001	Compressor 1			

# 7.3. Interface drawing and definition of the extended module

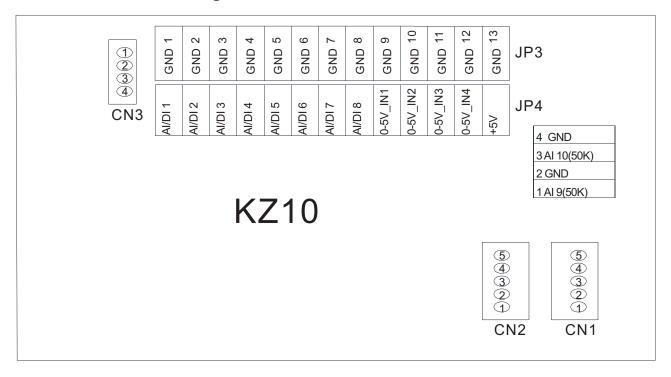

The description of the input and output interface of the extended module is as follows

Temperature 2

AI/DI01	System 2 fan coil temperature	AI 10(50K)	Reserved
AI/DI02	System 2 suction temperature	GND	Ground
AI/DI03	System2 Antifreeze 1 Temperature	AI 9(50K)	System 2 Exhaust temperature
AI/DI04	System2 Antifreeze 2 Temperature	CN1	Electronic expansion valve A
AI/DI05	System2 Antifreeze 3 Temperature (Temperature of the EVI inlet of system 2)	CN2	Electronic expansion valve of EVI in system 2
AI/DI06	System2 Antifreeze 4 Temperature (Temperature of the EVI oulet of system 2)	CN3	Communication port
AI/DI07	System 2 the high-preesure switch		
AI/DI08	System 2 the low-preesure switch		
0~5V_IN1	System 2 compressor current detection		
0~5V_IN2	System 2 pressure sensor		
0~5V_IN3	Reserved		
0~5V_IN4	Reserved		
+5V	+5V		

#### 8.1. Caution & Warning

- 1.1The unit can only be repaired by qualified installer centre personnel or an authorised dealer. (for Europe market)
- 1.2 This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (for Europe market)
  - Children should be supervised to ensure that they do not play with the appliance.
- 1.3 Please make sure that the unit and power connection have good earthing, otherwise may cause electrical shock.
- 1.4 If the supply cord is damaged, it must be replaced by the manufacturer or our service agent or similarly qualified person in order to avoid a hazard.
- 1.5 Directive 2002/96/EC (WEEE):
  - The symbol depicting a crossed-out waste bin that is underneath the appliance indicates that this product, at the end of its useful life, must be handled separately from domestic waste, must be taken to a recycling centre for electric and electronic devices or handed back to the dealer when purchasing an equivalent appliance.
- 1.6 Directive 2002/95/EC (RoHs): This product is compliant with directive 2002/95/EC (RoHs) concerning restrictions for the use of harmful substances in electric and electronic devices.
- 1.7 The unit CANNOT be installed near the flammable gas. Once there is any leakage of the gas , fire can be occur.
- 1.8 Make sure that there is circuit breaker for the unit, lack of circuit breaker can lead to electrical shock or fire.
- 1.9 The heat pump located inside the unit is equipped with an over-load protection system. It does not allow for the unit to start for at least 3 minutes from a previous stoppage.
- 1.10 The unit can only be repaired by the qualified personnel of an installer center or an authorized dealer. (for North America market)
- 1.12 Installation must be performed in accordance with the NEC/CEC by authorized person only. (for North America market)
- 1.13 USE SUPPLY WIRES SUITABLE FOR 75℃.
- 1.14 Caution: Single wall heat exchanger, not suitable for potable water connection.

### 8.2. Cables specification

# 2.1 Single phase unit

Nameplate maximum current	Phase line	Earth line	МСВ	Creepage protector	Signal line
No more than 10A	2×1.5mm <sup>2</sup>	1.5mm <sup>2</sup>	20A	30mA less than 0.1 sec	
10~16A	$2\times2.5$ mm <sup>2</sup>	2.5mm <sup>2</sup>	32A	30mA less than 0.1 sec	
16~25A	2×4mm <sup>2</sup>	4mm <sup>2</sup>	40A	30mA less than 0.1 sec	
25~32A	2×6mm <sup>2</sup>	6mm <sup>2</sup>	40A	30mA less than 0.1 sec	
32~40A	$2\times10$ mm <sup>2</sup>	10mm <sup>2</sup>	63A	30mA less than 0.1 sec	
40~63A	2×16mm <sup>2</sup>	16mm <sup>2</sup>	80A	30mA less than 0.1 sec	$n \times 0.5 \text{mm}^2$
63~75A	2×25mm <sup>2</sup>	25mm <sup>2</sup>	100A	30mA less than 0.1 sec	
75~101A	$2\times25$ mm <sup>2</sup>	25mm <sup>2</sup>	125A	30mA less than 0.1 sec	
101~123A	$2\times35$ mm <sup>2</sup>	35mm <sup>2</sup>	160A	30mA less than 0.1 sec	
123~148A	$2\times50$ mm <sup>2</sup>	50mm <sup>2</sup>	225A	30mA less than 0.1 sec	
148~186A	$2\times70$ mm <sup>2</sup>	70mm <sup>2</sup>	250A	30mA less than 0.1 sec	
186~224A	$2 \times 95 \text{mm}^2$	95mm <sup>2</sup>	280A	30mA less than 0.1 sec	

### 2.2 Three phase unit

Nameplate maximum current	Phase line	Earth line	МСВ	Creepage protector	Signal line
No more than 10A	3×1.5mm <sup>2</sup>	1.5mm²	20A	30mA less than 0.1 sec	
10~16A	$3\times2.5$ mm <sup>2</sup>	2.5mm <sup>2</sup>	32A	30mA less than 0.1 sec	
16~25A	$3\times4$ mm <sup>2</sup>	4mm <sup>2</sup>	40A	30mA less than 0.1 sec	
25~32A	$3\times 6$ mm <sup>2</sup>	6mm <sup>2</sup>	40A	30mA less than 0.1 sec	
32~40A	$3\times10$ mm <sup>2</sup>	10mm <sup>2</sup>	63A	30mA less than 0.1 sec	
40~63A	$3\times16$ mm <sup>2</sup>	16mm <sup>2</sup>	80A	30mA less than 0.1 sec	$n \times 0.5 \text{mm}^2$
63~75A	$3\times25$ mm <sup>2</sup>	25mm <sup>2</sup>	100A	30mA less than 0.1 sec	
75~101A	$3\times25$ mm <sup>2</sup>	25mm <sup>2</sup>	125A	30mA less than 0.1 sec	
101~123A	$3\times35$ mm <sup>2</sup>	35mm <sup>2</sup>	160A	30mA less than 0.1 sec	
123~148A	$3\times50$ mm <sup>2</sup>	50mm <sup>2</sup>	225A	30mA less than 0.1 sec	
148~186A	$3\times70$ mm <sup>2</sup>	70mm <sup>2</sup>	250A	30mA less than 0.1 sec	
186~224A	$3\times95$ mm <sup>2</sup>	95mm <sup>2</sup>	280A	30mA less than 0.1 sec	

When the unit will be installed at outdoor, please use the cable which can against UV.

