












Air to Water Heat Pump

WATERSTAGE

Split integrated DHW type

Outdoor unit WO*G112LCT WO*G140LCT **WO*K112LCT WO*K140LCT WO*K160LCT**

Hydraulic unit WG*G140DD6 WG*K160DD9

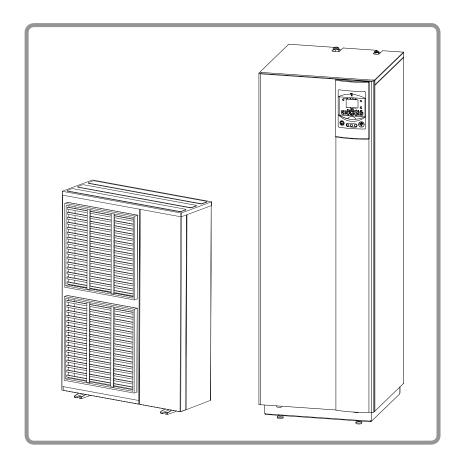





Installation and operating manual

intended for professionals

To be saved for future consultation

Fujitsu General (Euro) GmbH Werftstrasse 20 40549 Düsseldorf - Germany

Subject to modifications without notice. Non contractual document.

This device requires for its installation, the intervention of qualified personnel with a certificate of capacity for handling refrigerants.

Contents

Description of the unit	
Package	Description
Installation	
Regulation installation and maintenance conditions. 12 Unpacking and reservations. 12 Receipt 12 Handling 12 Containment of refrigerant circuits 12 Accessories provided 12 Installation position 13 Installation of the outdoor unit 13 Installation precautions 13 Outdoor unit positioning 14 Condensate drain hose 14 Installing the hydraulic unit 15 Installation precautions 15 Refrigeration connections 15 Refrigeration connections 16 Rules and precautions 16 Refrigeration connections 17 Creating the flarings 17 Shaping the refrigeration pipes 17 Connecting the flared connections 17 Filling the installation with gas 19 Commissioning procedure 19 Sealing test 20 Additional charge 21 Pump down operation (Refrigerant collecting	Hydraulic connecting
operation) outdoor unit	Configuring remote control (wireless)

Regulation system	
User interface, Remote control (option) and Room thermostat (option)	Parametering the setting
Overall hydraulic layout	
Electrical wiring diagrams	
Troubleshooting	
Maintenance of the installation Hydraulic checks	Checking the outdoor unit
Maintenance Emptying the hydraulic unit Distribution valve	ACI check
Instructions for the user	
Quick-start procedure Start-up check-list Before starting-up Starting-up	Settings sheet

Packing list

Heat pump (HP)	Outdoor unit	Hydraulic unit	
Model	Model	Model	
Waterstage High Power Integrated DHW 11 Single phase	WO*G112LCT	WG*G140DD6	
Waterstage High Power Integrated DHW 14 Single phase	WO*G140LCT	WG G140DD6	
Waterstage High Power Integrated DHW 11 3-Phase	WO*K112LCT		
Waterstage High Power Integrated DHW 14 3-Phase	WO*K140LCT	WG*K160DD9	
Waterstage High Power Integrated DHW 16 3-Phase	WO*K160LCT		

Optional equipment

- 2nd circuit kit (code UTW-KZD*D) for connecting 2 heating circuits.
- Regulation extension kit (code UTW-KRE*D) to manage a 2nd heating circuit, swimming pool etc...
- **Boiler connection kit** (code UTW-KBD*D) for connecting a boiler to the heat pump.
- Room thermostat (code UTW-C55*A),
 Wireless room thermostat (code UTW-C58*D)
 for correcting the ambient temperature.
- Remote control (code UTW-C75*A),
 Wireless remote control (code UTW-C78*A)
 for correcting the ambient temperature and programming the heat pump.
- Swimming pool kit (code UTW-KSP*D).
- Cooling kit (code UTW-KCL*D).

Scope of application

This heat pump provides:

- Heating in winter,
- Control of two heating circuits*,
- Production of domestic hot water.
- Installation with boiler connection* as a supplementary heating for the coldest days. or
- the addition of electrical back-ups*, for extra heating on the coldest days.
- Cooling in summer* (for floor heating-cooling system or fan-convectors).
- Heating the swimming pool*.
- * : These options require the use of additional kits (see para "Optional equipment").

1 Description of the unit

1.1 Package

• 1 package: Outdoor unit.

• 1 package: Hydraulic unit and outdoor sensor.

1.2 Definitions

- <u>Split</u>: The heat pump consists of two elements (an outdoor unit for outdoor and a hydraulic unit for inside the dwelling).
- <u>Air/water</u>: The surrounding air is the energy source. This energy is transmitted to the water in the heating circuit by the heat pump.
- Inverter: The fan and compressor speeds are modulated according to the heating requirements. This technology enables you to save on energy and operate on a single-phase power supply, whatever the heat pump's output, by avoiding heavy intensities on start-up.
- <u>COP</u> (coefficient of performance): This is the relationship between the energy transmitted to the heating circuit and electrical energy consumed.

Specifications 1.3

Designation model Waterstage High Power		11 Single phase	14 Single phase	11 3-phase	14 3-phase	16 3-phase
Nominal heating performances (outdoor temperature / init	ial tempera	ature)				
Heat output						
+7 °C / +35 °C - Floor heating system	kW	10,80	13,50	10,80	13,50	15,17
-7 °C / +35 °C - Floor heating system	kW	10,80	12,00	10,80	13,00	13,50
+7 °C / +45 °C - Low temperature radiator	kW	9,23	11,54	10,10	12,60	13,00
-7 °C / +45 °C - Low temperature radiator	kW	9,16	11,45	10,02	12,50	13,00
+7 °C / +55 °C - Radiator	kW	7,74	9,67	9,48	11,80	12,96
-7 °C / +55 °C - Radiator	kW	7,51	9,25	9,20	10,60	11,90
Power absorbed						
+7 °C / +35 °C - Floor heating system	kW	2,54	3,23	2,51	3,20	3,70
-7 °C / +35 °C - Floor heating system	kW	4,32	5,08	4,28	5,18	5,40
+7 °C / +45 °C - Low temperature radiator	kW	2,84	3,72	3,01	3,81	4,00
-7 °C / +45 °C - Low temperature radiator	kW	4,58	5,92	4,63	6,00	6,37
+7 °C / +55 °C - Radiator	kW	3,13	4,03	3,60	4,61	5,14
-7 °C / +55 °C - Radiator	kW	4,56	5,65	5,08	6,04	6,88
	/ + 35 °C)	4,36	4,18	4,30	4,22	4,10
Electrical characteristics	, F35 C)	4,20	↔,10	4,30	→,∠∠	4 , 1∪
	V	2	30		400	
Supply voltage (50 HZ)	V	22	25	8,5	9,5	10,5
Maximum current for appliance				· · · · · · · · · · · · · · · · · · ·	•	•
Nominal current Marian and a filtra destrict base on the affect of the state of th	A	11,4	14,2	3,7	4,8	5,5
Maximum current of the electrical back-ups (heating)	Α		5/26,1		13	
Power of the electrical back-ups (heating)	kW	-	kW (Single phase)		9 kW (3-phase)	
Real power absorbed by the fan	W	2x	:100		2x104	
Real power absorbed by the circulation pump	W			70		
Maximum power absorption by the outdoor unit	W	5060	5750	5865	6555	7245
Electrical back-up power DHW	W			1500		
Hydraulic circuit						
Maximum operating pressure Heating	bar			3		
Maximum operating pressure Domestic hot water tank	bar			10		
Hydraulic system flow rate 4°C<∆t<8°C (nominal conditions) min./max.	l/h	1170 / 2340	1460 / 2920	1170 / 2340	1460 / 2920	1650 / 3290
Various						
Weight of outdoor unit	kg	(92		99	
Weight of hydraulic unit (empty / full of water)	kg			152/ 366		
Water capacity of the hydraulic unit / the domestic tank				24 / 190		
Noise level at 1 m 1 (hydraulic unit)	dB			39		
Sound power level according to EN 12102 ² (hydraulic unit)	dB			46		
Noise level at 5 m ¹ (outdoor unit)	dB	42	43	39	41	42
Sound power level according to EN 12102 ² (outdoor unit)	dB	69	70	66	68	69
Heating system operating limits						
Outdoor temperature mini/maxi	°C			-25 / +35		
Initial max. heating water temperature Floor heating system	°C			45		
Initial max. heating water temperature Low temperature radiator	°C			60		
Refrigeration circuit						
Diameter of gas pipes	inches			5/8		
Diameter of liquid pipes	inches			3/8		
Factory charge of refrigerant R410A ³	g			2500		
Maximum operating pressure	bar			41,5		
				41,5 5		
Maximum operating pressure Minimum length of pipes Maximum length of pipes ⁴	bar m m					

 $^{^{\}mbox{\scriptsize 1}}$ Sound pressure level in (x)m of the device, 1,5m of the ground, the open field.

² The sound power level is a laboratory measure of the emitted sound power but contrary to the noise level, it doesn't correspond to the measure of the felt.

Refrigerant R410A (as per the standard EN 378.1).
 Factory charge of refrigerant R410A.

 $^{^{\}rm 5}$ Taking into account the possible additional load of refrigerant R410A (see page 21)

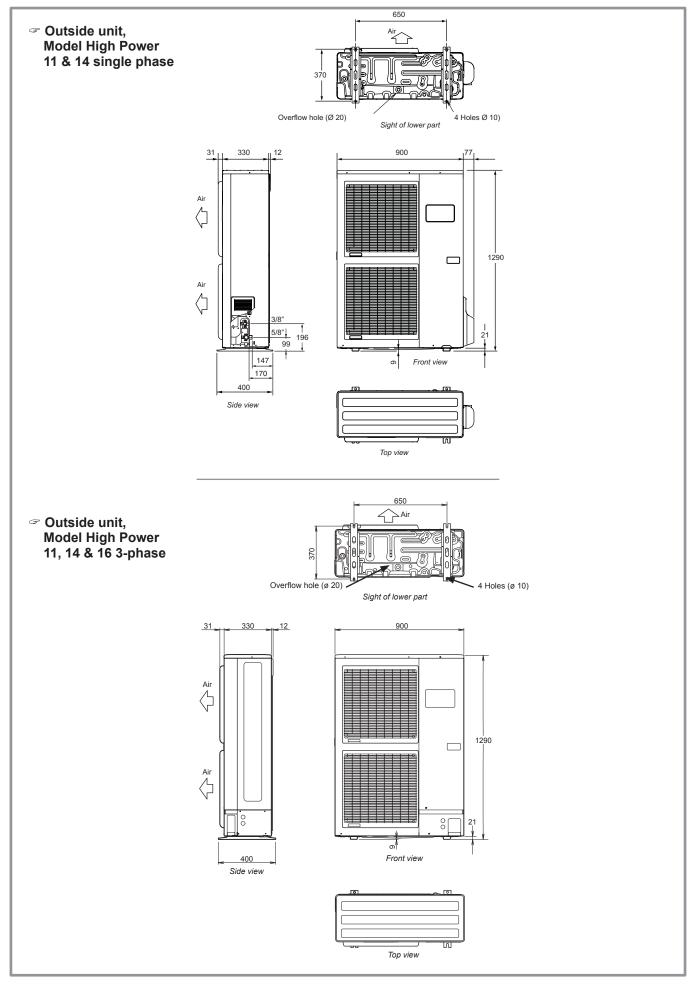


figure 1 - Dimensions in mm

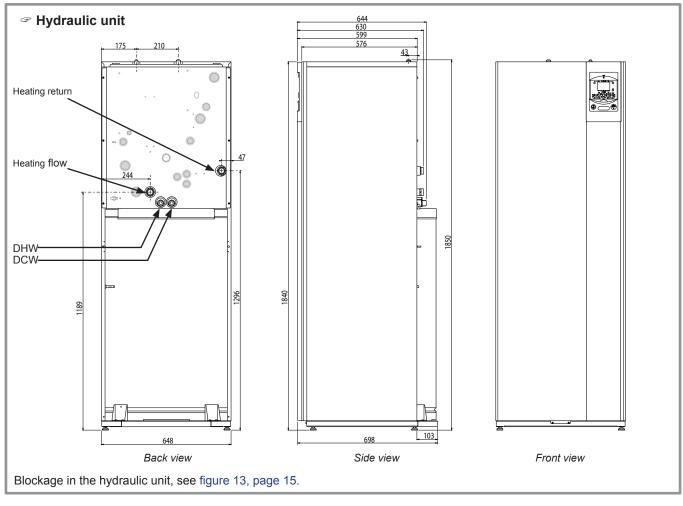
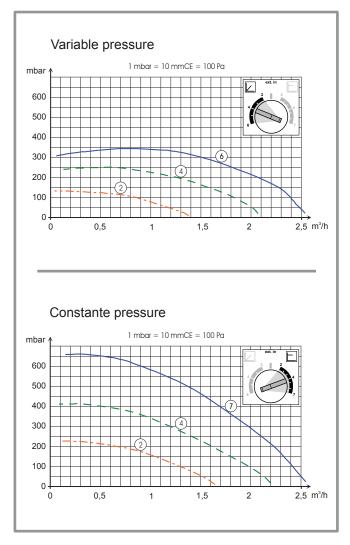


figure 2 - Dimensions in mm



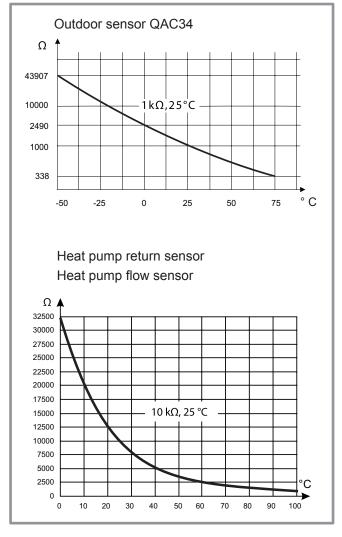


figure 3 - Hydraulic pressures and flow rates available

figure 4 - Ohmic values of the sensors (Hydraulic module)


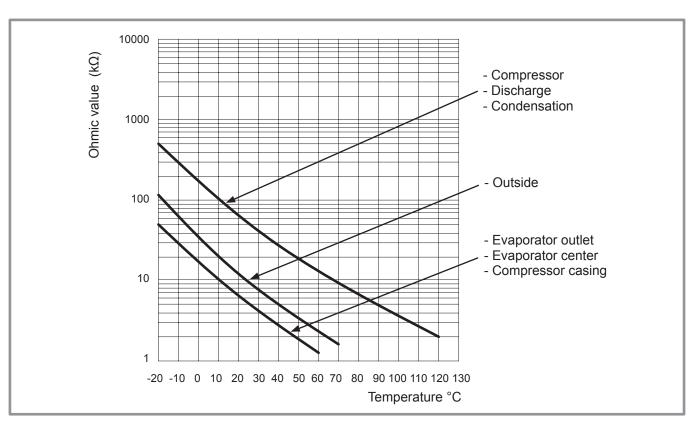


figure 5 - Ohmic values of the sensors (Outdoor unit)

1.4 Description

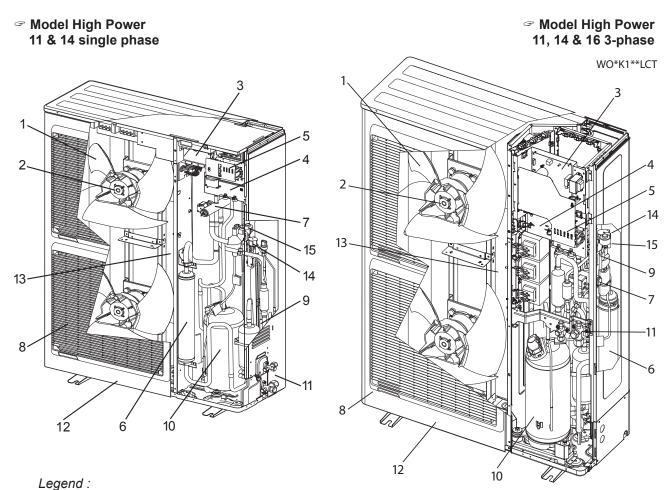

- 1 Low-noise, high-output fan.
- 2 Electric variable speed "inverter" motor.
- 3 "Inverter" control module.
- 4 Vacuum start (pump down) and control light.
- 5 Connection terminal blocks (power and interconnection).
- 6 Refrigerant accumulator bottle.
- 7 Cycle reversing valve.
- 8 Anti-corrosion treated bodywork.
- 9 Electronic expansion valve.
- 10 Noise and temperature insulated "inverter" compressor.
- 11 Refrigeration connection valves (flared connectors) with protective caps.
- 12 Holding tank with condensate drain hole.
- 13 High-performance exchange surface evaporator; anti-corrosion treated hydrophilic aluminium fins and grooved copper tubes.
- 14 Solenoid valve for liquid injection.
- 15 Electric expansion valve for liquid injection.

figure 6 - Outdoor unit components

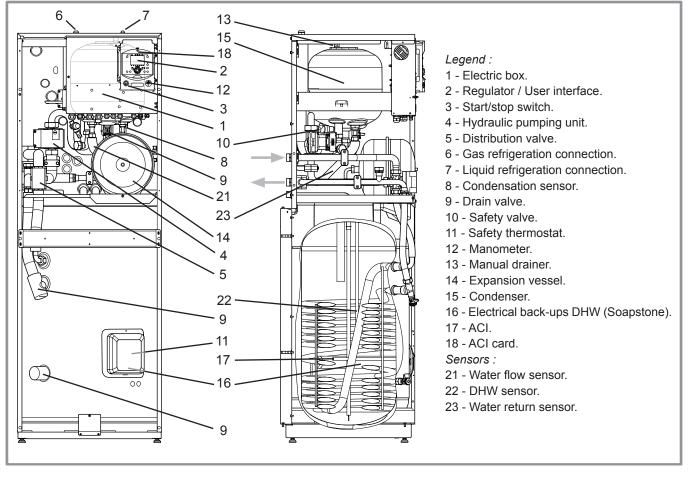


figure 7 - Hydraulic unit components

1.5 Operating principle

The heat pump transmits the energy contained in the surrounding air into the dwelling to be heated.

The heat pump consists of four main elements, in which a refrigerant fluid (R410A) circulates.

- In the evaporator (ref. **13**, figure 6, page 9): The energy is taken from the surrounding air and is transmitted to the refrigerant. Because it has a low boiling point, it changes from the liquid state to the vapour state, even in cold weather (down to -15 °C outdoor temperature).
- In the compressor (ref. **10**, figure 6, page 9): The vaporised refrigerant brought to high pressure and takes on more calories.
- In the condenser (ref. **15**, figure 7) : The energy in the refrigerant is transmitted to the heating circuit. The refrigerant returns to liquid state.
- In the expansion valve (ref. 9, figure 6, page 9):
 The liquefied refrigerant is brought back to low pressure and returns to its initial temperature and pressure.

The heat pump is equipped with a controller, which controls the room temperature based on the outdoor temperature measurement and governed by the temperature control. The room thermostat (option) provides a corrective action for the temperature control.

 The hydraulic unit can be optionally fitted with an electrical back-up system or boiler connection which starts up in order to provide additional heating during the coldest periods.

Regulation functions

- The heating circuit's initial temperature is controlled by the temperature control.
- The power of the outdoor unit is modulated according to flow heating temperature via the "inverter" compressor.
- Control of the electrical back-up heating.
- The daily timer program enables you to define the periods for comfortable or reduced ambient temperature.
- Summer/winter mode switchover is automatic.
- Control of the supplementary boiler* (option).
- The room thermostat (option)*: provides a corrective action for the temperature control.
- Control of a second heating circuit*.
- Domestic hot water: Heating time programme, control of the operation of the DHW circulation pump.
- Managing the cooling*.
- Control of swimming pool heating*.
- * If the heat pump is equipped with optional equipment and the associated kits.

Protection functions

- Anti-legionella cycle for domestic hot water.
- Anti-corrosion protection with titanium anode (ACI).
- Frost protection: Frost protection cuts in if the low-temperature point of the heating circuit falls below 5 °C (provided that the heat pump's electrical power supply is not interrupted).

Domestic hot water (DHW) operating principle

Two domestic hot water (DHW) temperatures can be parametered: nominal temperature (line 1610 to 55 $^{\circ}$ C) and reduced temperature (line 1612 to 40 $^{\circ}$ C).

The default heat pump program (line 560, 561 and 562) is set for nominal temperature from 0:00 to 5:00 and from 14:30 to 17:00 and for reduced temperature for the rest of the day. This optimizes electrical consumption while ensuring comfortable availability of hot water.

Setting for reduced temperature can be useful to prevent the DHW from switching on too often and for too long during the day.

The production of domestic hot water (DHW) is triggered when the temperature in the tank falls 7°C (setting from line 5024) below the set temperature.

The heat pump produces the domestic hot water, which is then additively heated, if required, by electrical back-up heating inside the tank. To ensure a DHW setting over 55°C, the electrical back-up heating or the boiler must be left on.

Depending on how the parameter (1620) is set, nominal temperature can be reached 24h/day or only at night or depending on the heat pump program.

If the contract concluded with the energy provider includes a subscription to day/night tariff, the electrical backup is subordinate to the supplier's power tariff and the comfort temperature may only be reached at night.

If no particular contract is concluded, the comfort temperature can be reached at any time, including during the day.

The production of DHW takes priority over heating; nevertheless the production of DHW is controlled by cycles that control the times assigned to the heating and the production of DHW in the event of simultaneous demand.

A function to switch from "reduced" to "nominal" is provided on the front of the user interface. (see ref. 1, figure 42, page 36).

Anti-legionella cycles can be programmed.

• Fan convectors with integrated control system Do not use a room sensor in the area.

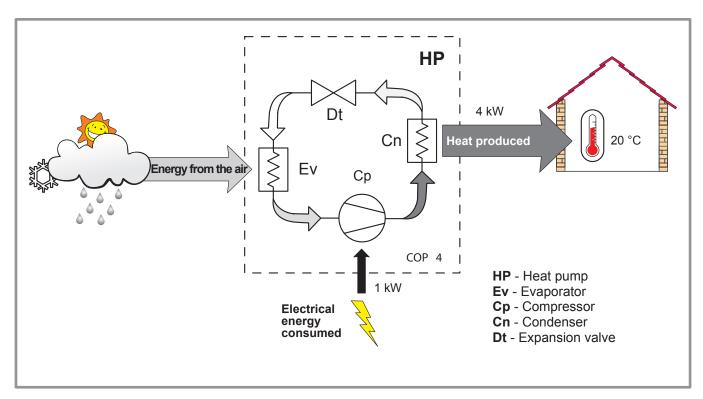


figure 8 - Heat pump operating principle

2 Installation

2.1 Regulation installation and maintenance conditions

The appliance must be installed and the maintained by an approved professional in accordance with the prevailing regulations and code of practice, in particular:

- The legislation on the handling of refrigerants.
- Heating installation with floor heating system.
- Low voltage electrical installations Rules.

2.2 Unpacking and reservations

2.2.1 Receipt

Carefully check, in the carrier's presence, the general appearance of the appliances and check that the outdoor unit is not laid on its side or back.

In the case of any dispute, state any appropriate reservations to the carrier in writing within 48 hours and send a copy of this letter to the After-Sales service.

2.2.2 Handling

The outdoor unit should not be laid on its side or back during transport.

If not kept upright during transport, the appliance could be damaged through displacement of the refrigerant and deformation of the compressor suspension.

Any damage caused by transportation of the unit lying down is not covered by the warranty.

If necessary the outdoor unit may be tilted only during manual handling (to go through a door or use a staircase). This operation must be conducted very carefully and the appliance must be immediately restored to upright position.

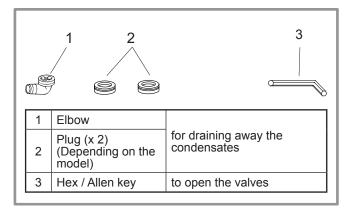


figure 9 - Accessories provided with the outdoor unit

2.2.3 Containment of refrigerant circuits

All refrigerant circuits fear contamination from dust and moisture. If such pollutants introduced into refrigeration circuit, they can contribute to degrade the reliability of the heat pump.

- It's necessary to ensure correct containment connections and refrigerant circuits (hydraulic unit, outdoor unit).
- In case of subsequent failure and expertise, the finding of the presence of moisture or foreign objects into the compressor oil would lead to systematic exclusion of warranty.
- Check upon receipt that the fittings and the refrigeration circuit caps mounted on hydraulic unit and outdoor unit are properly seated and locked (impossible to loosen bare hands). If this's not the case, tighten them using an against wrench.
- Check also that the refrigerant connections are sealed (plastic caps or tubes crushed at the ends and soldered). If the caps must be removed during installation (tubes cut by example), put back them as soon as possible.

2.2.4 Accessories provided

Accessories provided with the outdoor unit (figure 9). Accessories provided with the hydraulic unit (figure 10).

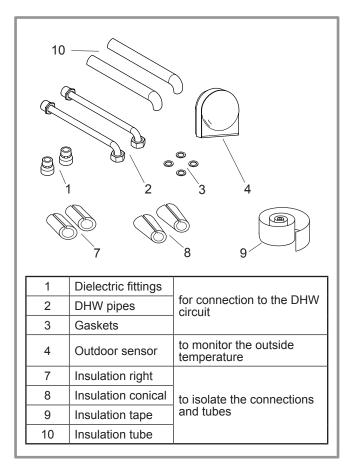


figure 10 - Accessories provided with the hydraulic unit

2.3 Installation position

The choice of the position for installation is particularly important insofar as any later movement is a delicate operation requiring the intervention of a qualified person. Choose the site of the outdoor unit and the hydraulic unit after discussion with the customer.

Observe the maximum and minimum distances between the hydraulic unit and the outdoor unit (figure 19, page 18), the guarantee of the performances and the system's service life depend on this.

2.4 Installation of the outdoor unit

2.4.1 Installation precautions

The outdoor unit must only be installed outdoor (outdoors). If a shelter is required, it must have broad openings on the 4 walls and observe the installation clearances (figure 11).

- Choose a site that is preferably sunny and sheltered from strong cold predominant winds (mistral, tramontana, etc...).
- The unit must be easily accessible for future installation and maintenance work (figure 11).
- Ensure that it is possible to make the connections to the hydraulic unit easily.
- The outdoor unit is able to withstand bad weather but avoid installing in a position where it is likely to be exposed to significant dirt or flowing water (under a defective gutter for example).

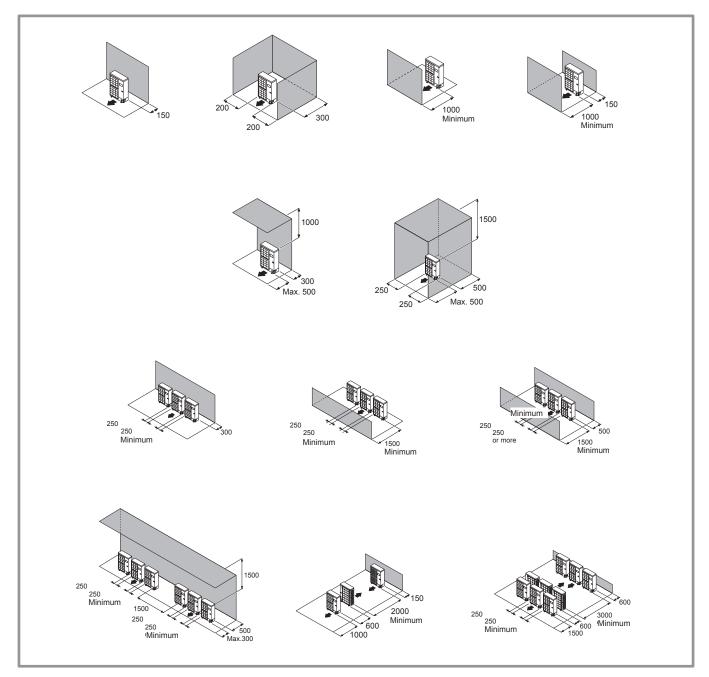


figure 11 - Minimum installation clearances around outside unit (all models)

- Water may drain away from the outdoor unit when it is operating. Do not install the appliance on a paved terrace; choose a well-drained place (e.g. gravel or sand). If the installation is in an area where the temperature can be lower than 0°C for a long period, check that the presence of ice does not present any danger. A drainage pipe can also be connected to the outdoor unit (figure 12, page 14).
- Nothing should obstruct the air circulation through the evaporator and from the fan (figure 11).
- Keep the outdoor unit away from heat sources and inflammable products.
- Make sure the appliance not disturb the surrounding area or users (noise level, draught generated, low temperature of the air being blown out, with the risk of freezing plants in its path).
- The surface on which the appliance is installed must:
- be permeable (soil, gravel, etc),
- support its weight easily,
- provide a solid fixing and
- not transmit any vibration to the dwelling. (Anti-vibratory blocks are available as an option).
- The wall bracket can not be used in conditions likely to transmit vibrations, ground position is preferred.

2.4.2 Outdoor unit positioning

The outdoor unit must be raised at least 50 mm above ground level. In areas prone to snow, this height should be increased but should not exceed 1,5 m (figure 12).

 Fasten the outdoor unit by means of screws and rubber tightening or toothed lock washers to avoid their coming loose.

Warning

In the area with heavy snowfall, if the intake and outlet of outdoor unit is blocked with snow, it might become difficult to get warm and it is likely to cause of the breakdown.

Please construct a canopy and a pedestral or place the unit on high stand (local configured).

- Set the unit on a strong stand, such as one made of concrete blocks to minimize shock and vibration.
- Do not set the unit directly on the ground because it will cause trouble.

2.4.3 Condensate drain hose


(see figure 12).

If the use of a discharge pipe is imperative:

- Use the elbow provided (**C**) to connect a 16mm-diameter hose for draining away the condensate.
- Use the stopper or stoppers provided (**B**) to block the opening of the condensate tank.

Allow for the condensate to flow away under the force of gravity (waste water, rain water, gravel bed).

If the installation is made in an area where the temperature can be lower than 0°C for a long period, provide the drain pipe with a trace resistance to avoid it icing up. The trace resistance must heat not only the pipe but also the bottom of the appliance's condensate collection tank.

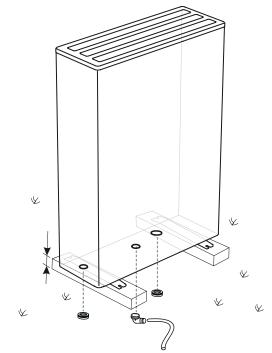

* In regions subject to frequent snow, (H) must be greater than the average snow layer.

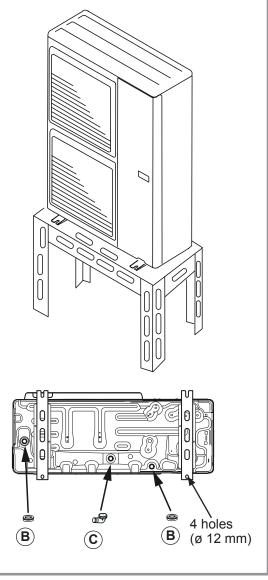


figure 12 - Positioning of the outside unit, draining away the condensate

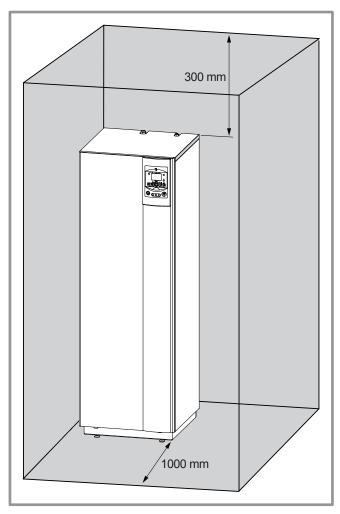


figure 13 - Minimum installation clearances around the hydraulic module and distances to the combustible partitions

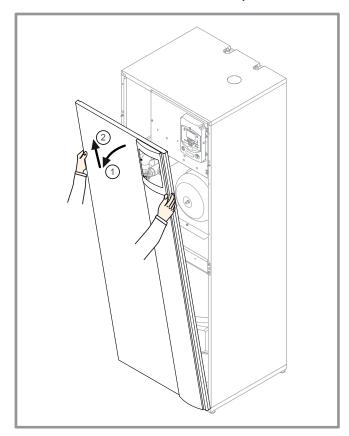


figure 14 - Open the front cover

2.5 Installing the hydraulic unit

2.5.1 Installation precautions

- The room in which the appliance operates must comply with the prevailing regulations.
- To facilitate maintenance and to allow access to the various components, we recommend that you provide sufficient space all around the hydraulic unit (figure 13).
- Be careful not to bring inflammable gas near to the heat pump during its installation, in particular when it requires brazing. The appliances are not fireproof and should therefore not be installed in a potentially explosive atmosphere.
- To avoid condensation inside the condenser, remove the refrigerant circuit caps only when building the refrigerant connections.
- If the refrigerant connection only occurs at the end of the installation, be sure that the refrigerant circuit caps* remain in place and tight throughout the installation duration.
 - * (hydraulic unit side and outdoor unit side)
- After every intervention on the refrigeration circuit and before final connection, take care to replace the plugs in order to avoid any pollution from the refrigeration circuit (The sealing with tape is prohibited).

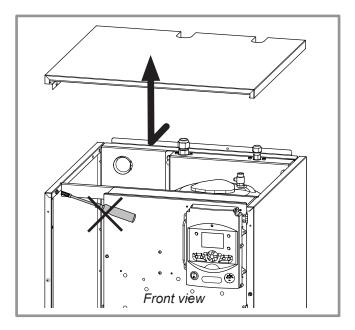


figure 15 - Removing the cover

2.6 Refrigeration connections

This appliance uses refrigerant R410A.

Comply with the legislation for handling refrigerants.

2.6.1 Rules and precautions

 After every intervention on the refrigeration circuit and before final connection, take care to replace the plugs in order to avoid any pollution from the refrigeration circuit.

Minimum necessary tools

- Set of manometers (*Manifold*) with hoses exclusively reserved for HFCs (Hydrofluorocarbons).
- Vacuum gauge whith isolation valves.
- Vacuum pump specially for HFCs (use of a traditional vacuum pump is authorized if, and only if, it is fitted with a non-return valve on the suction side).
- Flaring tool.
- Pipe-cutter.
- Deburring tool.
- Wrenches.
- Refrigerant gas leak detector certified (sensitivity 5g/year).
 - Provision on using tools that have been in contact with HCFCs (R22 for example) or CFCs.
 - The manufacturer declines any liability with regard to the guarantee if the above instructions are not observed.


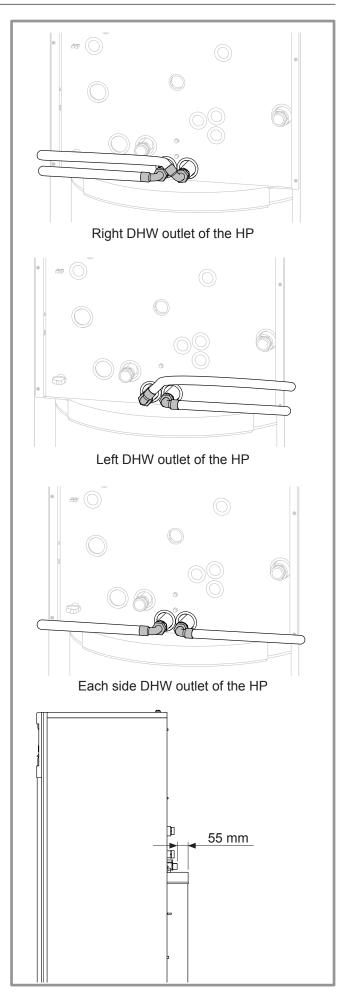


figure 16 - DHW outlet


Flared connections

- Lubrication with mineral oil (for R12, R22) is forbidden.
- Only lubricate with polyolester refrigeration oil (POE). If POE is not available, fit without lubrication.

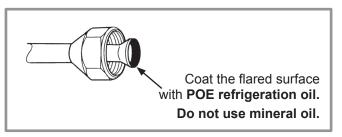

• Brazing on the refrigeration circuit (if necessary)

- Silver brazing (40% minimum recommended).
- Brazing only under dry nitrogen internal flux.
- To eliminate any filings in the pipes, use dry nitrogen to avoid introducing any humidity that may adversely affect the appliances operation. In general, take every precaution to avoid humidity penetrating into the appliance.
- · Proceed to insulate the gas and liquid pipes to avoid any condensation. Use pipe insulators resistant to temperatures over 90°C. In addition if the humidity level in areas where the refrigeration pipes are installed is expected to exceed 70%, protect the pipes with pipe insulators. Use an insulating material thicker than 15mm if the humidity level is 70~80%, and an insulating material thicker than 20mm if the humidity exceeds 80%. If the recommended thicknesses are not observed under the conditions described above. condensation will form on the surface of the insulation material. Lastly, take care to use pipe insulators whose thermal conductivity is 0.045 W/mK or less when the temperature is 20°C. The insulation must be impermeable to resist the passage of steam during the defrosting cycles (fibreglass wool is prohibited).

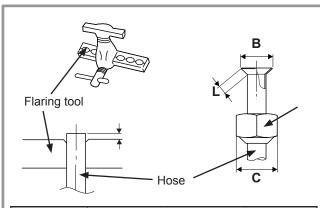

a Hoos	diı	nensions in mm		
ø Hose	L B %-0,4 C			
9,52 (3/8")	2,5 to 2,7	13,2	22	
15,88 (5/8")	2,9 to 3,1	19,7	29	

figure 17 - Flaring for flare connections

2.6.2 Refrigeration connections

The outdoor unit must be connected to the hydraulic unit **only** with new copper pipes and connections (refrigeration quality), insulated separately.

Comply with the pipe diameters and the permitted pipe lengths (figure 19).

The minimum length of the refrigeration connections is 5 m for correct operation.


The appliance will be excluded from guarantee if it is used with refrigeration connections less than 5 m long.

If the refrigeration connections are exposed to weathering or UV- and the insulation is not strong, it is necessary to provide protection.

Manipulate the pipes and take them through walls with protective plugs in place.

2.6.3 Creating the flarings

- Cut the pipe to an appropriate length with a pipe-cutter without deforming it.
- Carefully deburr it, holding the pipe towards the bottom to avoid introducing filings into the pipe.
- Remove the flared connection nut situated on the valve to be connected and slip the pipe into the nut.
- Proceed to flare, letting the pipe overflow the flaring tool.
- After flaring, check the condition of the working radius (L). This must not show any scratch or trace of any fracturing. Also check the dimension (B).

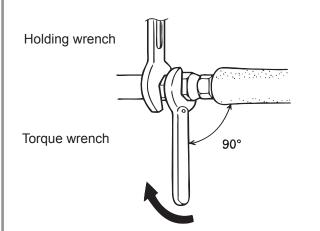

Designation	Tightening torque
Flare nut 9,52 mm (3/8")	32 to 42 Nm
Flare nut 15,88 mm (5/8")	63 to 77 Nm
Plug (A) 3/8"	20 to 25 Nm
Plug (A) 5/8"	30 to 35 Nm
Plug (B) 3/8", 5/8"	10 to 12 Nm

figure 18 - Tightening torque

2.6.4 Shaping the refrigeration pipes

The refrigeration pipes must be shaped only on a bending machine or with a bending spring in order to avoid any risk of crushing or breaking them.

Warning!

- Remove the insulation material locally to bend the pipes.
- Do not bend the copper to any angle over 90°.
- Never bend pipes more than 3 times in the same position otherwise traces of fracturing may appear (from strain-hardening the metal).

2.6.5 Connecting the flared connections


Connections must be made the day of the filling the installation with gas (see para. 2.7, page 19).

- Take particular care positioning the tube opposite its connector so as not to risk damaging the threads. A carefully aligned connector can be fitted easily by hand without much force being required.
- The refrigeration circuit is very sensitive to dust and humidity: check that the area around the connection is clean and dry before removing the plugs protecting the refrigeration connectors.
- Remove the plugs from the pipes and the refrigeration connections.
- Present the pipe to the flared connector and screw the nut by hand while holding the connector with a wrench until contact.
- Comply with the indicated tightening torques.

HP model		High Power single phase & 3-phase		
		gas	fluid	
Outdoor unit connections		5/8"	3/8"	
-	Diameter	(D1) 5/8"	(D2) 3/8"	
	Minimum length (L)	5		
Refrigeration connections	Maximum length* (L)	1	5	
	Maximum length** (L)	2	0	
Maxi level difference**		15		
Hydraulic unit conne	ections	5/8" 3/8"		

^{*:} without additional charge of R410A.

^{**:} Taking into account the possible additional load of refrigerant R410A (see para. 2.7.3, page 21).

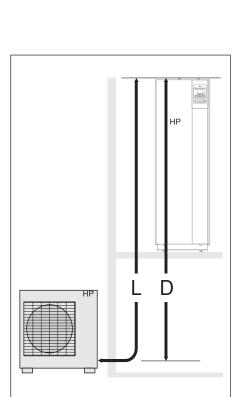

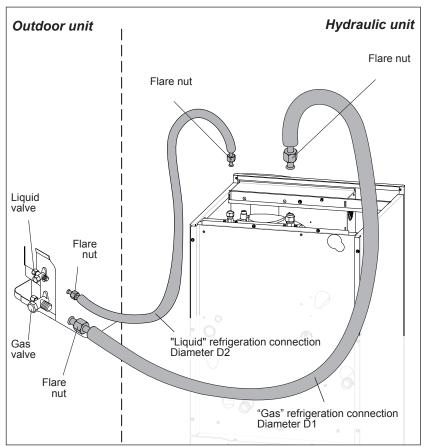


figure 19 - Connecting the flared connections (Pipe diameters and permissible lengths)

2.7 Filling the installation with gas

- This operation is reserved for installers familiar with the legislation for handling refrigerants.
- Creating a vacuum with a vacuum pump is essential (see ANNEX 1).
- Never use equipment used beforehand with any refrigerant other than a HFC.
- Remove the refrigerant circuit caps only when building the refrigerant connections.
- Unfavorables conditions:
 - If the outdoor temperature is between +5 and +10 °C, it's obliged to have a vacuum gauge for validate the pump down operation and use method 3 empty. (see ANNEX 2).
 - If the outdoor temperature is below +5 °C, it's strongly not recommended to do the filling the installation with gas.

ANNEX 1

Method for calibration and control of a vacuum pump

- Check the oil level of the vacuum pump.
- Connect the vacuum pump with the vacuum gauge according to the scheme.
- Clogged flexible hose Vacuum pump
- Pump down during 3 minutes.
- After 3 minutes, the pump reaches its threshold value and the vacuum gauge needle does not move.
- Compare the obtained pressure with the value of the table. Depending on the temperature, this pressure must be less than the value indicated in the table.
- => If it's not the case, replace the gasket, flexible hose or the pump.

T °C	5°C <t<10°c< th=""><th>10°C<t<15°c< th=""><th>15°C < T</th></t<15°c<></th></t<10°c<>	10°C <t<15°c< th=""><th>15°C < T</th></t<15°c<>	15°C < T
Pmax			
- bar	0.009	0.015	0.020
- mbar	9	15	20

2.7.1 Commissioning procedure

· Check before connecting


"Gas" connection control (large diameter).

- Connect the "Gas" connection to the outdoor unit.
- Blow dry nitrogen into the "Gas" connection and observe this end:
- · If water or impurities emerge, use a new refrigerant connection.
- Otherwise, perform the flare and connect immediately the refrigerant connection to the hydraulic unit.


ANNEX 2

Method 3 empty


- Connect the high pressure hose to the Manifold, ("Gas" connection). A valve must be mounted on the flexible hose from the vacuum pump in order to isolate it.
- a) Pump down to the desired value (see table ANNEX 1),

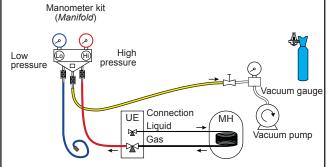

b) Stop the vacuum pump, close the valve end of the service hose (yellow). Connect the hose to the expansion valve of the nitrogen bottle, inject 2 bars, close the flexible hose valve,

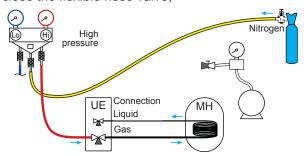

c) Reconnect the flexible hose to the vacuum pump, turn on and gradually open the hose valve.

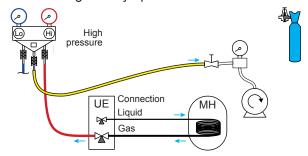

d) Repeat this at least three times.

end (Outdoor unit side).


Reminder: It's strictly forbidden to perform these operations with refrigerant.

"Liquid" connection control (small diameter).


- Connect the "Liquid" connection to the outdoor unit.
- Blow dry nitrogen into "Gas" connection condensor
 "Liquid" connection assembly and Observe this
- · If water or impurities emerge, use a new refrigerant connection.
- Otherwise, perform the flare and connect immediately the refrigerant connection to the outdoor unit.

First seal test


- Remove the protective plugs (**B**) from the charging hole (*Schrader*) in the "Gas" valve (large diameter).
- Connect the high pressure hose to the Manifold.
- Connect the bottle of nitrogen to the *Manifold* (Use only dry nitrogen type U).
- Pressurize the refrigerant circuit with nitrogen (10 bar maximum) ("Gas" connection condensor "Liquid" connection assembly).
- Let the circuit under pressure for 30 minutes.

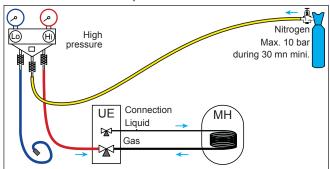

 Search for leaks with a leak detector product, repair and repeat the test.

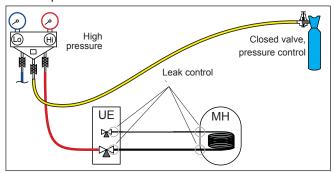

- When the pressure is stable and leakage is excluded, drain nitrogen letting a pressure above atmospheric pressure (0,2 to 0,4 bar).
- Creating a vacuum and filling the refrigeration connections with gas
- If necessary, calibrate the Manifold gauge to 0 bar.
 Adjust the vacuum gauge to the atmospheric pressure (around 1013 mbar).
- Connect the vacuum pump to the *Manifold*. Connect a vacuum gauge if the vacuum pump is not equipped.

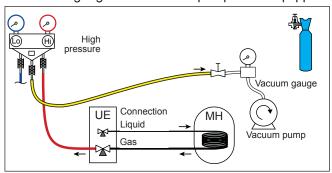

 Create a vacuum until the residual pressure* in the circuit falls below the value given in the following table.
 (* measured with the vacuum gauge).

T °C	5°C <t<10°c< th=""><th>10°C<t<15°c< th=""><th>15°C < T</th></t<15°c<></th></t<10°c<>	10°C <t<15°c< th=""><th>15°C < T</th></t<15°c<>	15°C < T
Pmax - bar - mbar	0.009	0.015	0.020

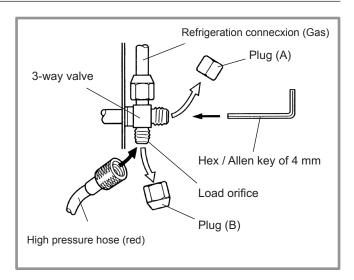


figure 20 - Connexion of the hose on the "Gaz" valve

- Let the pump continue to operate for another 30 minutes minimum after reaching the vacuum.
- Close the *Manifold* valve and then stop the vacuum pump without disconnecting any of the hoses in place.
 - If the outdoor temperature is between +5 and +10 °C, use method 3 empty (see ANNEX 2).
- Remove the access plugs (A) from the valve controls.
- If an additional charge is requires, add the additional charge before filling the hydraulic unit with gas. Please refer to the para. "Additional charge", page 21
- First of all fully open the "Liquid" valve (small) and then the "Gaz" valve (large) using a hex key (counterclockwise direction) without forcing excessively against the stop.
- Remove the hose rapidly to the *Manifold*.
- Refit the 2 original caps (be sure they are clean) and tighten them to the recommended tightening torque (figure 18, page 17). The sealing is performed in the caps only metal to metal.

The outdoor unit does not contain any additional refrigerant, enabling the installation to be purged. Flushing is strictly forbidden.

2.7.2 Sealing test

The sealing test must be performed with a certified gas detector (sensitivity 5g/year).

Once the refrigeration circuit has been gassed as described above, check that all the refrigeration connectors are gas-tigh (4 connectors). If the flarings have been made correctly, there should be no leaks. Eventually, check the tightness of the refrigerant valves caps.

- Bring the gas into the outdoor unit (pump down). The pressure should not drop below atmospheric pressure (0 bar to read on *Manifold*) so as not to contaminate the recovered gas with air or moisture.
- Make the connection again.
- Repeat the commissioning procedure.

2.7.3 Additional charge

	50 g of R410A per additional meter		
Length of the connections	15 m	20 m max.	
Additional charge	none	250 g	

The charge in the outdoor units corresponds to the maximum distances between the outdoor unit and the hydraulic unit defined in page 18. If the distances are greater, an additional charge of R410A is required. The additional charge depends on the distance between the outdoor unit and the hydraulic unit for each type of appliance. The additional charge of R410A must necessarily be made by an approved refrigeration engineer.

• Example of additional charge :

An outdoor unit 17 m away from the hydraulic unit will require an additional charge of :

Additional charge = $(17 - 15) \times 50 = 100 \text{ g}$.

The charge must be introduced after creating the vacuum and before the hydraulic unit is filled with gas, as follows:

- Disconnect the vacuum pump (yellow hose) and connect a bottle of R410A instead in the liquid extraction position.
- Open the bottle's valve.
- Bleed the yellow hose by loosening it slightly on the *Manifold* side.
- Place the bottle on scales with a minimum accuracy of 10 g. Note the weight.
- Carefully open the blue valve slightly and check the value shown on the scales.
- As soon as the value displayed has dropped by the value for the calculated additional charge, close the bottle and disconnect it.
- Then rapidly disconnect the hose connected to the appliance.
- Proceed to fill the hydraulic unit with gas.

Warning

- · Only use R410A!
- Only use tools suitable for R410A (set of manometers).
- Always charge in the fluid phase.
- Never exceed the length or the maximum difference in level.

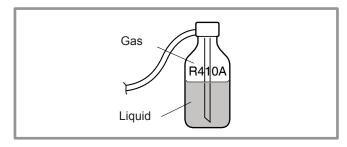


figure 21 - "Gas" bottle R410A

2.7.4 Pump down operation (Refrigerant collecting operation) outdoor unit

Perform the following procedures to collect the refrigerant.

- **1** Turn OFF the start/stop switch (ref. **3**, figure 7, page 10).
- **2** Remove the front panel. Then turn ON the DIP SW 1 on the interface card.
- 3- Turn ON the start/stop switch.
 (Green and Red LED on the board start flashing;
 1 sec. on / 1 sec. off repeated).
- 4- The outdoor unit begins cooling operation about 3 minutes after switching ON.
 Close the "Liquid" valve on the outdoor unit 1 minute after operation starts.
- 5- Close the "Gas" valve on the outdoor unit
 1-2 minutes after closing the "Liquid" valve, while the outdoor unit keeps running.
- 6- Disconnect the power supply.

Remarks:

- Make sure to turn OFF the start/stop switch before touching DIP SW.
- The pump down operation cannot be activated even if DIP SW is changed while heat pump's power is on.
- Do not forget to turn back DIP SW 1 on the interface card to OFF, after the pump down operation has been completed.
- When the pump down operation is repeated, temporarily turn OFF the start/stop switch after opening the closed valves (both "Liquid" and "Gas").
- Then turn ON the start/stop switch again after 2-3 minutes and perform the pump down operation.

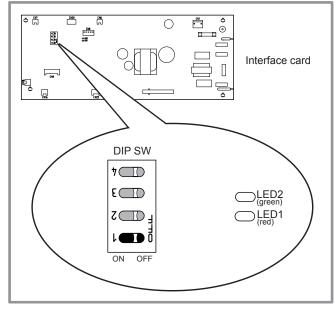


figure 22 - Location of DIP switches and diodes on the hydraulic unit interface card

2.8 Hydraulic connecting

2.8.1 General

The connection must comply with good trade practice according to local building regulations.

The heating circulating pump is built into the hydraulic unit. Connect the central heating pipes to the appliance, complying with the direction of circulation.

The pipe between the heat pump and the heat collector must be at least one inch in diameter (26x34 mm).

Calculate the diameter of the pipes according to the flow rates and the lengths of the hydraulic systems.

Tightening torque: 15 to 35 Nm.

Use union connectors to facilitate removing the hydraulic unit.

Preferentially use connection hoses to avoid transmitting noise and vibrations to the building.

Connect the drains from the drain valve and the safety valve to the main sewer system.

Verify the correct functioning of the expansion system. Control the vessel pressure (precharge 1 bar) and the safety valve setting.

Reminder: Seal everything when fitting in accordance with prevailing trade practice for plumbing work:

- Use suitable seals (fibre seals, o-rings).
- Use Teflon tape or hemp.
- Use sealing paste (synthetic depending on the case).

The use of glycol is not necessary. If you are using a glycol/water mix, provide for an annual check on the quantity of glycol. Use monopropylene glycol only. **Never use monoethylene glycol.**

- In certain installations, the presence of different metals can cause corrosion problems; the formation of metal particles and sludge in the hydraulic circuit is then seen.
- In this case, it is advisable to use a corrosion inhibitor in the proportions indicated by its manufacturer.
- Please refer to the chapter "Treatment of domestic and heating water" in our price catalogue.
 - It is also necessary to ensure that the treated water does not become aggressive.

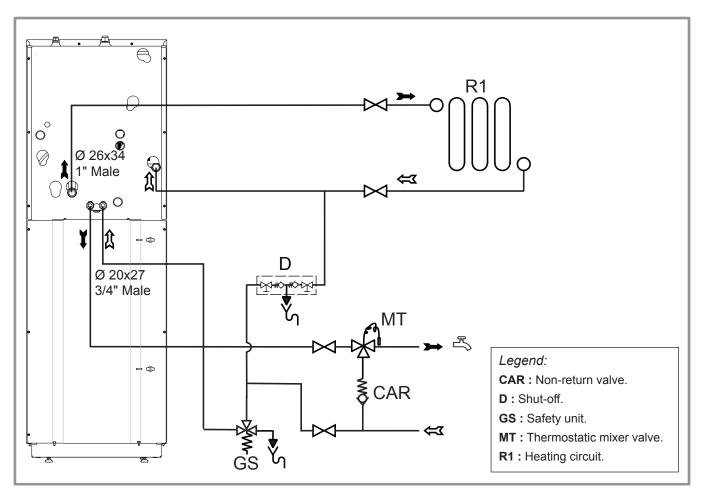


figure 23 - Overall hydraulic layout

2.8.2 Connecting to the DHW circuit

Install dielectric fittings and DHW pipes on the tank (see figure 24). Insulate DHW pipes with included insulation

Be sure to put the DHW sensor at the bottom of the thermowell DHW.

On the cold water inlet, place a safety unit rated (from 7 to 10 bars - required by local regulations) and connected to a drain pipe leading to the sewers. Operate the safety unit according to manufacturer's specifications.

Connect the safety valve evacuation to the drain.

We recommend that a thermostatic mixer be placed on the hot water outlet.

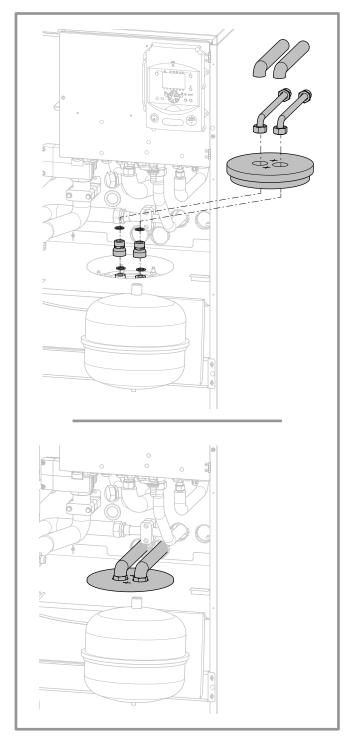


figure 24 - DHW pipes mounting

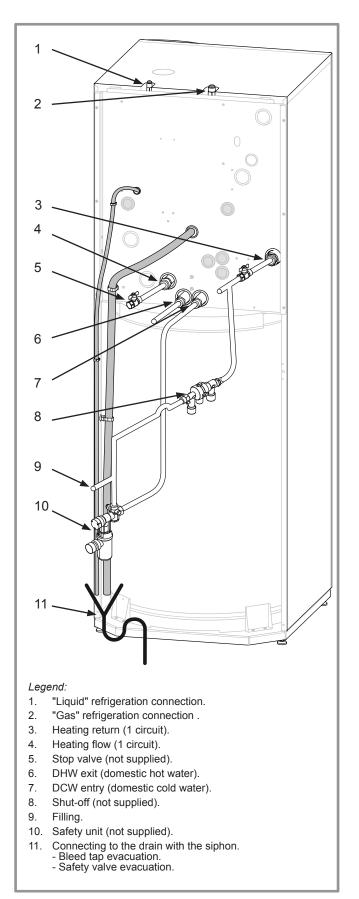


figure 25 - Connections

2.8.3 Rinsing out the installation

Before connecting the hydraulic unit to the installation, rinse out the heating system correctly to eliminate any particles that may affect the appliance's correct operation.

Do not use solvents or aromatic hydrocarbons (petrol, paraffin, etc.).

In the case of an old installation, provide a sufficiently large decanting pot with a drain on the return from the boiler and at the lowest point in the system in order to collect and remove the impurities.

Add an alkaline product to the water and a dispersant. Rinse the installation several times before filling it definitively.

2.8.4 Filling and purging the installation

Check the pipe fixings, the tightness of the connectors and the stability of the appliance.

Check the direction in which the water is circulating and that all the valves open.

Proceed to fill the installation.

Do not operate the circulating pump while filling. Open all the drain valves in the installation and the bleeder valve for the hydraulic unit (**P**) to remove the air contained in the conduits.

Close the drain and bleeder valves and add water until the pressure in the hydraulic circuit reaches 1 bars.

Check that the hydraulic circuit has been purged correctly. Check there is not a leak.

After the "Start-up" stage (see page 34), once the machine has started, purge the hydraulic unit again (2 litres of water).

Precise filling pressure is determined by the manometric height of the installation.

2.8.5 Connecting the Fan convector circuit

Heat pump > 11 kW: It must be installed on this circuit a buffer tank (minimum capacity: 50 liters).

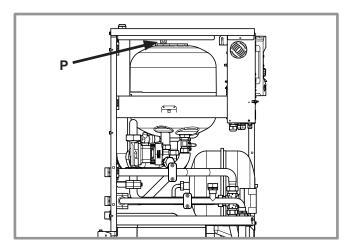


figure 26 - Hydraulic module bleeder valve

2.9 Thermal insulation

Install the thermal insulation kit on the metal parts to avoid the inconvenient effects of condensation.

- 1 Install the straight insulating sleeves on the exchanger's heating fittings.
- 2 Install the conical insulating sleeves on the exchanger's refrigeration fittings.
- **3** Place the insulating adhesive tape on **all** the piping fittings.

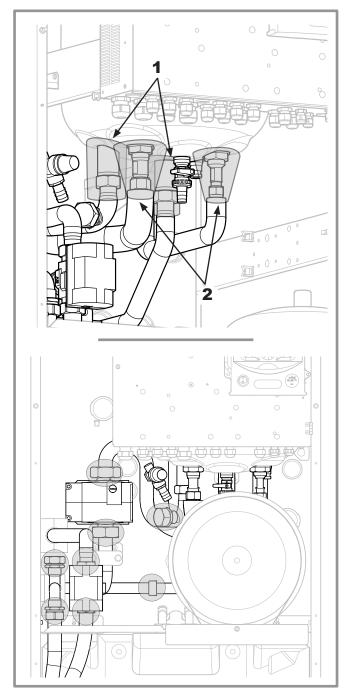


figure 27 - Thermal insulation

2.10 Heating circulation pump speed settings

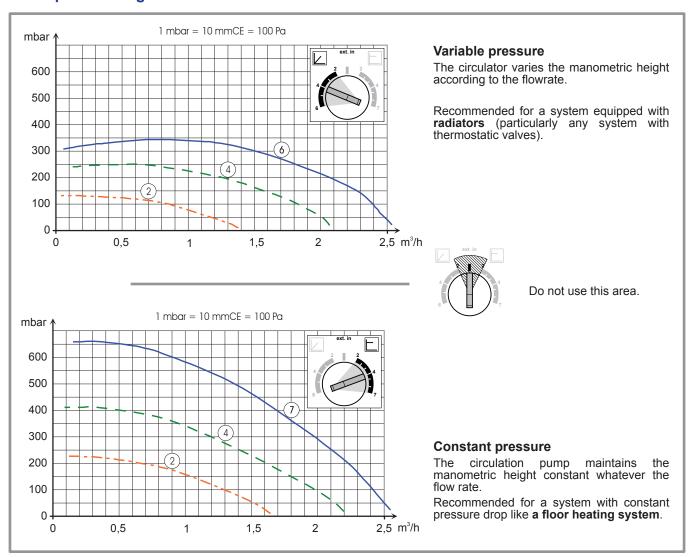


figure 28 - Hydraulic pressures and flow rates available

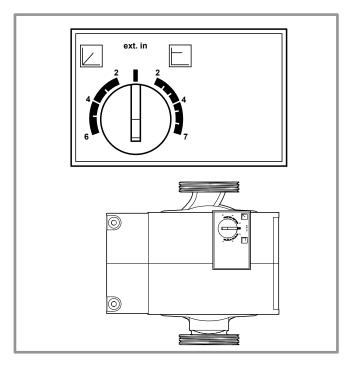


figure 29 - Pump dial

Circulation pump sticking or blocked:

If the motor is blocked, a start cycle is launched.

If the motor remains blocked it will be permanently stopped.

Cut off the electricity supply from the circulation pump for 30 seconds in order to release and authorise another start cycle.

2.11 Electrical connections

Ensure that the general electrical power supply has been cut off before starting any repair work.

2.11.1 Characteristic of the electrical supply

The electrical installation must be conducted in accordance with the prevailing regulations.

The electrical connections must only be made when all the other fitting operations have been completed (fixing, assembly, etc.).

The contract concluded with the energy provider must be sufficient not only to cover the heat pump's power but also the combined sum of all the appliances likely to be operating at the same time. When the power is too low, check with your energy provider the value subscribed to in your contract.

Never use a socket for the power supply.

The heat pump must be supplied with power by special protected leads from the electric panel via 2-pole circuit breakers specially dedicated to the heat pump, Curve D for the outdoor unit, curve C for the electrical heating and domestic water back-ups (see tables on page 27).

The electrical installation must necessarily be equipped with a 30mA differential protection.

This appliance is designed to operate under a nominal voltage of 230 V or 400 V +/- 10%, 50 Hz (according to model).

2.11.2 General remarks on electrical connections

It is essential to maintain the live-neutral polarity when making the electrical connections.

Tighten the screws on the terminal blocks perfectly. Unsufficient tightening can cause overheating, leading to breakdown or even a fire.

Tighten the cables using the cable glands to prevent the conductors from disconnecting accidentally.

Connection to Earth and Earth bonding continuity are essential.

Connecting to screw terminals

Rigid wires (A)


Rigid wires are always preferable for fixed installations, particularly in a building.

- Always select a wire that complies with the prevailing standards.
- Strip away around 25 mm from the end of the wire.
- With round end pliers, form a loop with a diameter corresponding to the tightening screws on the terminal.
- Tighten the terminal screw firmly onto the loop created.

Flexible wires (B)


H07RNF type (or superior quality) flexible wire can be used with certain precautions:

- Strip away around 10 mm from the end of the wire.
- With tightening pliers, fit a round tag with a diameter corresponding to the terminal screw's diameter on the end of the wire.
- Tighten the tag firmly onto the terminal with a screwdriver. We strongly advise against using flexible wires without round tags.
- Always protect the cables when passing them through cable clamps with PVC protective conduit 0.5 to 1 mm thick.

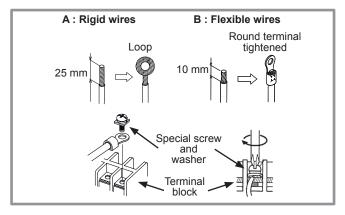

Connecting to regulation cards

 - Remove the corresponding connector and make the connection.




Connecting to spring terminals

Rigid wires

- Strip away around 10 mm from the end of the wire.
- Slide the wire into the opening provided for this purpose.
- Push the spring with a screwdriver so that the wire enters the cage.
- Remove the screwdriver and then check that the wire is jammed in the cage by pulling on it.

Flexible wires

- Use the ends and proceed as before.

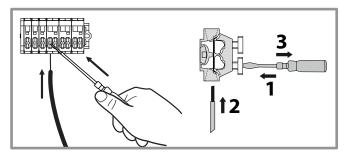

2.11.3 Overview of all the electrical connections

The wiring diagram for the hydraulic unit is shown in detail on figure 50, page 56.

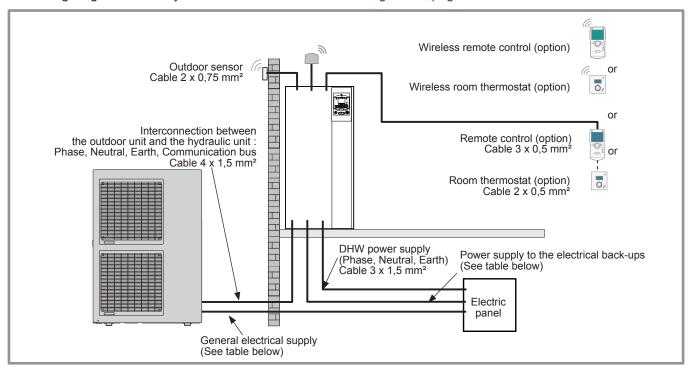


figure 30 - Overall layout of the electrical connections for a simple installation (1 heating circuit)

2.11.4 Cable section and protection rating

The cable sections are given for information purposes only and do not exempt the installer from checking that these sections correspond to the requirements and comply with the prevailing standards.

• Power supply to outdoor unit:

Heat pump (sing	gle phase)	Electricity supply 230 V - 50 Hz		
Model Maxi. power absorbed		Cable connection (phase, neutral, earth)	Curve D circuit breaker size	
High Power 11 single phase	5060 W	3 x 6 mm²	32 A	
High Power 14 single phase	5750 W	3 X 0 111111		
Heat pump (3-phase)		Electricity supply 400 V - 50 Hz		
Model	Model Maxi. power absorbed		Curve D circuit breaker size	
High Power 11 3-phase	5865 W			
High Power 14 3-phase	6555 W	5 x 2,5 mm²	20 A	
High Power 16 3-phase	7245 W			

- Interconnection between the outdoor unit and the hydraulic unit: The hydraulic unit is powered by the outdoor unit by means of a cable with 4 x 1,5 mm² (phase, neutral, earth, communication bus).
- **Electricity supply DHW:** The DHW section is powered directly via a 3 x 1,5 mm² cable (phase, neutral, earth). Protection by circuit breaker (16 A, curve C).
- Power supply to the electrical back-ups:

The hydraulic unit contains two stages of electrical back-ups installed in a heat exchange tank.

Heat pump (HP)	Electrical back-ups		Power supply to the	e electrical back-ups
Model	Power Nominal current		Cable connection	Curve C circuit breaker size
High Power single phase	2 x 3 kW	26,1 A	3 x 6 mm²	32 A
High Power 3-phase	9 kW	3 x 13 A	4 x 2,5 mm ²	20 A

Figure 2 Ensure that the general electrical power supply has been cut off before starting any repair work.

2.11.5 Electrical connections on the single phase outdoor unit side

Access to the connection terminals:

- Remove the front panel. Remove the screws and the front panel.

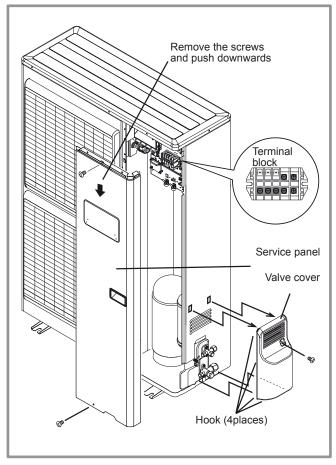


figure 31 - Access to sinlge phase outdoor unit's terminal block

- Make the connections in accordance with the diagram figure 32 and figure 41, page 33.

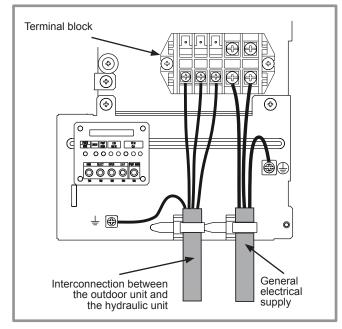


figure 32 - Connections to sinlge phase outdoor unit's terminal block

- Use cable clamps to prevent the conductors from being disconnected accidentally.
- Use the mounting plate to hold the cables against the insulating plate. (figure 33).

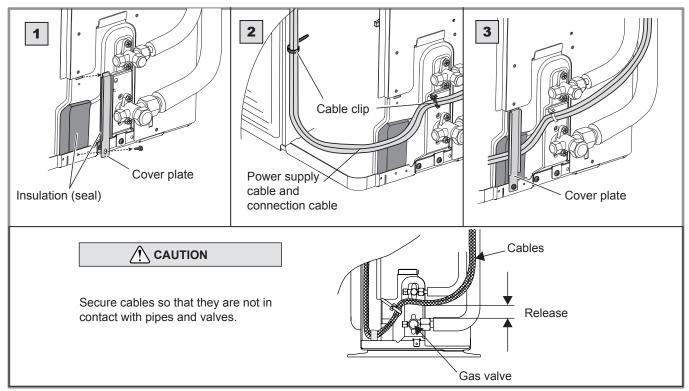


figure 33 - Finalisation of connection to single phase outdoor unit

2.11.6 Electrical connections on the 3- phase outdoor unit side

Access to the connection terminals.

- Remove the front panel. Remove the screws and the front panel.

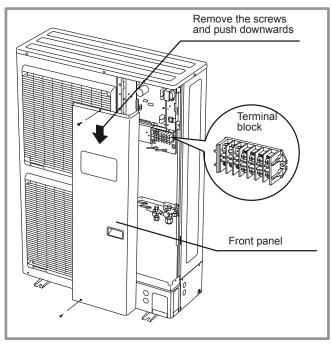


figure 34 - Access to 3-phase outdoor unit's terminal block

- Make the connections in accordance with the diagram figure 37, page 26.

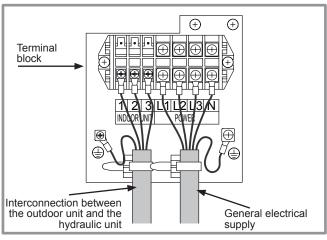


figure 35 - Connections to 3-phase outdoor unit's terminal block

- Use cable clamps to prevent the conductors from being disconnected accidentally.
- Fill in the space where the cables enter the outdoor unit with the insulating plate.

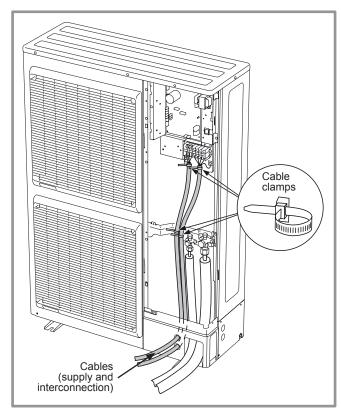


figure 36 - Finalisation of connection to 3-phase outdoor unit

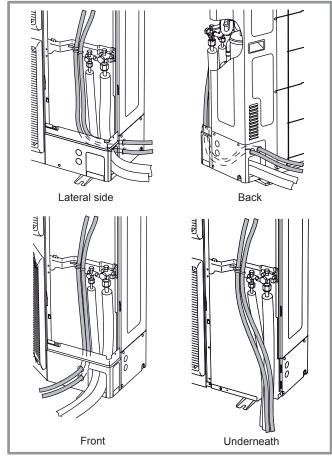


figure 37 - Location of electrical cables and refrigeration connections to 3-phase outdoor unit

2.11.7 Electrical connections on the hydraulic unit side

Access to the connection terminals:

- Remove the front panel.
- Open the power control box.
- Make the connections in accordance with the diagram (figure 41, page 33).

Do not place the sensor lines and the sector supply lines in parallel in order to avoid interferences due to voltage points in the sector supply.

Ensure that all the electrical cables are housed in the spaces provided for this purpose.

figure 38 - Location of electrical cables at the rear of the hydraulic unit

Interconnection between the outdoor unit and the hydraulic unit

Comply with the correspondence between the markings on the hydraulic unit's terminals and those on the outdoor unit when connecting the interconnection cables.

A connection error could cause the destruction of one or other of the units.

• Electrical back-ups

If the heat pump is not installed with a boiler connection:

- Connect the electrical supply for the back-ups to the electrical panel.
- Boiler connection (option)
 - If the boiler connection option is used, the electric boost option must not be connected.
- Please refer to the instructions supplied with the boiler connection kit.
- Please refer to the instructions supplied with the boiler.
- Second heating circuit
- Please refer to the instructions supplied with the second circuit kit or/and Regulation extension kit.
- DHW tank with electrical back-up heating
- Connect the electrical supply for the DHW tank to the electrical panel.

• Contract with the power provider

The heat pump's operation can be controlled to suit special contracts (e.g. off-peak, day/night). In particular, domestic hot water (DHW) at Nominal temperature will be produced during the off-peak hours when electricity is cheaper.

- Connect the "Power Provider" contact to input EX2.
- Set the parameter (1620) to "Off-peak hours".
- 230V on input EX2 = "Peak hours" information activated (Base setting / Line modification possible 5983, Configuration menu).

Power shedding or EJP (peak day removal)

Power limitation is intended to reduce electrical consumption when this is too high compared to the contract with the power provider.

- Connect the power limiting device to input EX1, the back-ups for the heat pump and the DHW stop in the event of over-consumption by the dwelling.
- 230 V on input EX1 = power limitation in progress (Base setting / Line modification possible 5981, Configuration menu) (Operating line 2920).

· External faults the heat pump

Any component of carryforward of information (thermostat, pressure switch, etc.) may signal an external problem and stop the heat pump.

- Connect the external component to input EX3.
- 230 V on input EX3 = stoppage of heat pump (the system displays Error 369).
- In the case of a heated floor, connect the floor heating safety device into the connector of the floor heating pump (X12 or X110).

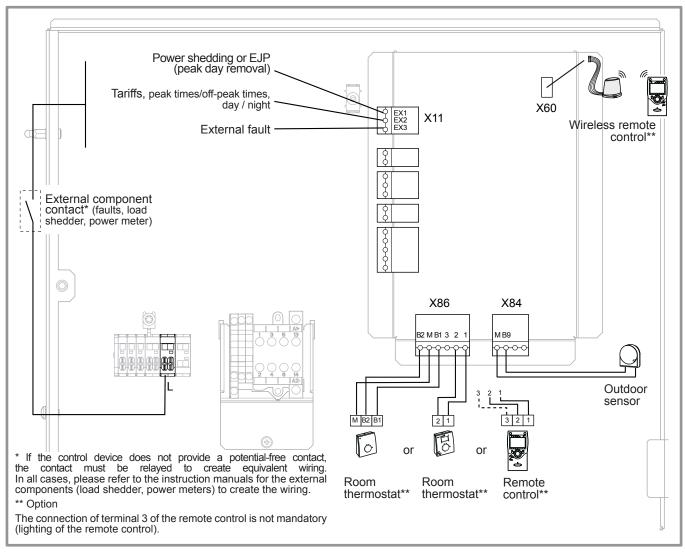


figure 39 - Connections to the heat pump regulator (accessories and options)

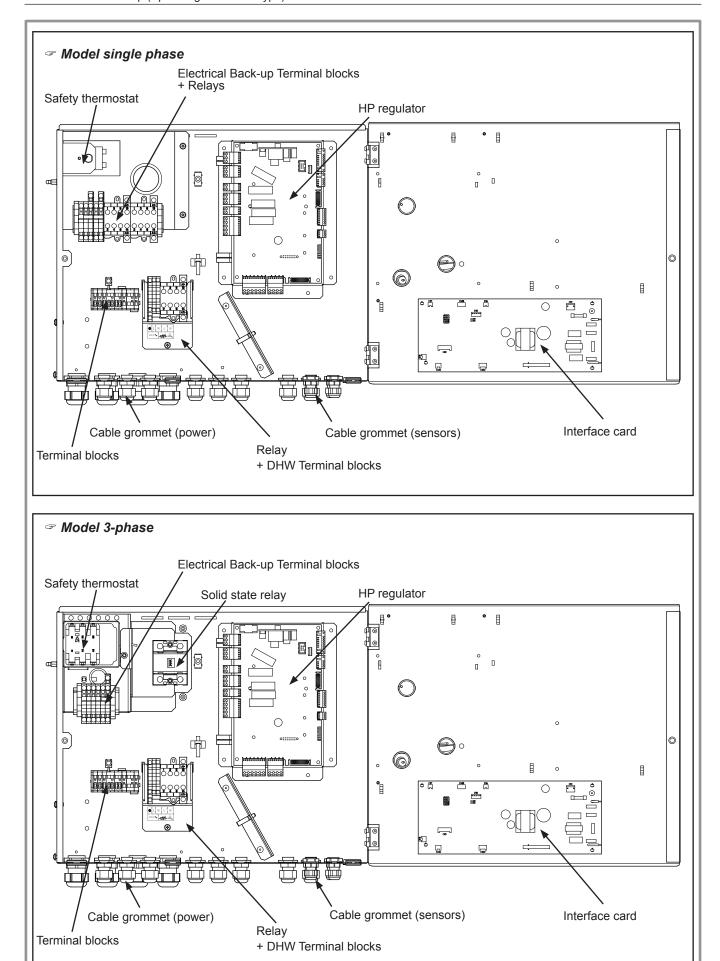
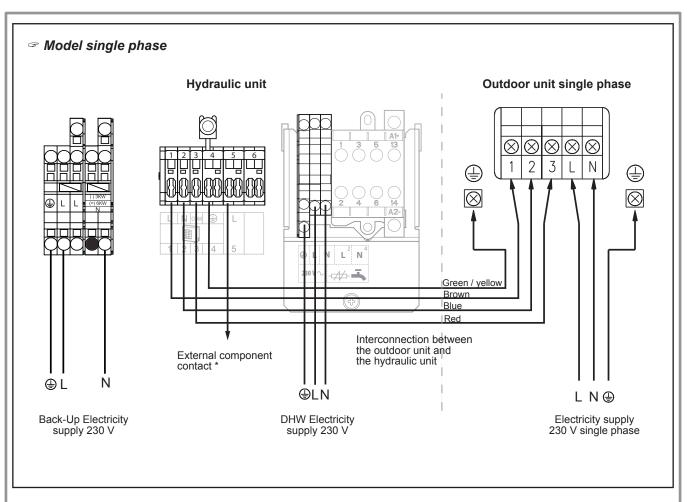


figure 40 - Access to hydraulic model electric box and description



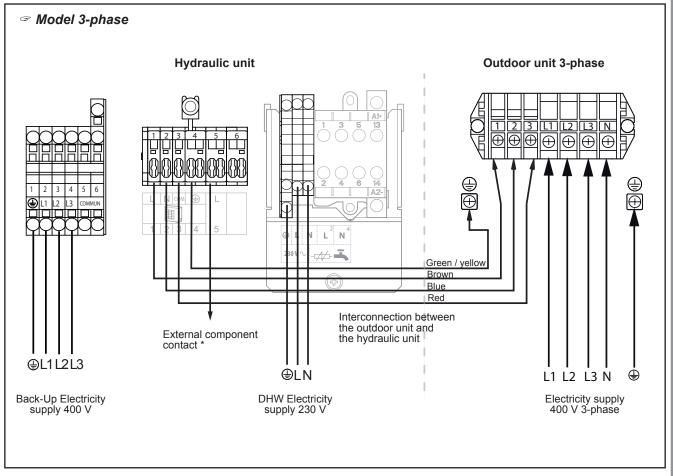


figure 41 - Connection to terminal block and power relays

2.12 Outdoor sensor

The outdoor sensor is required for the heat pump to operate correctly.

Consult the fitting instructions on the packaging.

Place the sensor on the coldest part, generally the northern or north-eastern side.

In any case, it must not be exposed to the morning sun. It must be installed so as to be easily accessible but at least 2,5 m from the floor.

It is essential that it avoid any sources of heat such as flues, the upper parts of doors and windows, proximity to extraction vents, the underneath of balconies and under-eave areas, which would isolate the sensor from variations in the outdoor air temperature.

- Connect the outdoor sensor to the connector **X84** (terminals **M** and **B9**) on the heat pump control board.

2.13 Room thermostat and/or remote control

The room thermostat (remote control) is optional.

Consult the fitting instructions on the packaging.

The sensor must be installed in the living room area on a very uncluttered wall. It must be installed so as to be easily accessible.

Avoid direct sources of heat (chimney/flue, television, cooking hobs), draughty areas (ventilation, door, etc.).

Air leaks in the seals in the constructions are often translated into cold air blowing through the electrical conduits. Lag the electrical conduits if there is a cold draught on the back of the IR sensor.

2.13.1 Installing a room sensor

Room thermostat

- Connect the sensor to the **X86** connector of the heat pump's regulator board using the connector provided (terminals **1**, **2**).

Wireles room thermostat

 Connect the wireless room thermostat to the connector X60.

2.13.2 Installing a remote control

Remote control

- Connect the remote control to the **X86** connector of the heat pump's regulator board using the connector provided (terminals **1**, **2** and **3**).

Wireles remote control

 Connect the wireless remote control to the connector X60.

2.14 Commissioning

- Close the installation's main circuit breaker.

On first commissioning (or in winter), in order to allow the compressor to pre-heat, engage the installation's main circuit breaker (power supply to the outdoor unit) some hours before starting up the tests.

- Engage the start/stop switch.

To ensure that inputs EX1, EX2 and EX3 operate correctly: Check that the live-neutral polarity of the electrical supply is correct.

When the power is switched on and every time that the ON/OFF button is switched off and then switched on again, the outdoor unit will take approximately 4 minutes to start up, even if the setting is requesting heating.

The display can show error 370 when the appliance (re)starts. Do not be concerned, the communication between the outdoor and hydraulic unit will re-establish itself in a few moments.

During the regulator initialisation phase, the display shows all the symbols and then "Data, update" and then "State heat pump".

- Make all the specific adjustments to the setting. (Installation configuration):

- Press D.

- Hold down the key of for 3s and select the level of access used with the aid of the knob of.

- Confirm with the key

- Parameter the heat pump's setting (Consult the settings' list page 35).

On commissioning (or the case of error 10), the electrical back-up heaters are liable to start up even if the outdoor temperature at the time is above the heaters' trigger temperature.

The regulating system uses an average initial outdoor temperature of 0°C and requires some time to update this temperature.

To avoid this situation, the sensor must be connected correctly. Re-initialise parameter 8703 (commissioning level, consumer diagnostic menu).

2.15 Configuring room thermostat (wireless)

To configure the room thermostat and connect it to the appropriate heating zone:

- Hold down the presence key for more than 3 seconds. The room thermostat displays RU and a number flashes.
- Turn the wheel to choose the zone (1, 2).
- If the installation is fitted with 2 room thermostats.
- First connect one room thermostat and configure it in zone 2.
- Then connect the other room thermostat and configure it as default in zone 1.
- Hold down the presence key; the room thermostat displays P1 and a flashing number.

 1: Automatic recording: a correction of the setting with the button is adopted without any particular confirmation (timeout) or by pressing the mode key.

 2: Recording with confirmation: a correction of the setting with the button is not adopted until the mode key is pressed.
- Press the presence key again; the room thermostat displays P2 and a flashing number.
- 0: OFF: all the operating elements are engaged.
- 1: ON: the following operating elements are locked:
 - Switching over the heating circuit's operating mode,
 - Adjusting the comfort setting,
 - Changing the operating level.

The room thermostat displays OFF for 3 seconds when a locked button is pressed.

2.16 Configuring remote control (wireless)

During commissioning, after an initialisation period of approx. 3 minutes, the user's language must be set:

- Press .
- Choose menu "Operator section".
- Choose language.
- Select the language (**English**, Deutsch, Français, Italiano, Nederlands, Español, Português, Dansk...).

In the case of 2 heating circuits

- Choose the allocation of the remote control (room appliance 1 or 2...) line **40*** (see page 40).
- According to the allocation selected check and, if necessary, modify the settings for lines **42***, **44***, **48*** (see page 40).

Line		Function	Setting range or display	Setting increment	Basic setting
40	1	Use as	Room appliance 1, 2, P, User interface 1, 2, P, Service appliance		Room appliance 1
		This line regulates the use of the room control unit. Depending on how it is used, other settings will be necessary (lines 42, 44, 48).			
42	ı	Appliance allocation 1	Heating circuit 1, Heating circuit 1 & 2, Heating circuit 1 & P, All the heating circuits		Heating circuit 1
44	I	Operation HC2 (command HC2)	Commonly with HC1, Independent		Commonly with HC1
	This function enables you to choose whether you wish the room thermostat (as an option) to a single zone.			ption) to act on b	ooth zones or just
48	ı	Occupancy control switch function	Without, Heating circuit 1, Heating circuit 2, Common		

^{*} These parameter lines are only accessible from the remote control.

3 Regulation system

3.1 User interface, Remote control (option) and Room thermostat (option)

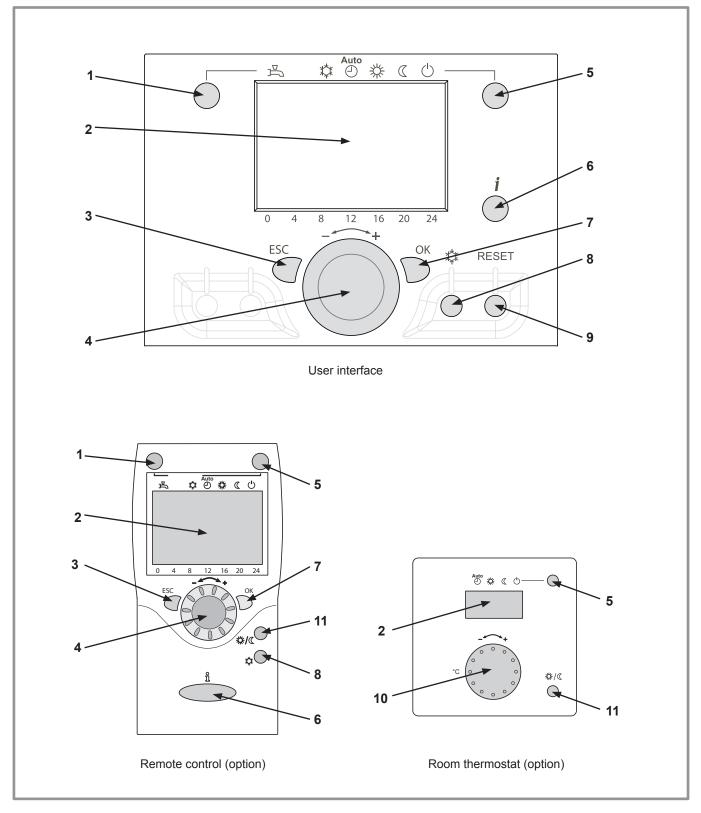


figure 42 -

Ref.	Function	- Definitions
1	Selecting of the DHW operating mode	- On: Production of DHW according to the time program.
	(Domestic hot water)	- Off : Preparing the domestic hot water for stopping with the anti-frost function active.
	— On □	- Manual start button : Hold down the DHW key for 3 seconds. Switch from "reduced" to "comfort" until the next time the ECS timer switches over.
	—— Off	
2	Digital display	- Operating control. Readout of the current temperature, of the heating mode and of any faults $\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$
		- View the settings.
3	Exit "ESC"	- Quit the menu.
4	Navigation and setting	- Selecting the menu.
		- Setting parameters.
		- Adjusting the ambient temperature setpoint.
5	Selecting the heating mode	- ৩ Heating operating according to the heating programme (Summer/winter mode switchover is automatic).
		- 🌣 Constant comfort temperature.
		- Constant reduced temperature.
		- O Stand-by mode with anti-frost protection (Provided that the heat pump's electrical power supply is not interrupted).
6	Information display	- Various data (please see page 59).
		- △ Reading error codes (please see page 58).
		- 🎤 Information concerning maintenance, special mode.
7	Confirm "OK"	- Input into the selected menu.
		- Confirmation of the parameter settings.
		- Confirmation of the adjustment to the comfort temp. setting.
8	Selecting cooling mode	- If the installation is fitted with the cooling kit:
		 Cooling operating according to the heating programme (Summer/winter mode switchover is automatic).
9	RESET button (Hold down the "RESET" key for 3 sec).	 Reinitialising the parameters and cancelling error messages. Do not use during normal operation.
10	Control knob	- Adjusting the ambient temperature setpoint.
11	Presence key	- Comfort / Reduced switchover.

3.2 Description of the display

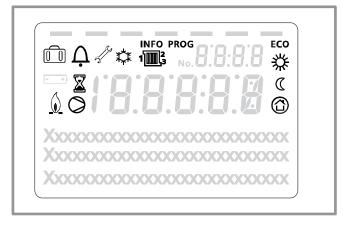


figure 43 - User interface display

Symbols	Definitions
1 23	- Heating mode active with reference to the heating circuit.
*	- Heating in comfort mode.
	- Heating in reduced mode.
	- Heating in "standby" mode (freeze protection).
禁	- Cooling mode active.
	- Holiday mode activated.
<u>R</u>	- Process in progress.
	- Compressor operation.
<u> </u>	- Burner operation.
	- Default message.
S. S	- Service / Special operation.
INFO	- Information level activated.
PROG	- Programme activated.
ECO	- ECO mode activated (Heating temporarily stopped).
1828 0	- Hour / Parameter number / Setpoint value.
20.5 C temperature ambiante	- Room temperature / Setpoint value.
temperature ambiante	- Setpoint information / Parameter Information.

3.3 Temperature control

The heat pump's operation is subject to the temperature control.

The set temperature for the water in the heating circuit is adjusted according to the outdoor temperature.

If there are thermostatic valves on the installation, these must be fully open or adjusted for higher than the normal set temperature.

3.3.1 Set to

During installation, the temperature control must be parametered according to the heat emitters and the dwelling's insulation.

The temperature control' curves (figure 44) refer to an ambient setting of 20°C.

The slope of the temperature control (parameter 720) determines the impact of the variations in the outdoor temperature on the initial heating temperature variations.

The higher the slope, the more a slight reduction in the outdoor temperature causes a significant increase in the flow water temperature in the heating circuit.

The off-set in the temperature control (parameter 721) modifies the initial temperature of all the curves, without modification of the slope (figure 45).

The corrective actions in the case of any inconvenience are detailed in the table (figure 46).

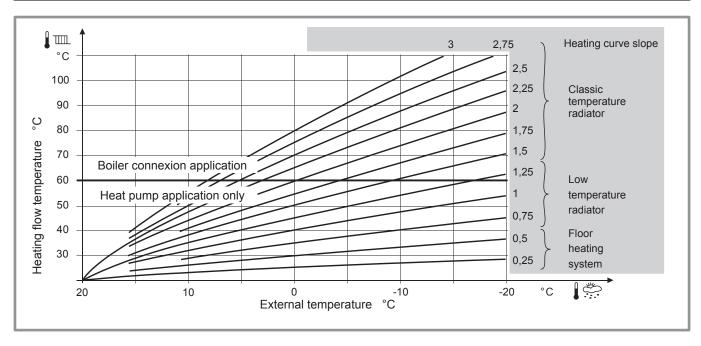


figure 44 - Heating curve slope (line 720)

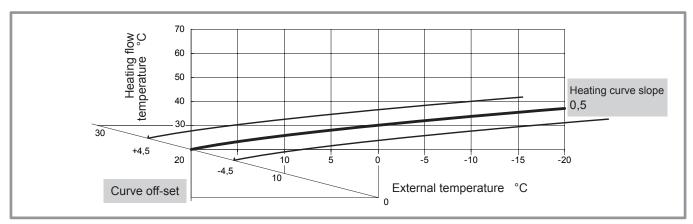


figure 45 - Off-set of the heating curve (line 721)

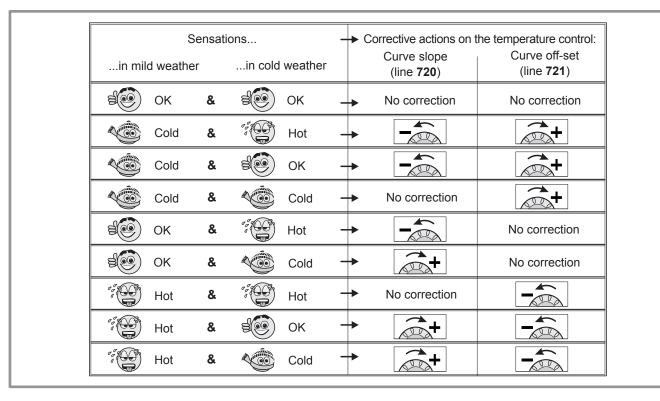


figure 46 - Corrective actions in the case of discomfort

3.4 Parametering the setting

3.4.1 General

Only the parameters accessible to levels:

- **U** End user.
- I Commissioning level.
- S Engineer level.

... are described in this document.


The access levels are specified in the second column of the table by means of the letters $\boldsymbol{U}, \boldsymbol{I}$ and \boldsymbol{S} .

The OEM parameters are not described and require a manufacturer's access code.

3.4.2 Setting parameters

- Choose the desired level.
- Scroll the menu list.
- Choose the desired menu.
- Scroll the function lines.
- Choose the desired line.
- Adjust the parameter.
- Check the setting by pressing OK.
- To return the menu, press ESC.

If no setting is made for 8 minutes, the screen returns automatically to the basic display.

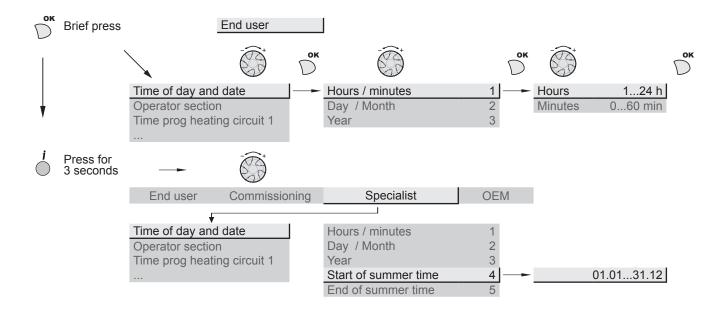

3.4.3 List of function lines (settings, diagnosis, status)

Line		Function	Setting range or display	Setting increment	Basic setting
Time of	f day a	and date			
1	U	Hours / Minutes	00:00 23:59	1	
2	U	Day / Month	01.01 31.12	1	
3	U	Year	1900 2099	1	
5	S	Start of Summer time (Day / Month)	01.01 31.12	1	25.03
6	S	End of Summer time (Day / Month)	01.01 31.12	1	25.10
		The change of hour will appear at 3:00 first \$	Sunday after the regulated date.		
Operate	or Sec	ction			
20	U	Language	English, Français, Italiano, Nederlands		English
22	S	Info	Temporary, Permanent		Temporary
26	S	Operation locking	On, Off		Off
27	S	Programming locking	Off, On		Off
28	I	Direct setting	Automatic storage, With confirmation		With confirmation
29	ı	Temperature units Pressure units	°C, °F bar, psi		°C bar
70	S	Display software version			

Line		Function	Setting range or display	Setting increment	Basic setting
Time pr	ograi	m heating, circuit 1			
500	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sun
501	U	1st phase On (start)	00:00:	10 min	6:00
502	U	1st phase Off (end)	00:00:	10 min	22:00
503	U	2nd phase On (start)	00:00:	10 min	;
504	U	2nd phase Off (end)	00:00:	10 min	;
505	U	3rd phase On (start)	00:00:	10 min	;
506	U	3rd phase Off (end)	00:00:	10 min	:
515	U	Сору			
516	U	Default values, Circuit 1	No, Yes		No
		Yes + OK: The default values memorised Your customised settings are therefore lost.	in the regulator replace and cancel the	ne customised h	neating programs.
Time pr	ograi	m heating, circuit 2			
		Only with the 2nd circuit kit option.			
520	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sun
521	U	1st phase On (start)	00:00:	10 min	6:00
522	U	1st phase Off (end)	00:00:	10 min	22:00
523	U	2nd phase On (start)	00:00:	10 min	;
524	U	2nd phase Off (end)	00:00:	10 min	;
525	U	3rd phase On (start)	00:00:	10 min	;
526	U	3rd phase Off (end)	00:00:	10 min	;
535	U	Сору			
536	U	Default values, Circuit 2	No, Yes		No
		Yes + OK: The default values memorised Your customised settings are therefore lost.	in the regulator replace and cancel the	ne customised h	neating programs.
Time pr	ograi	m 4 / DHW			
560	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sun
561	U	1st phase On (start)	00:00:	10 min	00:00
562	U	1st phase Off (end)	00:00:	10 min	05:00
563	U	2nd phase On (start)	00:00:	10 min	14:30
564	U	2nd phase Off (end)	00:00:	10 min	17:00
565	U	3rd phase On (start)	00:00:	10 min	;
566	U	3rd phase Off (end)	00:00:	10 min	;
575	U	Сору			
576	U	Default values	No, Yes		No


Yes + OK: The default values memorised in the regulator replace and cancel the customised heating programs. Your customised settings are therefore lost.

If the installation is fitted with the cooling kit (Only U Pre-selection (Day / Week) U 1st phase On (start) U 1st phase Off (end) U 2nd phase On (start) U 2nd phase Off (end) U 3rd phase On (start)	with the cooling kit option). Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday, 00:00: 00:00: 00:00:	10 min 10 min	Mon-Sun
U Pre-selection (Day / Week) U 1st phase On (start) U 1st phase Off (end) U 2nd phase On (start) U 2nd phase Off (end)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday, 00:00: 00:00:		
U 1st phase On (start) U 1st phase Off (end) U 2nd phase On (start) U 2nd phase Off (end)	Monday, Tuesday, 00:00: 00:00:		
U 1st phase Off (end) U 2nd phase On (start) U 2nd phase Off (end)	00:00: 00:00:		8:00
U 2nd phase On (start) U 2nd phase Off (end)	00:00:	10 min	
U 2nd phase Off (end)			20:00
	00:00:	10 min	:
U 3rd phase On (start)	00.00	10 min	:
	00:00:	10 min	:
U 3rd phase Off (end)	00:00:	10 min	:
U Copy			
U Default values	No, Yes		No
Yes + OK: The default values memorised in the Your customised settings are therefore lost.	ne regulator replace and cancel th	ne customised h	neating progran
heating circuit 1 (For the Holiday program is active,	the heating mode should be on AU	ГО).	
U Preselection	Period 1 to 8		Period 1
U Period Start (Day / Month)	01.01 31.12	1	
U Period End (Day / Month)	01.01 31.12	1	
U Operating level	Frost protection, Reduced		Frost protection
heating circuit 2 (For the Holiday program is active,	the heating mode should be on AU	ГО).	
If the installation consists of 2 heating circuits (Or	nly with the 2nd circuit kit option).		
U Preselection	Period 1 to 8		Period 1
U Period Start (Day / Month)	01.01 31.12	1	
U Period End (Day / Month)	01.01 31.12	1	
U Operating level	Frost protection, Reduced		Frost protection
djustment, circuit 1			
U Comfort setpoint	Reduced setpoint Comfort setpoint maximum	0,5 °C	20 °C
U Reduced setpoint	Frost protection setpoint Comfort setpoint	0,5 °C	19 °C
U Frost protection setpoint	4 °C Reduced setpoint	0,5 °C	8 °C
S Comfort setpoint maximum	20 °C 35 °C	1 °C	28 °C
I Heating curve slope (figure 44, page 39)	0,1 4	0,02	0,5
I Heating curve displacement (figure 45, page 39)	-4,5 °C 4,5 °C	0,5 °C	0
I Summer / Winter heating limits	8 °C 30 °C	0,5 °C	18 °C
	0 °C Flow temp setpoint may	1 °C	8 °C
S Flow temp setpoint min (for fan convector)	8 °C Flow temp setpoint max	1 0	0 0
	Your customised settings are therefore lost. Peating circuit 1 (For the Holiday program is active, Period Start (Day / Month) Period End (Day / Month) Operating level Peating circuit 2 (For the Holiday program is active, If the installation consists of 2 heating circuits (One Period Start (Day / Month) Period End (Day / Month) Operating level Journal Comfort Setpoint Reduced setpoint Frost protection setpoint Comfort setpoint maximum Heating curve slope (figure 44, page 39) Heating curve displacement (figure 45, page 39) Summer / Winter heating limits When the average of the outside temperatures over (as an economy measure). During summer mode,	Your customised settings are therefore lost. Peating circuit 1 (For the Holiday program is active, the heating mode should be on AUT Period Start (Day / Month) Period End (Day / Month) Operating level Prost protection, Reduced Period 1 to 8 Prost protection, Reduced Prost protection, Reduced Period End (Day / Month) Operating level Prost protection, Reduced Period 1 to 8 Period Start (Day / Month) Operating level Period Start (Day / Month) Operating level Prost protection, Reduced Prost protection, Reduced Prost protection, Reduced Prost protection, Reduced Prost protection setpoint Reduced setpoint Comfort setpoint maximum Prost protection setpoint Prost protection setpoint Comfort setpoint maximum Prost protection setpoint Prost protection setpoin	Your customised settings are therefore lost. Peating circuit 1 (For the Holiday program is active, the heating mode should be on AUTO). Preselection Period 1 to 8 Period Start (Day / Month) D1.01 31.12 1 Period End (Day / Month) D1.01 31.12 1 Period Start (Day / Month) Period 1 to 8 Period 1 to 8 Period Start (Day / Month) D1.01 31.12 1 Period End (Day / Month) Period End (Day / Month) D1.01 31.12 1 Period End (Day / Month) Period End (Day / Month) D1.01 31.12 1 Period End (Day / Month) D1.01 31.12 D1.

Floor heating system = $50 \, ^{\circ}\text{C}$ / Radiators = $65 \, ^{\circ}\text{C}$. **Important Note :** Maximum temperature limitation is not a safety function as required by ground heating.

Line		Function	Setting range or display	Setting increment	Basic setting
750	s	Room influence	1% 100%	1%	50%
		If the installation is fitted with a room thermostat: This function enables you to choose the ambient t If no value is entered, the setting is made based o If the parameter is set at 100%, the setting is only	n the temperature control.		
760	S	Room temperature limitation	0,5 4 °C	0,5 °C	0,5 °C
		As soon as the room temperature = [Setpoint line (ex. 0,5 °C)] > 20,5 °C => The heat pump is stopp. It restarts when the room temperature falls below	ed. `		
780	S	Quick setback	Off, Down to reduced setpoint, Down to frost prot setpoint		Off
790	S	Optimum start control max (Early start to switch to the comfort setting.)	0 360 min	10 min	180 min
791	S	Optimum stop control max (Early stop to switch from the comfort setting to the reduced setting.)	0 360 min	10 min	30 min
800	S	Reduced setpoint increase start	-30 10 °C	1 °C	
801	S	Reduced setpoint increase end	-30 10 °C	1 °C	-5 °C
830	S	Mixer valve boost	0 50 °C	1 °C	0 °C
834	S	Actuator running time	30 873 s	1 s	240 s
850	I	Floor curing function (figure 47)			Off
		 Off: Early interruption of the current program, pro-Functional heating. Heating ready for occupation. Functional heating + Curing heating. Curing heating + Functional heating. Manually: Manual mode enables you to program automatically after 25 days. 		ime.The functio	n ends
851	ı	Floor curing setpoint manually (if line 850 = manual)	0 95 °C	1 °C	25 °C
		This function enables you to set the custom or The concrete slab-drying programme stops autom		This temperatu	re remains fixed
856	ı	Floor curing day current	0 32		
857	ı	Floor curing day completed	0 32		
900	S	Operating mode changeover	None, Protection mode, Reduced, Comfort, Automatic	1	Protection mode

Operating mode at end of concrete slab drying period

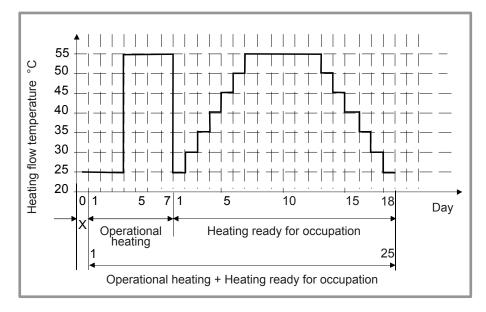

Please comply with the standards and instructions of the manufacturer of the building! A good performance of this function is only possible with an installation correctly implemented (hydraulic, electricity and adjustments)! This function can be stopped by anticipation when setting the adjustment on "Stop".

figure 47 - Diagram of the concrete slab drying programmes

Line		Function	Setting range or display	Setting increment	Basic setting
Cooling	circ	uit 1			
		If the installation is fitted with the cooling kit (Only	with the cooling kit option).		
901	U	Operating mode	Off, Automatic		Off
902	U	Comfort cooling setpoint	17 40 °C	0,5 °C	24 °C
907	U	Release	24h/day, Time program HC, Time program 5 / Refresh		Time program
		If the installation is fitted with a DHW tank, set the (In order to activate cooling only during the day ar	parameter 907 to "Time program nd leave the DHW system to opera	5 / Cooling" ate during the nig	ht).
908	ı	Flow temp setp at OT° 25°C	6 35 °C	0,5 °C	20 °C
909	ī	Flow temp setp at OT° 35°C	6 35 °C	0,5 °C	16 °C
912	I	Cooling limit at OT°	8 35 °C	0,5 °C	24 °C
913	S	Lock time at end of heating	8 100	1 h	24 h
918	S	Summer comp start at OT°	20 50 °C	1 °C	26 °C
919	s	Summer comp end at OT°	20 50 °C	1 °C	40 °C
920	S	Summer comp setp increase	1 10 °C	1 °C	4 °C
923	S	Flow temp setp min OT° 25°C	6 35 °C	0,5 °C	18 °C
924	S	Flow temp setp min OT° 35°C	6 35 °C	0,5 °C	18 °C
928	S	Room influence	1 100 %	1 %	80 %
		If the installation is fitted with a room thermostat: This function enables you to choose the ambient to the setting is entered, the setting is made based of the parameter is set at 100%, the setting is only	on the temperature control.	•	
932	S	Room temp limitation	0,5 4 °C	0,5 °C	0,5 °C
938	S	Mixing valve decrease	0 20 °C	1 °C	0 °C
941	S	Actuator running time	30 873 s	1 s	240 s
945	S	Mixing valve in heating mode	Control, Open		Control
946	s	Lock time dewpoint limiter	10 600 min	10 min	60 min
963	S	With prim contr / system pump	No, Yes		No*
		*Basic setting : 1 circuit = No ; 2 circuits = Yes.		,	
969	S	Operating mode changeover	No, Off, Automatic		Off
-leating	adju	stment, Circuit 2			
		Only with the 2nd circuit kit option (If the installation	on consists of 2 heating circuits).		
1010	U	Comfort setpoint	Reduced setpoint Comfort setpoint maximum	0,5 °C	20 °C
1012	U	Reduced setpoint	Frost protection setpoint Comfort setpoint	0,5 °C	19 °C
1014	U	Frost protection setpoint	4 °C Reduced setpoint	0,5 °C	8 °C
1016	S	Comfort setpoint maximum	Comfort temp 35 °C	1 °C	28 °C
1020	1	Heating curve slope (figure 44, page 39)	0,1 4	0,02	0,5
1021	1	Heating curve displacement (figure 45, page 39)	-4,5 4,5 °C	0,5 °C	0 °C
1030	ı	Summer / Winter heating limits	8 30 °C	0,5 °C	18 °C
.000		When the average of the outside temperatures over (as an economy measure). During summer mode, t			

Line		Function	Setting range or display	Setting increment	Basic setting
1041	S	Flow temp setpoint max	8 70 °C	1 °C	55 °C
		Floor heating system = 50 °C / Radiators = 65 °Important Note : Maximum temperature limitati		d by ground hea	iting.
1050	S	Room influence	1 % 100 %	1 %	50 %
		If the installation is fitted with a room thermostat This function enables you to choose the ambien If no value is entered, the setting is made based If the parameter is set at 100%, the setting is on	It temperature's influence on the setting on the temperature control.		
1060	S	Room temperature limitation	0,5 4 °C	0.5 °C	0.5 °C
		As soon as the room temperature = [Setpoint lir (ex. 0,5 °C)] > 20,5 °C => The heat pump is stop It restarts when the room temperature falls below	pped.		•
1080	S	Quick setback	Off, Down to reduced setpoint, Down to frost prot setpoint		Off
1090	S	Optimum start control max	0 360 min	10 min	180 min
1091	S	Optimum stop control max	0 360 min	10 min	30 min
1100	S	Reduced setpoint increase start	-30 10 °C,°C	1 °C	
1101	S	Reduced setpoint increase end	-30 10 °C,°C	1 °C	-5 °C
1130	S	Mixer valve increase	0 50 °C	1 °C	0 °C
1134	S	Actuator running time	30 873 s	1 s	240 s
1150	ı	Floor curing function (figure 47, page 43)			Off
		Off: Early interruption of the current programm Operational heating. Heating ready for occupation. Operational heating + ready heating. Ready heating + operational heating. Manual: Manual mode enables you to program automatically after 25 days.		ne.The function	ends
1151	I	Floor curing setpoint manually (if line 1150 = manual)	0 95 °C	1 °C	25 °C
		This function enables you to set the custom The concrete slab-drying program stops automatically and the concrete slab-drying program stops are concrete slab-drying program stops.		This temperatu	re remains fixed.
1156	ı	Floor curing day current	0 32		
1157	I	Floor curing day completed	0 32		0
1200	S	Operating mode changeover	None, Protection mode, Reduced, Comfort, Automatic		Protection mode

Operating mode at end of concrete slab drying period.

Line		Function	Setting range or display	Setting increment	Basic setting	
Domesti	ic ho	t water				
1610	U	Nominal setpoint	Reduced setpoint (line 1612) 65 °C	1	55 °C	
	The backup electrical system is required to reach this level.					
1612	U	Reduced setting	8 °C Nominal setting (line 1610)	1	40 °C	
1620	I	Release of DHW load	24h / day Heating circuit time programme Programme 4 / DHW Off-peak tariff (Off-peak) Programme 4 / DHW and Off-peak		Programm 4 / DHW	
		24h / day: The temperature of the DHW is co	nstantly maintained at the DHW comfort	setting.		
		Heating circuit time programme: The DHW (with 1 hour in advance when switched on).	/ is produced according to the programm	ning for the aml	bient temperatu	
		Programme 4 / DHW: The DHW programme	is separate form the heating circuit prog	ıramme.		
		Off-peak tariff* : The electrical backup heating	ng is only authorised to operate during th	ne off-peak perio	od.	
	T'prog 4/DHW or low-tariff *: The electrical backup heating is authorised to operate during the comfort					
		* - Connect the "Power Provider" contact to the electric back-ups for the DHW tank are so the DHW tank is only authorised during off-pe	ubject to the power supplier's tariffs. Swi	he case of a datching on the el	ay /night contra ectric back-up	
1640	ı	Legionella function	Off, Periodically (depending line setting 1641), Fixed weekday (depending line setting 1642)		Off	
1641		Legionella function periodically	4 1 7			
1041	ı	Legionella function periodically	1 to 7	1 day	7	
1642	S	Legionella function weekday	Monday, Tuesday,	1 day	7 Saturday	
1642	S			1 day		
1642	S ng p	Legionella function weekday ool (Only with swimming pool kit option)		1 day		
1642 Swimmi 2056	S ng po U	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating	Monday, Tuesday,	1 day	Saturday	
1642 Swimmi 2056	S ng po U	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating	Monday, Tuesday,	1 day	Saturday	
1642 Swimmi 2056 Heat pur	S ng po U mp (I	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP)	Monday, Tuesday, 8 35 °C	,	Saturday 22 °C	
1642 Swimmi 2056 Heat pur 2803	S ng po U mp (I	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump	Monday, Tuesday, 8 35 °C 8 240 s	1 s	Saturday 22 °C 240s	
1642 Swimmi 2056 Heat pure 2803 2843	S ng po U mp (I S	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump Compressor off time min	Monday, Tuesday, 8 35 °C 8 240 s 0 120 min	1 s 1 °C	Saturday 22 °C 240s 8 min	
1642 Swimmi 2056 Heat pur 2803 2843	S ng po U mp (I S S	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump Compressor off time min Switch-off temp max	Monday, Tuesday, 8 35 °C 8 240 s 0 120 min 8 100 °C	1 s 1 °C 1 °C	22 °C 240s 8 min 75 °C	
1642 Swimmi 2056 Heat pur 2803 2843 2844 2862	S ng po U mp (I S S	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump Compressor off time min Switch-off temp max Locking time stage 2 / mod Compressor mod run time	Monday, Tuesday, 8 35 °C 8 240 s 0 120 min 8 100 °C 0 40 min	1 s 1 °C 1 °C 1 min	22 °C 240s 8 min 75 °C 5 min 240 s	
1642 Swimmi 2056 Heat pur 2803 2843 2844 2862 2873	S ng po U mp (I S S S S S S S S	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump Compressor off time min Switch-off temp max Locking time stage 2 / mod Compressor mod run time	Monday, Tuesday, 8 35 °C 8 240 s 0 120 min 8 100 °C 0 40 min 10 600 s	1 s 1 °C 1 °C 1 min 1 s	22 °C 240s 8 min 75 °C 5 min 240 s	
1642 Swimmi 2056 Heat pur 2803 2843 2844 2862 2873 2882	s ng po U mp (I S S S S S	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump Compressor off time min Switch-off temp max Locking time stage 2 / mod Compressor mod run time Release integr electric flow Release el flow below OT Electrical release - start-up with outside	Monday, Tuesday, 8 35 °C 8 240 s 0 120 min 8 100 °C 0 40 min 10 600 s 0 500 °Cmin	1 s 1 °C 1 °C 1 min 1 s	22 °C 240s 8 min 75 °C 5 min 240 s 100 °Cmin	
1642 Swimmi 2056 Heat pur 2803 2843 2844 2862 2873 2882 2884	S U mp (I S S S S S S S S S S S S S S S S S S	Legionella function weekday ool (Only with swimming pool kit option) Setpoint source heating HP) Overrun time cond pump Compressor off time min Switch-off temp max Locking time stage 2 / mod Compressor mod run time Release integr electric flow Release el flow below OT Electrical release - start-up with outside temperature	Monday, Tuesday, 8 35 °C 8 240 s 0 120 min 8 100 °C 0 40 min 10 600 s 0 500 °Cmin -30 30 °C Off, On,	1 s 1 °C 1 °C 1 min 1 s	22 °C 240s 8 min 75 °C 5 min 240 s 100 °Cmin	

Released: HP = ON _ Back-up DHW = off _ 1st back-up HP = off _ 2nd back-up HP = off _ Boiler = ON

Locked (Blocked on standby): HP = off _ Back-up DHW = off _ 1st back-up HP = off _ 2nd back-up HP = off _
Boiler = ON

Line		Function	Setting range or display	Setting increment	Basic setting
Addition	nal g	enerator (Boiler connection)			
3692	S	With DHW charging	Locked, Substitute, Complement, Instantly		Substitute
		 DHW Instantly: When DHW request, the Freturn temperature is over 55 °C. DHW Substitute: If the outdoor temperature 	·	•	
		at least. The HP operating time can be exten			
3700	S	Release below outside temperature	-50 50 °C	1 °C	2 °C
3701	S	Release above outside temperature	-50 50 °C	1 °C	
3705	S	Overrun time	0 120 min	1 min	20 min
3720	S	Switching integral (for boiler relief)	0 500 °Cmin	1 °Cmin	100 °Cmin
3723	S	Locking time	1 120 min	1 min	30 min
Domest	tic ho	ot water (DHW)			
5024	S	Switching diff	0 20 °C	1 °C	7 °C
5030	S	Charging time limitation	10 600 min	10 min	90 min
5055	S	Recooling temp	10 95 °C	1 °C	65 °C
5057	S	Recooling collector	Off, Summer, Always		Summer
5061	S	Electric immersion heater release	24h / day, Release of DHW, Programme 4 / DHW		Release of DHW
5093	S	Not used			
Installat	tion c	configuration			
5700	1	Pre-setting	1,2,3, 9	1	1
		various configurations are detailed in the sec - Pre-setting 1: 1 heating circuit with or witho - Pre-setting 2: 2 heating circuits with or with - Pre-setting 3: Boiler connection and 1 heati - Pre-setting 4: Boiler connection and 2 heati - Pre-setting 5 and more: Not used.	ut electrical back-up, with DHW tank. out electrical back-up, with DHW tank. ing circuit and DHW tank.		
5710	s	Heating circuit 1	Off, On		On
5711	S	Cooling circuit 1	Off, System with 4 tubes, System with 2 tubes		Off
5715	S	Heating circuit 2	Off, On		On
5731	S	DHW controlling element Q3	No charging request, Charging pump, Diverting valve		Diverting valve
5806	I	Type el imm heater flow	1 : 3-stage, 2 : 2-stage excluding. 3 : 2-stage complementary, 4 : Modulating UX	,	3 : 2-stage complementary
5981	S	Contact type input EX1	Normally-closed contact (NC) Normally-opened contact (NO)		NO
5983	S	Contact type input EX2	Normally-closed contact (NC) Normally-opened contact (NO)		NC
5985	S	Contact type input EX3	Normally-closed contact (NC) Normally-opened contact (NO)		NO
6098	S	Not used			
6100	S	Readjustm outside sensor	-3 3 °C	0,1 °C	0 °C
6120	S	Frost protection plant	On, Off		On
6205	S	Reset to default parameters	No, Yes		No

Line		Function	Setting range or display	Setting increment	Basic setting
6220	s	Software version (RVS)	0 99		
6420	S	Function input H33 (= contact in X152)	1 56		1
		(1) Mode changeover HC+DHW - (2) Mode changeover HC2 - (5) Mode changeover (11) Mode changeover Heating Swimming pool -	r HCP - (6) to (10) Not used -	HC1 -	
6421	S	Contact type H33	Normally-closed contact (NC) Normally-opened contact (NO)		NO
LPB sys	stem				
6600	S	Not used			
Error					
6711	U	Reset HP	No, Yes		No
6800	S	History 1	Time, Date, Error code		
6802	S	History 2	Time, Date, Error code		
6804	s	History 3	Time, Date, Error code		
6806	S	History 4	Time, Date, Error code		
6808	S	History 5	Time, Date, Error code		
6810	S	History 6	Time, Date, Error code		
6812	S	History 7	Time, Date, Error code		
6814	S	History 8	Time, Date, Error code		
6816	S	History 9	Time, Date, Error code		
6818	S	History 10	Time, Date, Error code		
Mainten	ance	/ special regime			
7070	S	HP interval	, 1 240	1 month	
7071	S	HP time since maint Reset ? (no, yes)	0 240	1 month	0
7073	S	Cur starts compr1/hrs run (since the 6 last weeks) Reset ? (no, yes)	0 12		0
7141	U	Emergency operation	Off, On		Off
		Off: Heat pump functions normally (with boosters if On: Heat pump uses the electric boost system or to Use the "On" position only in Assist mode or Test in	ne boiler connection.	S.	
7142	S	Emergency operating function type	Manual, Automatic		Manua
		Manual: Emergency mode is not active when a faul Automatic: Emergency mode is active when a fault In "Automatic" position, the energy cost can be one	occurs (Emergency mode = ON).	•	
7150	ı	Simulation outside temp	-50 50 °C	0,5	
nputs /	outp	uts test			
7700	ı	Relay test			0

This consists of instructing the regulator's relays one by one and checking their outputs. This enables you to check that the relays are working and that the cabling is correct. Check that each appliance in the installation is operating correctly. (0) No test, (1) Everything is on STOP, (2) Relay output QX1: heat pump CC1 (Main regulation board), (3) Relay output QX2: Electrical back-up (1st stage) or Boiler connection distribution valve, (4) Relay output QX3: Electrical back-up (2nd stage) or Boiler connection contact, (5) Relay output QX4: DHW distribution valve, (6) Relay output QX5: DHW Electrical back-up, (7) Relay output QX6, (8) Relay output QX31: Heat circ mix valve open Y1 (or control pilot-wire), (9) Relay output QX32: Heat circ mix valve close Y2, (10) Relay output QX33: heat pump CC2, (11) Relay output QX34, (12) Relay output QX35: Swimming pool distribution valve, (13) Relay output QX21 module 1, (14) Relay output QX22 module 1, (15) Relay output QX23 module 2, (19) Not used, (20) Not used, (21) Not used.

The display shows the "Key" symbol. Pressing the Info button displays "Error 368". Warning: The component being tested is receiving electrical power throughout the test.


		Function	Setting range or display	Setting increment	Basic setting
7710	ı	Output UX1 test (3-phase electrical back-up command)	0 100%	1	
7712	ı	PWM signal UX1	0 100%	1	0
7716	ı	Output UX2 test	0 100%	1	
7719	ı	PWM signal UX2	0 100%	1	0
7722	ı	Digital output DO2	Off, On		Off
7723	ı	Heat pump D3	Off, On		Off
7724	- 1	Outputs test UX3 ("Inverter" command)	0 100 %		
7725	ı	Voltage value (Ux3)	0 10 v		
7820	ı	Sensor temperature BX1 (HP flow temperature)	-28 350 °C		
7821	- 1	Sensor temperature BX2 (HP return temperature)	-28 350 °C		
7822	- 1	Sensor temperature BX3 (DHW temperature)	-28 350 °C		
7823	ı	Sensor temperature BX4 (Outside temperature)	-28 350 °C		
7824	- 1	Sensor temperature BX5	-28 350 °C		
7825	ı	Sensor temperature BX6	-28 350 °C		
7830	ı	Sensor temperature BX21 module 1	-28 350 °C		
7832	1	Sensor temperature BX21 module 2	-28 350 °C		
7849	ı	Contact status H2, module 2	Open, Closed		Open
7911	ı	Input EX1 (Power shedding, EJP)	0, 230 V		
7912	ı	Input EX2 (Tariffs day/night)	0, 230 V		
7913	- 1	Input EX3 (External fault)	0, 230 V		
7973	ı	Sensor temperature BX31 (Mixed circuit temp.)	-28 350 °C		
7974	ı	Sensor temperature BX32	-28 350 °C		
7975	1	Sensor temperature BX33	-28 350 °C		
7976	I	Sensor temperature BX34 (Swimming pool exchanger temperature)	-28 350 °C		
7977	ı	Sensor temperature BX35	-28 350 °C		
7978	ı	Sensor temperature BX36	-28 350 °C		
7996	ı	Contact status H33	Open, Closed		Open
State					
8000	- 1	State heating circuit 1			
8001	- 1	State heating circuit 2			
8003	ı	State DHW			
8004	ı	State cooling circuit 1			
8006	ı	State heat pump			
8007	ı	Not used			
8010	ı	Not used			
8011	ı	State swimming pool			
8022	ı	State supplementary source			
Generate	or di	agnosis			
8402	ı	Electrical resistance flow 1	Off, On		Off
8403	ı	Electrical resistance flow 2	Off, On		Off
8406	I	Condenser pump	Off, On		Off

Line		Function	Setting range or display	Setting increment	Basic setting
8410	U	Return temp HP	0 140 °C		
		Setpoint (flow) HP			
8412	U	Flow temp HP	0 140 °C		-
		Setpoint (flow) HP			
8413	U	Compressor modulation	0 100%		
8414	ı	Modulation electric flow	0 100%		
8425	S	Temp diff condensor	-50 140 °C		
8450	S	Hours run compressor 1		h	
8454	S	Locking time Heat Pump Reset ? (no, yes)	0 2730 h		
8455	S	Counter number of locks HP Reset ? (no, yes)	0 65535		
8456	S	Hours run electrical flow Reset ? (no, yes)	0 2730 h		
8457	S	Start counter electrical flow Reset ? (no, yes)	0 65535		
8499	S	Not used			
8505	S	Not used			
8510	S	Not used			
8511	S	Not used			
8512	S	Not used			
8513	S	Not used			
8515	s	Not used			
Diagnos	stics	consumers			
8700	U	Outside temperature	-50 50 °C		
8701	U	Outside temp min Reset ? (no, yes)	-50 50 °C		
8702	U	Outside temp max Reset ? (no, yes)	-50 50 °C		
8703	I	Outside temp attenuated Reset ? (no, yes)	-50 50 °C		
		This is the average of the outside temperature. This value is used for automatic Summer / Williams	e over a 24-hour period. inter switchover (line 730).		
8704	- 1	Outside temp composite	-50 50 °C		
		The mixed outside temperature is a combination calculated by the regulator. This value is used	on of the current outside tempera I for calculating the initial temper	ature and the average outs rature.	side temperature
8730	ı	Heating circuit pump, circuit 1	Off, On		Off
8731	ı	Mixer valve HC1 open	Off, On		Off
8732	I	Mixer valve HC1 closed	Off, On		Off
8740	U	Room temperature 1	0 50 °C		
		Room setting 1			20 °C
8743	U	Flow temperature 1	0 140 °C		
		Flow temperature setpoint 1			
8756	U	Cooling flow temperature 1	0 140 °C		
		Cooling flow temperature setpoint 1			
8760	1	Heating circuit pump, circuit 2	Off, On		Off


Line		Function	Setting range or display	Setting increment	Basic setting
8770	I	Room temperature 2	0 50 °C		
		Room setpoint 2			20 °C
8773	U	Flow temperature 2	0 140 °C		
		Flow temperature setpoint 2			
8820	I	DHW pump	Off, On		Off
8821	I	El imm heater DHW	Off, On		Off
8830	U	DHW (domestic hot water) temperature	0 140 °C		
		DHW temperature setpoint			50 °C
8840	S	Hours run DHW pump	0 2730 h		
8841	S	Start counter DHW pump	0 199999		
8842	S	Hours run electric DHW	0 2730 h		
8843	S	Start counter electric DHW	0 65535		
8900	U	Swimming pool temperature	0 140 °C		
		Swimming pool temperature setpoint			22 °C
8950	- 1	Common flow temperature	0 140 °C		
		Common flow temperature setpoint			
8957	- 1	Common flow setpoint, refrigeration	0 140 °C		
8980	ı	Not used			
8981	ı	Not used			
9031	- 1	Relay output QX1	Off, On		On
9032	I	Relay output QX2	Off, On		On
9033	ı	Relay output QX3	Off, On		On
9034	ı	Relay output QX4	Off, On		Off
9035	ı	Relay output QX5	Off, On		Off
9050	ı	Relay output QX21 module 1	Off, On		Off
9051	ı	Relay output QX22 module 1	Off, On		Off
9052	I	Relay output QX23 module 1	Off, On		Off
9053	ı	Relay output QX21 module 2	Off, On		Off
9054	- 1	Relay output QX22 module 2	Off, On		Off
9055	I	Relay output QX23 module 2	Off, On		Off
9071	ı	Relay output QX31	Off, On		On
9072	- 1	Relay output QX32	Off, On		On
9073	ı	Relay output QX33	Off, On		Off
9074	I	Relay output QX34	Off, On		Off
9075	ı	Relay output QX35	Off, On		Off

4 Overall hydraulic layout

• Configuration 1: 1 heating circuit

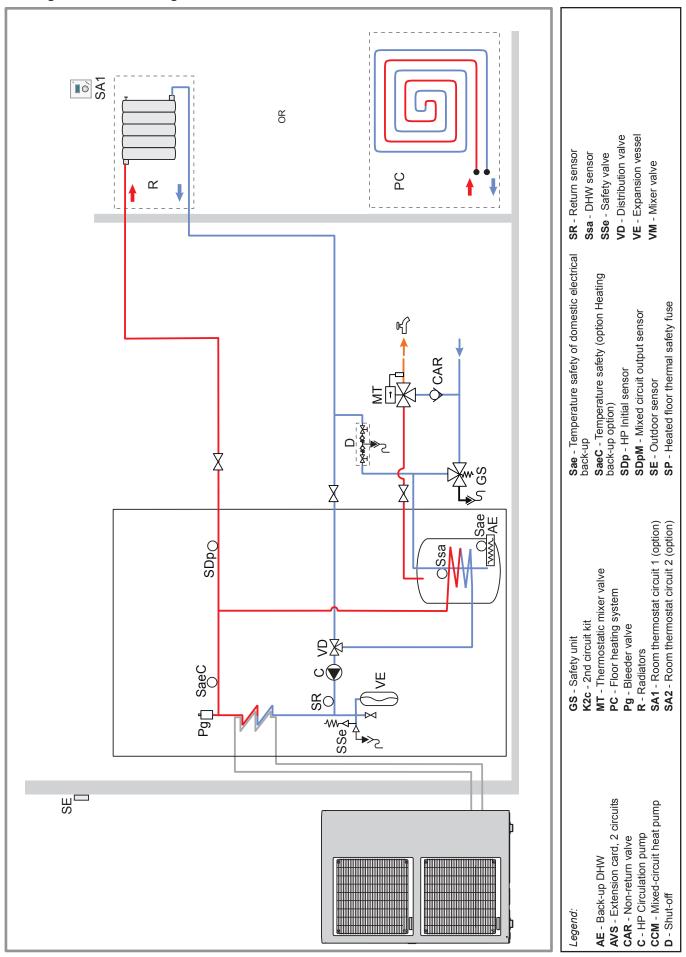

• Configuration 2: 2 heating circuits

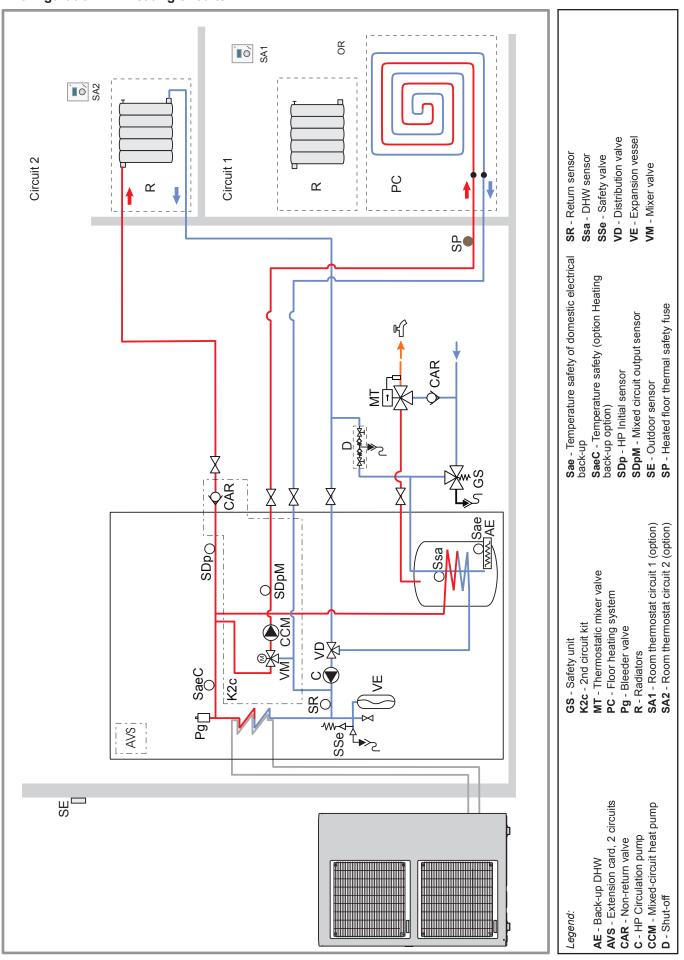

5 Electrical wiring diagrams

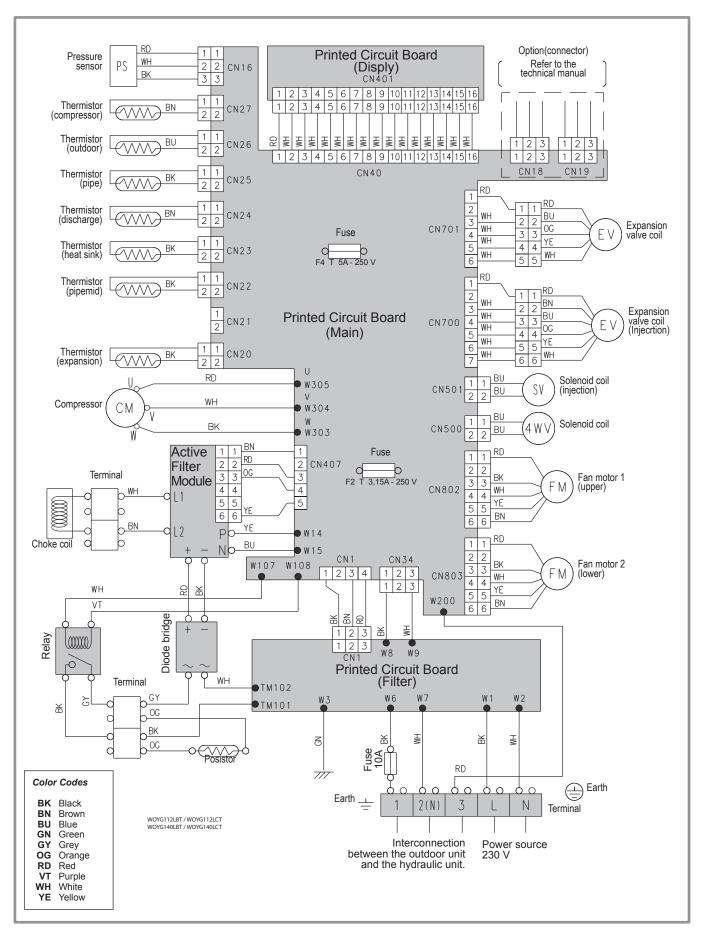


figure 48 - Electrical wiring of outside unit model High Power integrated DHW (single phase type)

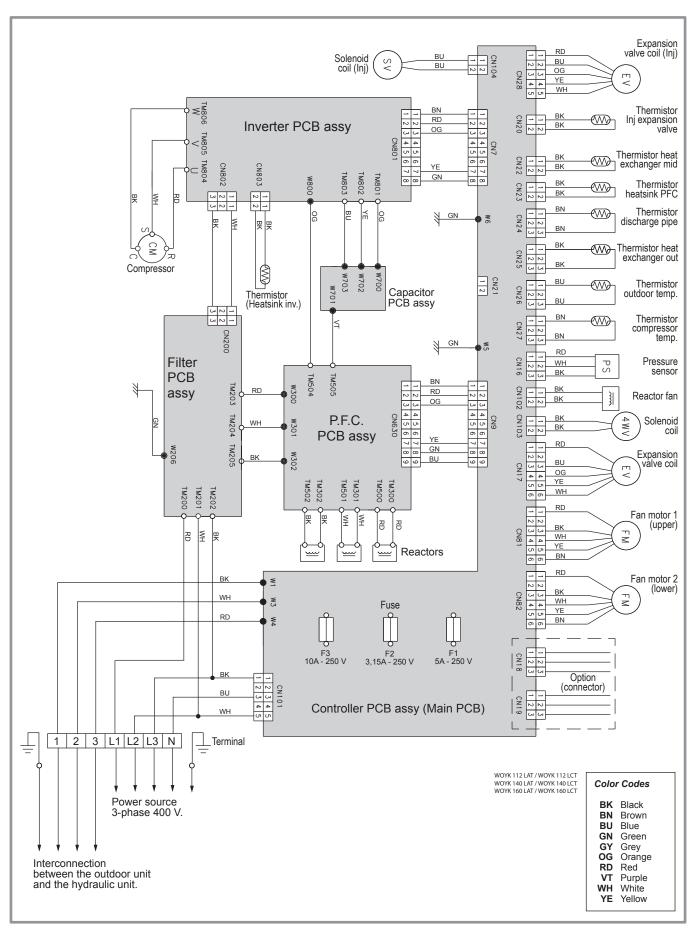


figure 49 - Electrical wiring of outside unit model High Power integrated DHW (3-phase type)

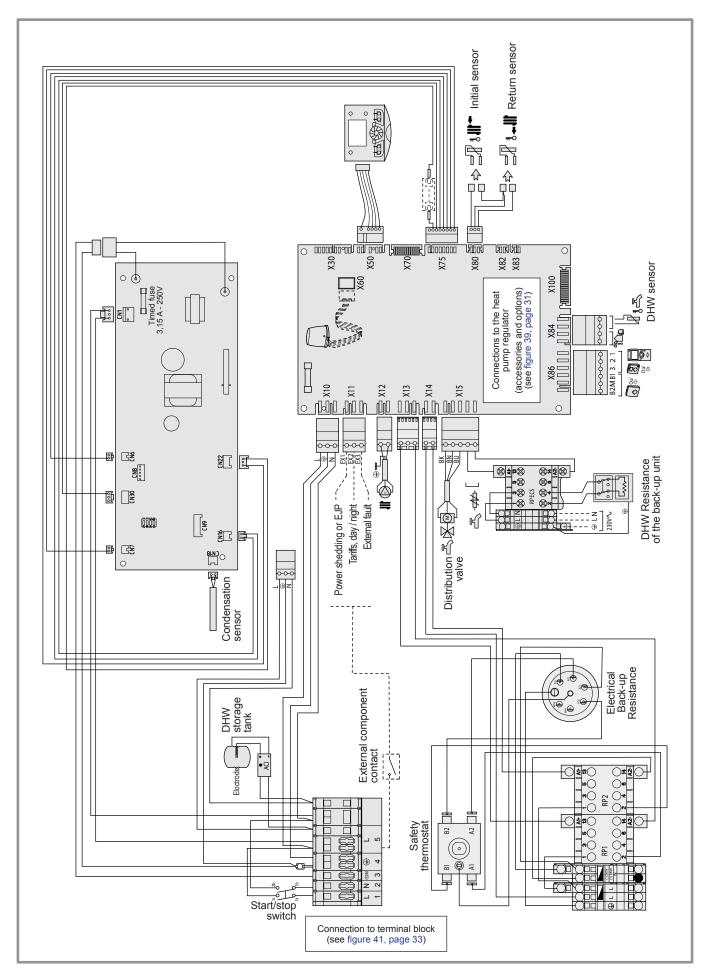


figure 50 - Electrical wiring, Hydraulic unit High Power integrated DHW single phase (Except installer's connections)

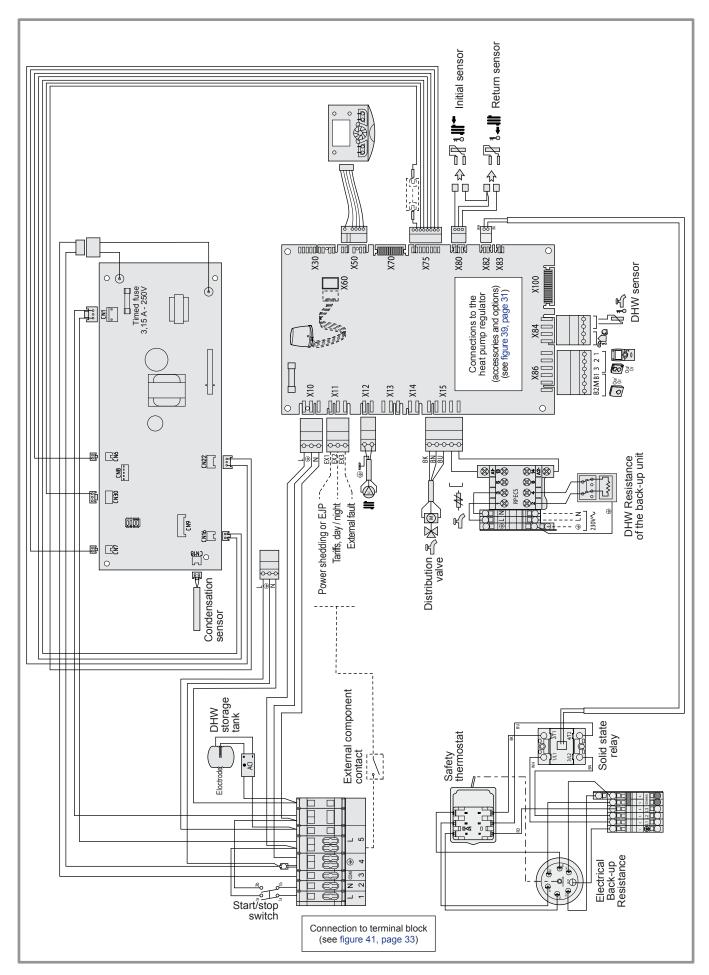


figure 51 - Electrical wiring, Hydraulic unit High Power integrated DHW 3-phase (Except installer's connections)

6 Troubleshooting

Depending on whether the fault comes from the outdoor unit or the hydraulic unit, the fault may be indicated by the digital display or the diode on the interface cards.

6.1 Faults displayed on the hydraulic unit

Faults or breakdowns on the hydraulic unit are indicated by the display on the user interface.

The display shows the $\ \ \ \ \ \$ symbol.

Press the key for more details on the origin of the fault.

When the error has been resolved, the faults are re-initialised at zero automatically.

Hydraulic unit: Fault visible on the digital display.

Error number	Error description	Error location	Heat pump operation despite the error
-	No connection.	Failure to comply with room thermostat's polarity.	No
10	Outdoor sensor.	В9	Yes with OT = 0 °C
33	Heat pump initial temperature sensor error.	B21	Yes
44	Heat pump return temperature sensor error.	B71	Yes
50	DHW temperature sensor.	B3	Yes
60	Ambient temperature sensor 1.		Yes
65	Ambient temperature sensor 2.		Yes
105	Maintenance message.		Yes
121	Flow temperature for (HC1) not reached.		Yes
122	Flow temperature for (HC2) not reached.		Yes
127	Anti-legionella temperature not reached.		Yes
369	External fault (safety component).		No
370	Outside unit connection error. (In the start phase, see the para. "Start-up").	See below and page 58 & 59.	No

Hydraulic unit: Flashing of the diode visible on the interface card (see figure 22, page 21).

Diodes display		5
LED 2 (green)	LED 1 (red)	Error contents
1 Flash	1 Flash	Communication error between Hydraulic unit and Outdoor unit.
4 Flashes	1 Flash	Heat pump capacity signal error (Open or short).
4 Flashes	2 Flashes	Hydraulic unit heat-exchange thermistor Error.
6 Flashes	3 Flashes	Inverter error.
6 Flashes	4 Flashes	Active filter error.
7 Flashes	1 Flash	Discharge thermistor error.
7 Flashes	2 Flashes	Compressor thermistor error.
7 Flashes	3 Flashes	Heat-exchange thermistor (outlet / intermediate) error.
7 Flashes	4 Flashes	Outdoor thermistor error.
7 Flashes	7 Flashes	Heat sink thermistor error.
7 Flashes	8 Flashes	Expansion valve thermistor error.
8 Flashes	4 Flashes	Current sensor error.
8 Flashes	6 Flashes	Pressure sensor error / Pressure switch error.
9 Flashes	4 Flashes	Current trip.
9 Flashes	5 Flashes	Detection of compressor position error / Compressor start up error.
9 Flashes	7 Flashes	Outdoor unit fan motor error.
10 Flashes	1 Flashes	Discharge temperature protection.
10 Flashes	3 Flashes	Compressor temperature protection.
10 Flashes	5 Flashes	Low pressure abnormal.
Continuous flashing (1	sec On / 1 sec Off)	Pump down operation.
Continuous lighting	Off	Defrosting.

6.2 Information display

Various data can be displayed by pressing the info button.

Depending on the type of unit, configuration and operating state, some of the info lines listed below may not appear.

- Possible error messages from the error code list (see table, page 58).
- Possible service messages from the maintenance code list.
- Possible special mode messages.

- Various data (see below).

Designation	Line
Floor drying current setpoint.	-
Current drying day.	-
Terminated drying days.	-
State heat pump.	8006
State supplementary source.	8022
State DHW.	8003
State swimming pool.	8011
State heating circuit 1.	8000
State heating circuit 2.	8001
State cooling circuit 1.	8004
Outdoor temperature.	8700
Room temperature 1.	8740
Room setpoint 1.	0740
Flow temperature 1.	8743
Flow temperature setpoint1.	0743
Room temperature 2.	8770
Room setpoint 2.	0110
Flow temperature 2.	8773
Flow temperature setpoint 2.	0113
DHW (domestic hot water) temperature.	8830
Heat pump return temperature.	8410
Setpoint (return) HP.	0410
Heat pump flow temperature.	8412
Setpoint (flow) HP.	0412
Swimming pool temperature.	8900
Swimming pool temperature setpoint.	0300
Minimum remaining stop time for compressor 1.	-
Minimum remaining running time for compressor 1.	-

6.3 Faults displayed on the single phase outdoor unit

To access the electronic board, you must remove the front (right-hand) facing from the outdoor unit.

Faults are coded by diode flashes.

When an error occurs:

- The diode "ERROR" (2) blinks.
- Press once on the switch "ENTER" (SW3).
- The "ERROR" (2) diode blinks several times depending on the error's type (see below).

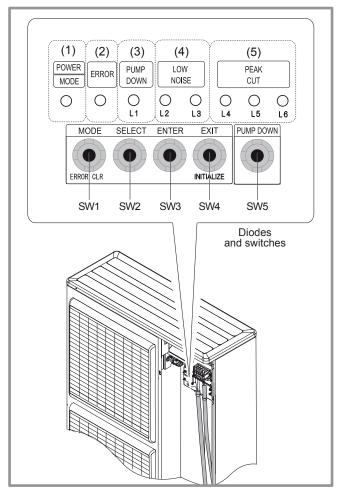


figure 52 - Location of switches and diodes on single phase outdoor unit

Diode display	Error contents
1 Flash	Serial forward transfer error.
2 Flashes	Discharge thermistor error.
3 Flashes	Pressure sensor error.
4 Flashes	Heat-exchange thermistor (outlet) error.
5 Flashes	Heat-exchange thermistor (intermediate) error.
6 Flashes	Expansion valve thermistor error.
7 Flashes	Outdoor temperature thermistor error.
8 Flashes	Compressor thermistor error.
9 Flashes	Heat sink thermistor error.
11 Flashes	Discharge temperature protection (permanent stoppage).
12 Flashes	Compressor temperature protection (permanent stoppage).
13 Flashes	Current trip (permanent stoppage).
14 Flashes	Detection of compressor position error (permanent stoppage).
15 Flashes	Compressor start up error (permanent stoppage).
16 Flashes	Fan motor 1 error (permanent stoppage).
17 Flashes	Fan motor 2 error (permanent stoppage).
18 Flashes	Inverter error.
19 Flashes	Active filter error.
20 Flashes	Low pressure abnormal.
21 Flashes	Connection with hydraulic unit error.
22 Flashes	Hydraulic unit abnormality condition.

6.4 Faults displayed on the 3-phase outdoor unit

To access the electronic board, you must remove the front (right-hand) facing from the outdoor unit.

Faults are coded by diode flashes.

When an error occurs:

- The diode "ERROR" (2) blinks.
- Press once on the switch "ENTER" (SW4).
- The "ERROR" (2) diode blinks several times depending on the error's type (see below).

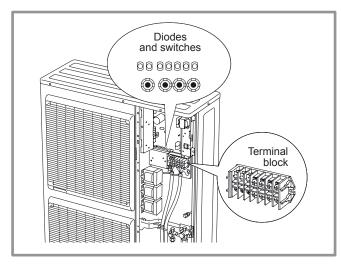


figure 53 - Location of switches and diodes on 3-phase outdoor unit

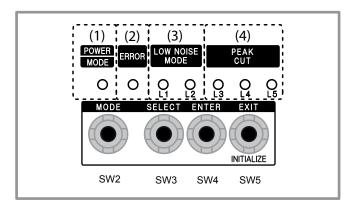


figure 54 - LED display on the 3-phase outdoor unit

Diode display	Error contents
1 Flash	Serial forward transfer error.
2 Flashes	Discharge thermistor error.
3 Flashes	Pressure sensor error.
4 Flashes	Heat-exchange thermistor (outlet) error.
5 Flashes	Heat-exchange thermistor (intermediate) error.
6 Flashes	Expansion valve thermistor error.
7 Flashes	Outdoor temperature thermistor error.
8 Flashes	Compressor thermistor error.
9 Flashes	Heat sink thermistor (inverter) error.
10 Flashes	Heat sink thermistor (P.F.C.) error.
11 Flashes	Discharge temperature protection (permanent stoppage).
12 Flashes	Compressor temperature protection (permanent stoppage).
13 Flashes	Current trip (permanent stoppage).
14 Flashes	Detection of compressor position error (permanent stoppage).
15 Flashes	Compressor start up error (permanent stoppage).
16 Flashes	Fan motor 1 error (permanent stoppage).
17 Flashes	Fan motor 2 error (permanent stoppage).
18 Flashes	Inverter error.
19 Flashes	P.F.C. error.
20 Flashes	Low pressure abnormal.
21 Flashes	Connection with hydraulic unit error.
22 Flashes	Hydraulic unit abnormality condition.

7 Maintenance of the installation

Ensure that the general electrical power supply has been cut off before starting any repair work.

7.1 Hydraulic checks

Warning: If frequent refills are required it is essential that you look for any leaks. If filling and re-pressurization are required, check what type of fluid has been used initially.

Recommended filling pressure: 1 to 2 bar (Precise filling pressure is determined by the manometric height of the installation).

Each year,

- Check the expansion vessel pressure (precharge 1 bar) and the correct functioning of the safety valve.
- Verify the safety unit on the cold water supply inlet. Make it work as prescribed by the manufacturer.
- Check the shut-off.
- Verify the correct functioning of the distribution valve.

7.2 Maintenance of the DHW tank

Maintenance of the tank must be undertaken once a year (The frequency may vary according to water hardness).

7.2.1 Emptying the hot water tank

- Remove the facade from the hydraulic unit.
- Close the cold water entry into the tank.
- Open a hot water tap and open the water tank emptying valve with a wrench (ref. 1).

7.2.2 Descaling

- Empty the water tank.
- Remove the hood of the electrical back-up (ref. 2).
- Disconnect the electrical back-up.
- Unplug the ACI.
- Remove the electrical back-up (ref. 3).
- Remove any limescale deposits that have built up inside the tank. It is best to let the scale stuck to the walls of the tank: it forms a protective layer.
- Gently remove any limescale deposit on the glove finger. Do not use any metal objects or chemical or abrasive products.
- Replace the joint of the electrical back-up (ref. **4**) each time it is dismantled.
- Replace the electrical back-up and carry out 'crossed' locking of the nuts.
- Reconnect the electrical back-up.
- Plug in the ACI.
- Replace the hood of the electrical back-up.

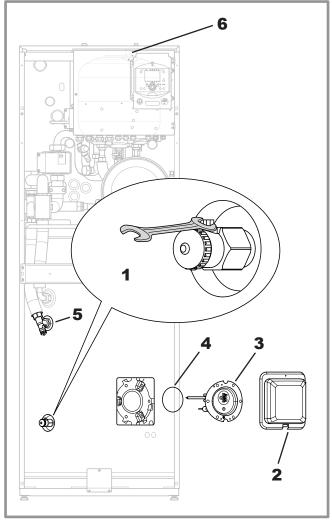


figure 55 - Emptying the hydraulic unit and/or Domestic hot water tank

7.3 Checking the outdoor unit

- Dust off the heat exchanger if necessary, being careful not to damage the fins.
- Straighten the vanes using a comb.
- Check that there is nothing obstructing the passage of air.
- Check the fan.
- Verify that condensate drain is not obstructed.

Checking the refrigeration circuit :

- When the refrigerant charge is in excess of 2kg (>10kW models), it is compulsory to have an approved after sales service check the refrigeration circuit every year (with a certificate of capacity for the handling of refrigerants) (see para. 2.1, page 12).
- Check the lack of leak (connections, valves...).

7.4 Electrical checks

- Check connections and possible tightening.
- Check the cables condition and electronic boards.
- ACI light: In normal operation, the light flashes.

8 Maintenance

8.1 Emptying the hydraulic unit

- Remove the facade from the hydraulic unit.
- Place the distribution valve in the middle position.
- Open the emptying valve (ref. 5).
- Open the hydraulic unit's manual bleed-tap (ref. 6).
- Open the installation bleed tap.

8.2 Distribution valve

Carefully comply with the direction for fitting the distribution valve:

Channel **AB**: Inlet from the hydraulic unit (heat pump).

Channel A Open: Outlet to DHW tank.

Channel **B** Open: Outlet to the heating circuit.

8.3 ACI check

- Check polarity.
- Check voltage: The appliance powered on, the voltage value must be positive and lie between 0 + and + 6.5 V dc.


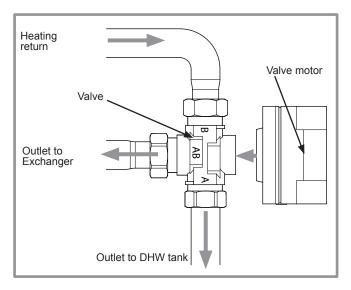


figure 56 - Fitting the distribution valve

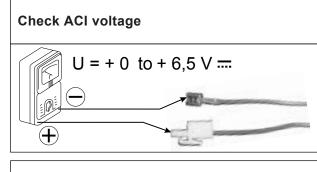

ACI connecting:

The (-) on the tank mass.

The

on the electrode connector.

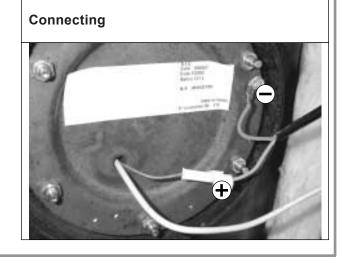


figure 57 - ACI check

9 Instructions for the user

Explain to the user how his installation operates, in particular the functions of the room thermostat and the programmes accessible to him from the user interface.

Emphasise that a heated floor has significant inertia and that therefore any adjustments must be made progressively.

Also explain to the user how to check the filling of the heating circuit.

10 Quick-start procedure

Before switching on the hydraulic unit:

- Check the electric wiring.
- Check the refrigeration circuit and make sure the gas supply has been performed.
- Check the pressure of the hydraulic circuit (1-2 bar), check that the heat pump is purged, and the rest of the installation.
- Make sure that ALL DIPSW on the interface card are OFF before starting up.

10.1 Start-up check-list

10.1.1Before starting-up

Sight checks

Outdoor unit (see chapiter "Installation of the outdoor unit" page 12).		Non compliant	
Location and fittings, condensate evacuation.			
Compliance with distances from obstacles.			

Hydraulic checks

Hydraulic unit (see chapiter "Installing the hydraulic unit" page 15).	OK	Non compliant	Value
Connection of pipes, valves and pumps (1 or 2 circuits, DHW).			
Installation water volume (expansion vessel of adequate capacity ?).			
No leaks.			
Main system pressure and degassing (0,3bar > expansion vessel pre-loading).			

• Refrigeration connections and checks

(see chapiters "Refrigeration connections" page 16 and "Filling the installation with gas" page 19).	OK	Non compliant	
Refrigerant circuits control (Sealing respected, no dust and moisture)			
Connections between units (pipe length, flare tightening torque).			
Installation of HP, LP pressure switches on "Gas" line (large pipe).			
Pump down required.			
Nitrogen leak test (~ 10 bar).			
Opening of refrigeration valves to outdoor unit.			
Refrigerant filling of hydraulic unit and pipes.			

• Electrical checks

Outdoor unit (see chapiter "Electrical connections" page 22).		Non compliant	Value
Main power supply (230v or 400v).			
Protection by rated circuit breaker.			
Cable cross-section.			
Earth connection.			

Hydraulic unit (see chapiter "Electrical connections on the hydraulic unit side" page 25).	OK	Non compliant	
Connection with outdoor unit (phase, neutral, earth or 3 phases + earth).			
Sensors connection (positioning and connections).			
3 way valve and circulators connections.			
Power supply and protection of electric auxiliary.			

10.1.2Starting-up

Switching On

(see chapiter "Star-up" page 28 & chapiter "List of function lines (settings, diagnosis, status)", page 40).	OK	Non compliant	
Engage the installation's main circuit breaker (power supply to the outdoor unit) 2 hours before starting up the tests => Preheating of the compressor.			
Turn ON the start/stop switch => Initialisation for a few seconds.			
Operation of the circulation pumps.			
Outdoor unit starts after 4 mins.			
Time, Date and time programs for HC1, (HC2), DHW if different than default values (settings 500 – 576).			
Configure the hydraulic circuit (setting 5700).			
Ajust the heating curve slope (720; 1020).			
Adjust the maximum start setting (741 and 1041).			

• Outdoor unit checks

	OK	Non compliant	Value
Operation of fan(s), compressor.			
Current measurement.			
After a few minutes, measurement of air temp. delta.			
Check condensation and evaporation pressure/temperature.			

• Hydraulic unit checks

	OK	Non compliant	Value
After 15 mins of operation.			
Primary water temp. delta.			
DHW priority (switching of selection valve).			
Operation of heating, mixing valve, boiler backup,			

Room control

(see chapiter "Configuring the room thermostat" page 28 & para. 3.4.3, page 40).	OK	Non compliant	
Settings, manipulations, checks.			
Set the scheduled periods for heating (500 to 516 / 520 to 536).			
Adjust the heating circuit setpoints if different than default values (710-714; 1010-1014).			
Adjust the DHW setpoints if different than default values (1610-1612).			
Setpoint display.			
Explanations on use.			

The heat pump is ready for operation!

10.2 Settings sheet

Setting	Description	Set to.	Menus
Preliminary	y settings		
20	language		operator section
1	hour / minutes		time & date
2	day / month		time & date
3	year		time & date
5700	installation config.		configuration
Heating cir	cuit No. 1 s = the least warm one (e.g.:	floor)	
710	comfort setpoint	11001)	HC1 adjust.
712	reduced setpoint		HC1 adjust.
720	heating curve slope		HC1 adjust.
741	flow temp setpoint max		HC1 adjust.
750	room influence		HC1 adjust.
790 / 791	optimis. at switch-on / off		HC1 adjust.
834	servomotor travel time		HC1 adjust.
850 / 851	floor drying		HC1 adjust.
_	cuit No. 2 (with 2 nd circuit o _l	ption)	
1010	comfort setpoint		HC2 adjust.
1012	reduced setpoint		HC2 adjust.
1020	heating curve slope		HC2 adjust.
1041	flow temp setpoint max		HC2 adjust.
1050	room influence		HC2 adjust.
1090 / 1091	optimis. at switch-on / off		HC2 adjust.
1134	servomotor travel time		HC2 adjust.
1150 / 1151	floor drying		HC2 adjust.
Domestic I	Hot Water		
1610	nominal DHW temp. setpoint		DHW
1612	reduced DWH temp. setpoint		DHW
1620	DHW release		DHW
1640 to 1642	legionella cycle		DHW
5024	DHW switch-on differ.		DHW tank
5030	charging time limitation		DHW tank
5061	heater release		DHW tank

Setting	g Description		Menus				
Boiler backup							
3700	OT.switch-on authoris.		addit. gen.				
3705	swith-off delay		addit. gen.				
Miscellaneous							
6420	input H33 function	1	configuration				
6100	OT sensor correction		configuration				
6120	frost protection on/off		configuration				
6205	reset settings		configuration				
6220	software version		configuration				
6711	reset heat pump		error				
Cooling							
5711	cooling unit	2 pipes	configuration				
Faults (if a	a fault occurs, press"Info" key	()					
No. 10	outdoor sensor						
No. 33	flow temp. sensor						
No. 44	return temp. sensor						
No. 50	DHW temp. sensor						
No. 60	room sensor 1						
No. 65	room sensor 2						
No. 105	maintenance message						
No. 121	HC1 flow T not reached						
No. 122	HC2 flow T not reached						
No. 127	leg. prot. T not reached						
No. 369	external fault (EX3)						
No. 370	outdoor unit connect error						
6711	reset heat pump		error				
Heat pump							
2844	switch-off temp max		heat pump				
2884	OT auth. to start elec. aux.		heat pump				
2920	2920 Pk day clear (EX1) rel / lock		heat pump				
Swimming pool (with "swimming pool" kit option)							
2056	generator setpoint		Sw pool				
Outdoor u	nit faults (see page 60)						

10.3 Start-up data sheet

Site				Installer							
	serial No.				Hydraulic unit		serial No.	1			
Outdoor unit model								model			
, mode.						1					
Refrigerant type						Refrigerant char	rge				kg
Checks			,			Operating volta					
Compliance with position	oning distanc	ces				L/N or L1/N		V			
Condensate evacuation	correct					L2/N		V			
Electric connections / c	onnections t	ightnees				L3/N		V			
No GAS leaks (unit ID I	No.:)				L/T or L1/T		V			
Installation of refrigerat	ion connecti	on correct (lenght :	n	1)		L2/T		V			
Reading in HEATING	operating m	ode				L3/T		V			
Compressor discharge	temperature	:	۰	С		N/T		V			
Liquid line temperature			٥	С		Icomp		А			
Condensation temperature	HP =	bar	٥	С	} }	sub-cooling					°C
Tank water output temp	erature		٥	С	}	ΔT condensation			°C		
Tank water input tempe	rature		0	С		ΔT secondary					°C
Evaporation temperatur	Evaporation temperature LP = bar		0	С							
Suction temperature		0	С	}	Overheating				°C		
Battery air input temperature		٥	С	} }	ΔT evaporation					°C	
Battery air output tempo	erature		٥	С	,	ΔT battery				°C	
Hydraulic system of h	ydraulic un	it									
	Low te	mp. heating floor				Circulator brand					
Secondary system	LT Radiators		١					Туре	Туре		
	fan coi	ls	}								
Domestic hot water ; ta	nk type										
Estimated water volume	e of seconda	ary system			L						
Options & accessorie	s:										
Power supply for conne	ected electric	auxiliary				Room thermosta	at				
Operation in cooling mode possible					Wireless room thermostat						
Location of room sensor correct					Remote control Wireless remote control Details						
Cooling kit											
2 zone kit											
Control settings											
Configuration type											
Essential settings											



Complies with

- Low voltage directive 2006/95/EC, under standard EN 60335-1.
- Electromagnetic compatibility Diretive 2004/108/EC,
- Directive 2006/42/EC Machinery,
- Directive for pressurised equipment 97/23/EC.

This appliance also conforms to:

- Regulation 842/2006 of the european parliament on certain fluorinated greenhouse gases.
- The standards relating to the product and the testing methods used: Air-conditioners, refrigeration units and heat pumps with compressor driven by electric motor for heating and refrigeration EN 14511-1, 14511-2, 14511-3, and 14511-4.
- To standard XP ENV 12102: Air-conditioners, heat pumps and dehumidifiers with compressor driven by electric motor. Measurement of airborne noise. Determination of acoustic power level.



This appliance is marked with this symbol. This means that electrical and electronic products shall not be mixed with general household waste. European Community countries(*), Norway, Iceland and Liechtenstein should have a dedicated collection system for these products.

Do not try to dismantle the system yourself as this could have harmful effects on your health and on the environment.

The dismantling and treatment of refrigerant, oil and other parts must be done by a qualified installer in accordance with relevant local and national regulations.

This appliance must be treated at a specialized treatment facility for re-use, recycling and other forms of recovery and shall not be disposed of in the municipal waste stream. Please contact the installer or local authority for more information.

* subject to the national law of each member state

Date	of i	nstal	llation	

Contact of your heating technician or your after-sales service.