

Document n° 1533-2 ~ 03/07/2012

Refrigerant

R410A









## Air to Water Heat Pump

## Split system


Outdoor unit WO\*G112LCT WO\*G140LCT WO\*K112LCT WO\*K140LCT WO\*K160LCT Hydraulic unit WS\*G140DC6 WS\*K160DC9



# Installation and operating manual

## intended for professionals

To be saved for future consultation

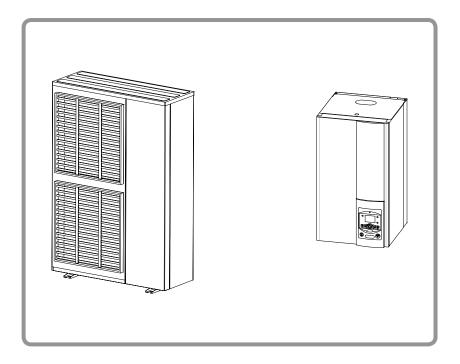

Fujitsu General (Euro) GmbH Werftstrasse 20 40549 Düsseldorf - Germany

Subject to modifications without notice. Non contractual document.

This device requires for its installation, the intervention of qualified personnel with a certificate of capacity for handling refrigerants.

## **Contents**

Description of the unit	
Package	Description
Installation	
Regulation installation and maintenance conditions. 12 Unpacking and reservations. 12 Receipt 12 Handling 12 Accessories provided 12 Installation position 12 Installation of the outdoor unit 12 Installation precautions 12 Outdoor unit positioning 14 Condensate drain hose 14 Installation precautions 15 Installation precautions 15 Refrigeration connections 15 Refrigeration connections 16 Rules and precautions 16 Refrigeration connections 16 Refrigeration connections 17 Creating the hydraulic module's refrigerant connections 17 Creating the flarings 17 Shaping the refrigeration pipes 17 Connecting the flared connections 18 Filling the installation with gas 19 Example of commissioning procedure 19 Sealing test 19 Additional charge 20 Pump down operation (Refrigerant collecting operation) 3-phase outdoor unit 21	Hydraulic connecting22General22Rinsing out the installation22Filling and purging the installation22Connecting the Fan convector circuit22Heating circulation pump speed settings23Electrical connections24Characteristic of the electrical supply24General remarks on electrical connections25Cable section and protection rating25Electrical connections on the single phase outdoor unit side26Electrical connections on the 3- phase outdoor unit side27Electrical connections on the hydraulic unit side28Outdoor sensor31Room thermostat and/or remote control31Installing a room sensor31Installing a remote control31Commissioning31Configuring room thermostat32Configuring remote control (wireless)32
operation, o phace datacor and	

Regulation system	
Jser interface, Remote control (option)	Parametering the setting
and Room thermostat (option)	General
Description of the display	Setting parameters
Temperature control	List of function lines (settings, diagnosis, status)
Get to	(Settings, diagnosis, status)
Overall hydraulic layout	
Electrical wiring diagrams	
Troubleshooting	
Faults displayed on the hydraulic unit	Faults displayed on the single phase outdoor unit . 58
nformation display	Faults displayed on the 3-phase outdoor unit 59
Quick-start procedure	
Start-up check-list	Settings sheet
Before starting-up 60 Starting-up 61	Start-up data sheet
nstructions for the user	

#### **Packing list**

Heat Pump	Outdoor Unit	Hydraulic Unit
Model	Reference	Reference
Waterstage High Power 11 single phase	WO*G112LCT	WS*G140DC6
Waterstage High Power 14 single phase	WO*G140LCT	W3 G140DC0
Waterstage High Power 11 3-phase	WO*K112LCT	
Waterstage High Power 14 3-phase	WO*K140LCT	WS*K160DC9
Waterstage High Power 16 3-phase	WO*K160LCT	

#### Optional equipment

- 2nd circuit kit (code UTW-KZS\*D) for connecting 2 heating circuits.
- **Regulation extension kit** (code UTW-KRE\*D) to manage a 2nd heating circuit, swimming pool etc...
- DHW kit (code UTW-KDW\*D) for connecting a DHW tank (with built-in electrical back-ups).
- **Boiler connection kit** (code UTW-KBS\*D) for connecting a boiler to the heat pump.
- Room thermostat (code UTW-C55\*A),
   Wireless room thermostat (code UTW-C58\*D)
   for correcting the ambient temperature.
- Remote control (code UTW-C75\*A), Wireless remote control (code UTW-C78\*A) for correcting the ambient temperature and programming the heat pump.
- Swimming pool kit (code UTW-KSP\*D).
- Cooling kit (code UTW-KCL\*D).
- **High flow rate circulating pump kit** (code UTW-PHF\*D) for the installation of 1 circuit floor heating (with model > 13 kW).

#### Scope of application

This heat pump provides:

- Heating in winter,
- Control of two heating circuits\*,
- Production of domestic hot water\* (provided that combined with a DHW tank).
- Installation with boiler connection\* as a supplementary heating for the coldest days.
- Cooling in summer\* (for floor heating-cooling system or fan-convectors).
- Heating the swimming pool\*.
- \*: These options require the use of additional kits (see para "Optional equipment").

## 1 Description of the unit

#### 1.1 Package

- 1 package: Outdoor unit.
- 1 package: Hydraulic unit and outdoor sensor.

## 1.2 Definitions

- Split: The heat pump consists of two elements (an outdoor unit for outdoor and a hydraulic unit for inside the dwelling).
- <u>Air/water</u>: The surrounding air is the energy source. This energy is transmitted to the water in the heating circuit by the heat pump.
- <u>Inverter</u>: the fan and compressor speeds are modulated according to the heating requirements. This technology enables you to save on energy and operate on a single-phase power supply, whatever the heat pump's output, by avoiding heavy intensities on start-up.
- <u>COP</u> (coefficient of performance): this is the relationship between the energy transmitted to the heating circuit and electrical energy consumed.

#### 1.3 **Specifications**

11 Single phase	14 Single phase	11 3-Phase	14 3-Phase	16 3-Phase
e)				
10,80	13,50	10,80	13,50	15,17
10,80	12,00	10,80	13,00	13,50
9,23	11,54	10,10	12,60	13,00
9,16	11,45	10,02	12,50	13,00
7,74	9,67	9,48	11,80	12,96
7,51	9,25	9,20	10,60	11,90
2,54	3,23	2,51	3,20	3,70
4,32	5,08	4,28	5,18	5,40
2,84	3,72	3,01	3,81	4,00
4,58	5,92	4,63	6,00	6,37
3,13	4,03	3,60	4,61	5,14
4,56	5,65	5,08	6,04	6,88
4,25	4,18	4,30	4,22	4,10
2	230		400	
22	25	8,5	9,5	10,5
11,4	14,2	3,7	4,8	5,5
2	26,1		13	
ajustable 3 c	or 6 kW (phase)	(	9 kW (3-phase	e)
2)	k100		2x104	
		70		
5060	5750	5865	6555	7245
		3		
1170 / 2340	1460 / 2920	1170 / 2340	1460 / 2920	1650 / 3290
	92		99	
		39		
		46		
42	43	39	41	42
69	70	66	68	69
		44 / 60		
		16		
		0 / +45		
		-25 / +35		
-		45		
-		60		
-		8		
		5/8		
		3/8		
		2500		
		2500 42		
		42		
		42 5		
		42		
	phase re)  10,80 10,80 9,23 9,16 7,74 7,51  2,54 4,32 2,84 4,58 3,13 4,56 4,25  22 11,4 2 ajustable 3 of 25  5060  1170 / 2340	phase phase re)  10,80 13,50 10,80 12,00 9,23 11,54 9,16 11,45 7,74 9,67 7,51 9,25  2,54 3,23 4,32 5,08 2,84 3,72 4,58 5,92 3,13 4,03 4,56 5,65 4,25 4,18  230 22 25 11,4 14,2 26,1 ajustable 3 or 6 kW (phase) 2x100  5060 5750  1170/2340 1460/2920  92	10,80	phase phase 11 3-Priase 14 3-Priase re)  10,80 13,50 10,80 13,00  9,23 11,54 10,10 12,60  9,16 11,45 10,02 12,50  7,74 9,67 9,48 11,80  7,51 9,25 9,20 10,60  2,54 3,23 2,51 3,20  4,32 5,08 4,28 5,18  2,84 3,72 3,01 3,81  4,58 5,92 4,63 6,00  3,13 4,03 3,60 4,61  4,56 5,65 5,08 6,04  4,25 4,18 4,30 4,22  230 400  22 25 8,5 9,5  11,4 14,2 3,7 4,8  26,1 13  ajustable 3 or 6 kW (phase) 9 kW (3-phase 2x100 2x104  70  5060 5750 5865 6555  3  1170/2340 1460/2920 1170/2340 1460/2920  92 99  39  46  42 43 39 41  69 70 66 68  44/60  16  0 /+45  -25/+35  45  60  8

Sound pressure level in (x)m of the device, 1,5m of the ground, the open field.
The sound power level is a laboratory measure of the emitted sound power but contrary to the noise level, it doesn't correspond to the measure of the felt.

Refrigerant R410A (as per the standard EN 378.1).
 Factory charge of refrigerant R410A.

<sup>&</sup>lt;sup>5</sup> Taking into account the possible additional load of refrigerant R410A (seepage 20).

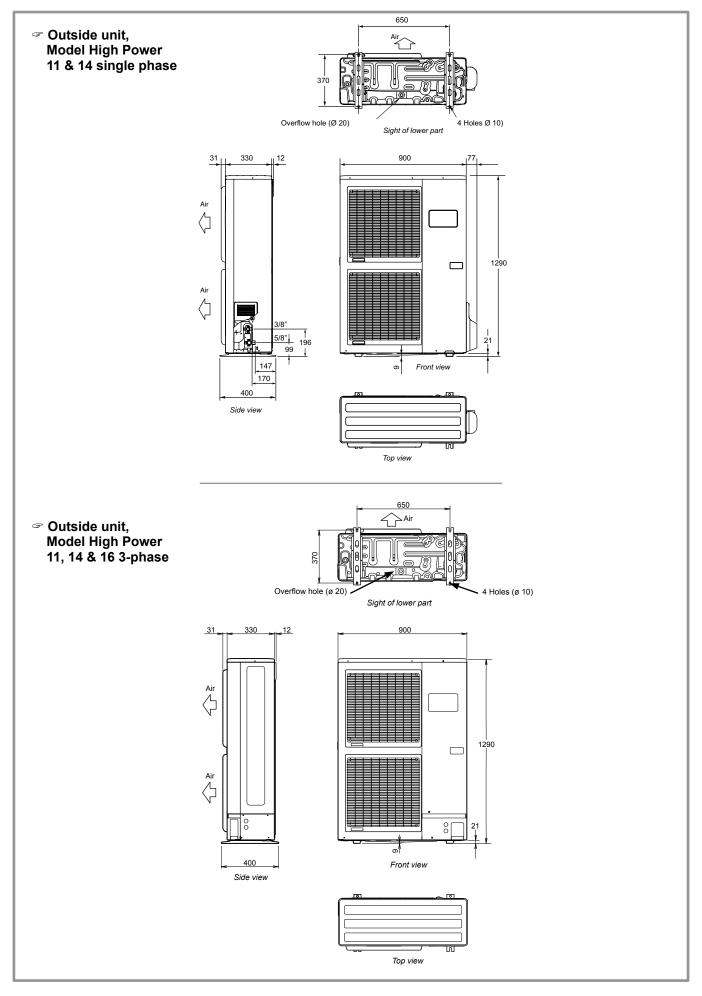


figure 1 - Dimensions in mm

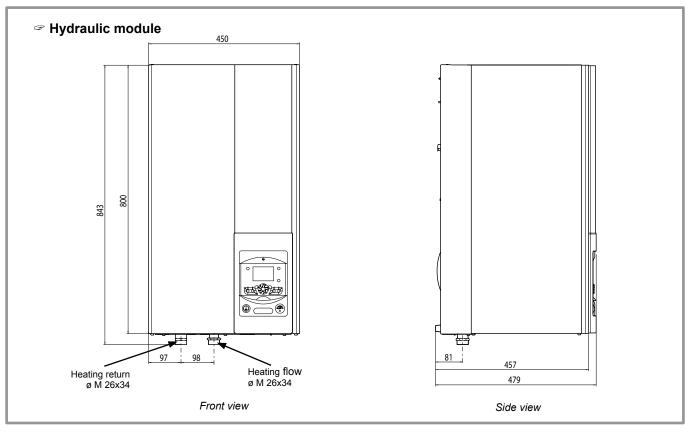
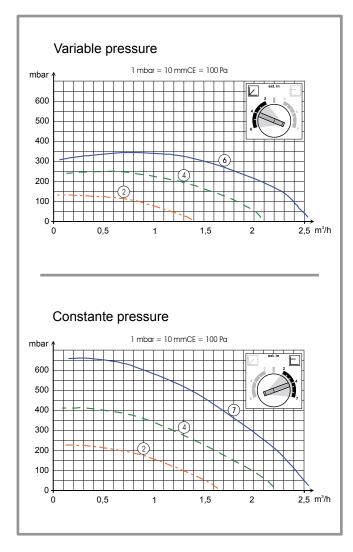


figure 2 - Dimensions in mm





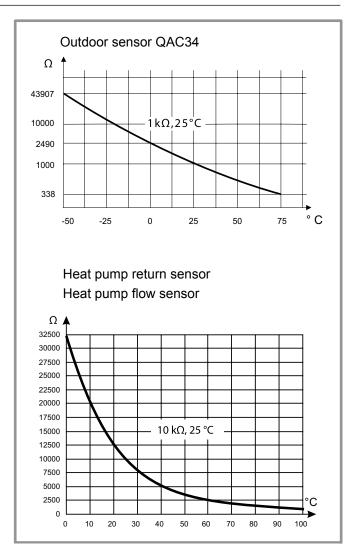


figure 4 - Ohmic values of the sensors (Hydraulic module)


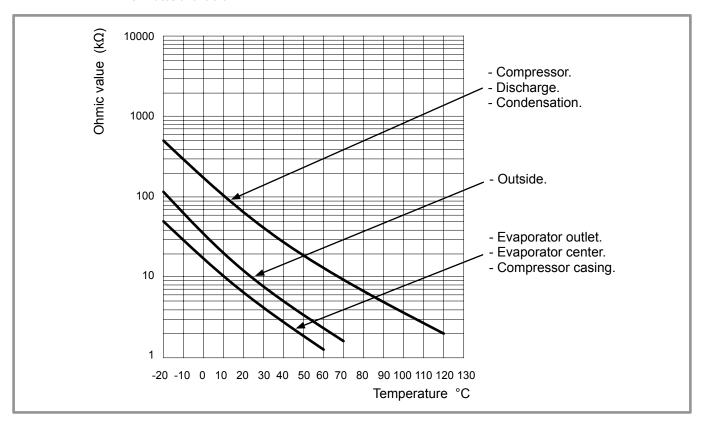


figure 5 - Ohmic values of the sensors (outside unit)

## 1.4 Description

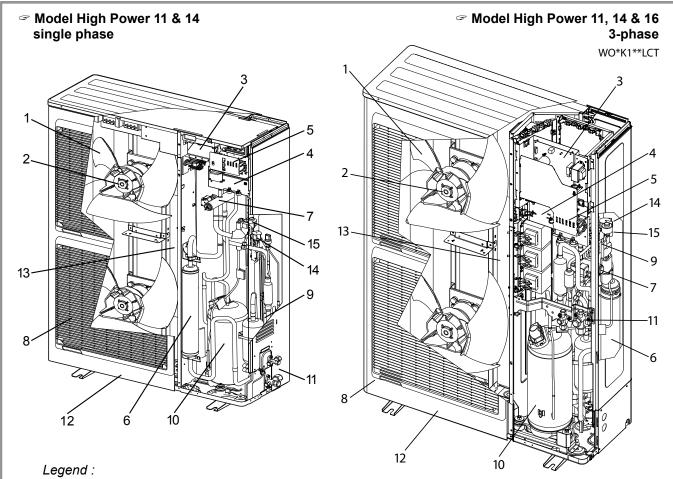

- 1 Low-noise, high-output coil.
- 2 Electric variable speed "inverter" motor.
- 3 "Inverter" control module.
- 4 Vacuum start (pump down) and control light.
- 5 Connection terminal blocks (power and interconnection).
- 6 Refrigerant accumulator bottle.
- 7 Cycle reversing valve.
- 8 Anti-corrosion treated bodywork.
- 9 Electronic expansion valve.
- 10 Noise and temperature insulated "inverter" compressor.
- 11 Refrigeration connection valves (flared connectors) with protective caps.
- 12 Holding tank with condensate drain hole.
- 13 High-performance exchange surface evaporator ; anti-corrosion treated hydrophilic aluminium fins and grooved copper tubes.
- 14 Solenoid valve for liquid injection.
- 15 Electric expansion valve for liquid injection.

figure 6 - Outdoor unit components

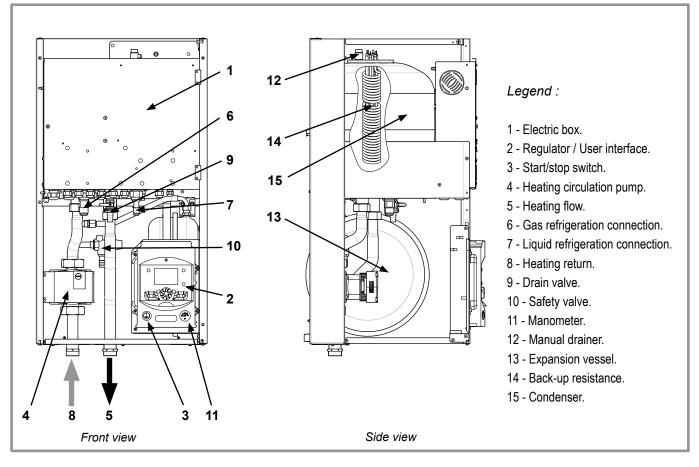


figure 7 - Hydraulic unit components

## 1.5 Operating principle

The heat pump transmits the energy contained in the surrounding air into the dwelling to be heated.

The heat pump consists of four main elements, in which a refrigerant fluid (R410A) circulates.

- In the evaporator (ref. **13**, figure 6, page 9): The energy is taken from the surrounding air and is transmitted to the refrigerant. Because it has a low boiling point, it changes from the liquid state to the vapour state, even in cold weather (down to -15 °C outdoor temperature).
- In the compressor (ref. **10**, figure 6, page 9) : The vaporised refrigerant brought to high pressure and takes on more calories.
- In the condenser (ref. **14**, figure 7, page 10): The energy in the refrigerant is transmitted to the heating circuit. The refrigerant returns to liquid state.
- In the expansion valve (ref. **9**, figure 6, page 9): The liquefied refrigerant is brought back to low pressure and returns to its initial temperature and pressure.

The heat pump is equipped with a controller, which controls the room temperature based on the outdoor temperature measurement and governed by the temperature control. The room thermostat (option) provides a corrective action for the temperature control.

The hydraulic unit is fitted with an electrical back-up system or, optionally, boiler connection which starts up in order to provide additional heating during the coldest periods.

#### Regulation functions

- The heating circuit's initial temperature is controlled by the temperature control.
- The power of the outdoor unit is modulated according to flow heating temperature via the "inverter" compressor.
- Control of the electrical back-up heating.
- The daily timer program enables you to define the periods for comfortable or reduced ambient temperature.
- Summer/winter mode switchover is automatic.
- Control of the supplementary boiler\* (options).
- The room thermostat (option)\*: provides a corrective action for the temperature control.
- Control of a second heating circuit\*.
- Domestic hot water\*: Heating time program, control of the operation of the DHW circulation pump.
- Managing the cooling\*.
- Control of swimming pool heating\*.
- \* If the heat pump is equipped with optional equipment and the associated kits.

#### Protection functions

- Anti-legionella cycle for domestic hot water.
- Frost protection: Frost protection cuts in if the lowtemperature point of the heating circuit falls below 5 °C (provided that the heat pump's electrical power supply is not interrupted).

#### Domestic hot water (DHW) operating principle

Two domestic hot water (DHW) temperatures can be parametered: nominal temperature (line 1610 to 55 °C) and reduced temperature (line 1612 to 40 °C).

The default heat pump program (line 560, 561 and 562) is set for nominal temperature from 0:00 to 5:00 and from 14:30 to 17:00 and for reduced temperature for the rest of the day. This optimizes electrical consumption while ensuring comfortable availability of hot water.

Setting for reduced temperature can be useful to prevent the DHW from switching on too often and for too long during the day.

The production of domestic hot water (DHW) is triggered when the temperature in the tank falls 7°C (setting from line 5024) below the set temperature.

The heat pump produces the domestic hot water, which is then additively heated, if required, by electrical back-up heating inside the tank. To ensure a DHW setting over 45°C, the electrical back-up heating or the boiler must be left on.

Depending on how the parameter (1620) is set, nominal temperature can be reached 24h/day or only at night or depending on the heat pump program.

If the contract concluded with the energy provider includes a subscription to day/night tariff, the electrical backup is subordinate to the supplier's power tariff and the comfort temperature may only be reached at night.

If no particular contract is concluded, the comfort temperature can be reached at any time, including during the day

The production of DHW takes priority over heating; nevertheless the production of DHW is controlled by cycles that control the times assigned to the heating and the production of DHW in the event of simultaneous demand.

A function to switch from "reduced" to "nominal" is provided on the front of the user interface. (see ref. **5**, figure 34, page 34).

Anti-legionella cycles can be programmed.

## • Fan convectors with integrated control system Do not use a room sensor in the area.

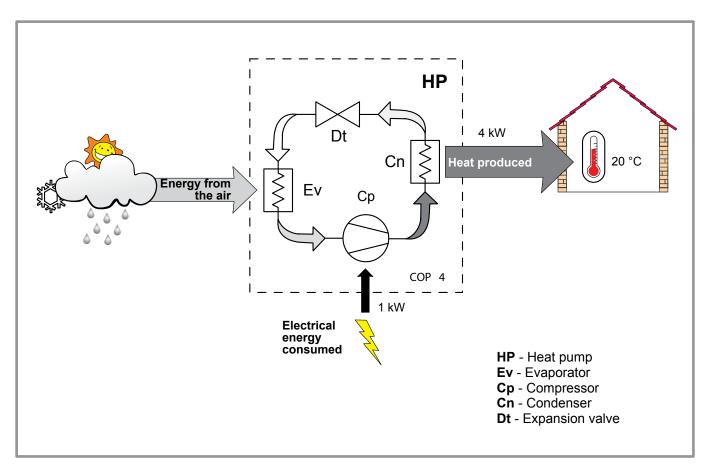


figure 8 - Heat pump operating principle

## 2 Installation

## 2.1 Regulation installation and maintenance conditions

The appliance must be installed and the maintained by an approved professional in accordance with the prevailing regulations and code of practice, in particular:

- The legislation on the handling of refrigerants.
- Heating installation with floor heating system.
- Low voltage electrical installations Rules.

## 2.2 Unpacking and reservations

### 2.2.1 Receipt

Carefully check, in the carrier's presence, the general appearance of the appliances and check that the outdoor unit is not laid on its side or back.

In the case of any dispute, state any appropriate reservations to the carrier in writing within 48 hours and send a copy of this letter to the After-Sales service.

#### 2.2.2 Handling

The outdoor unit should not be laid on its side or back during transport.

If not kept upright during transport, the appliance could be damaged through displacement of the refrigerant and deformation of the compressor suspension.

Any damage caused by transportation of the unit lying down is not covered by the warranty.

If necessary the outdoor unit may be tilted only during manual handling (to go through a door or use a staircase). This operation must be conducted very carefully and the appliance must be immediately restored to upright position.

## 2.2.3 Accessories provided

Accessories provided with the outdoor unit (figure 9). Accessories provided with the hydraulic unit (figure 10).

## 2.3 Installation position

The choice of the position for installation is particularly important insofar as any later movement is a delicate operation requiring the intervention of a qualified person.

Choose the site of the outdoor unit and the hydraulic unit after discussion with the customer.

Observe the maximum and minimum distances between the hydraulic unit and the outdoor unit (figure 15, page 18), the guarantee of the performances and the system's service life depend on this.

### 2.4 Installation of the outdoor unit

#### 2.4.1 Installation precautions

- The outdoor unit must only be installed outdoor (outdoors). If a shelter is required, it must have broad openings on the 4 walls and observe the installation clearances (figure 11).
- Choose a site that is preferably sunny and sheltered from strong cold predominant winds (mistral, tramontana, etc...).
- The unit must be easily accessible for future installation and maintenance work (page 15).
- Ensure that it is possible to make the connections to the hydraulic unit easily.
- The outdoor unit is able to withstand bad weather but avoid installing in a position where it is likely to be exposed to significant dirt or flowing water (under a defective gutter for example).
- Water may drain away from the outdoor unit when it is operating. Do not install the appliance on a paved terrace; choose a well-drained place (e.g. gravel or sand). If the installation is in an area where the temperature can be lower than 0°C for a long period, check that the presence of ice does not present any danger. A drainage pipe can also be connected to the outdoor unit (see figure 12, page 14).

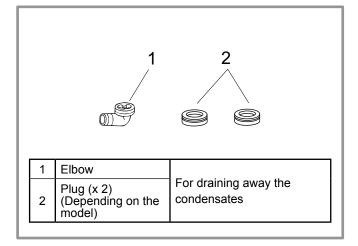


figure 9 - Accessories provided with the outdoor unit

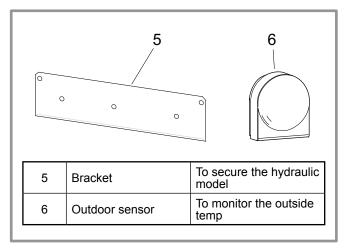


figure 10 - Accessories provided with the hydraulic unit

- Nothing should obstruct the air circulation through the evaporator and from the fan (figure 11).
- Keep the outdoor unit away from heat sources and inflammable products.
- Make sure the appliance not disturb the surrounding area or users (noise level, draught generated, low temperature of the air being blown out, with the risk of freezing plants in its path).
- The surface on which the appliance is installed must:
- be permeable (soil, gravel, etc),
- support its weight easily,
- provide a solid fixing and
- not transmit any vibration to the dwelling. (Anti-vibratory blocks are available as an option).
- The wall brackets is strongly discouraged due to vibration.

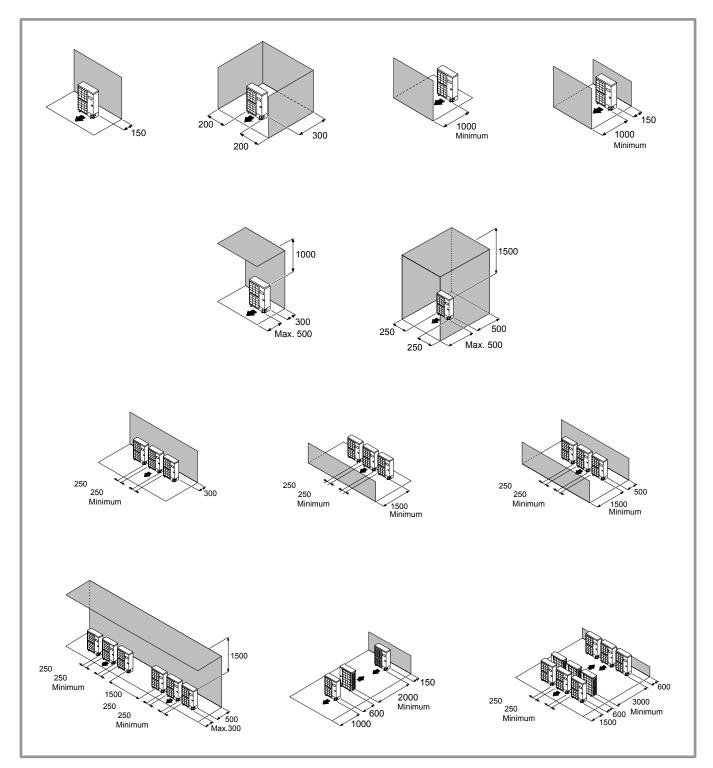


figure 11 - Minimum installation clearances around outside unit (all models)

### 2.4.2 Outdoor unit positioning

The outdoor unit must be raised at least 50 mm above ground level. In areas prone to snow, this height should be increased but should not exceed 1,5 m (figure 12).

- Fasten the outdoor unit by means of screws and rubber tightening or toothed lock washers to avoid their coming loose.

## 

In the area with heavy snowfall, if the intake and outlet of outdoor unit is blocked with snow, it might become difficult to get warm and it is likely to cause of the breakdown.

Please construct a canopy and a pedestral or place the unit on high stand (local configured).

- Set the unit on a strong stand, such as one made of concrete blocks to minimize shock and vibration.
- Do not set the unit directly on the ground because it will cause trouble.

#### 2.4.3 Condensate drain hose

(see figure 12).

If the use of a discharge pipe is imperative:

- Use the elbow provided (**C**) to connect a 16mm-diameter hose for draining away the condensate.
- Use the stopper or stoppers provided (**B**) to block the opening of the condensate tank.

Allow for the condensate to flow away under the force of gravity (waste water, rain water, gravel bed).

If the installation is made in an area where the temperature can be lower than 0°C for a long period, provide the drain pipe with a trace resistance to avoid it icing up. The trace resistance must heat not only the pipe but also the bottom of the appliance's condensate collection tank.

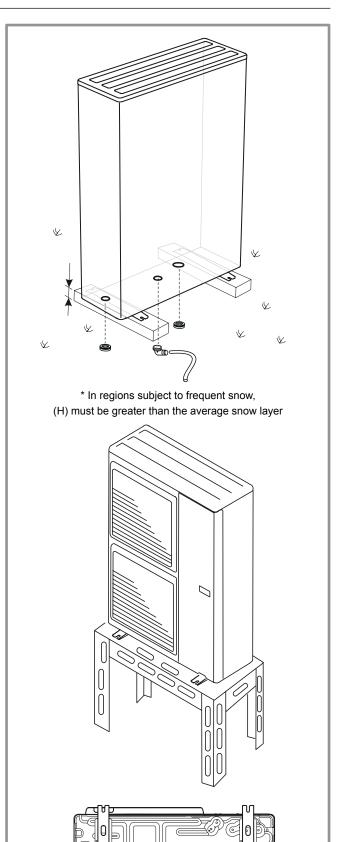



figure 12 - Positioning of the outside unit, draining away the condensate

4 holes (ø 12 mm)

## 2.5 Installing the hydraulic unit

### 2.5.1 Installation precautions

- The room in which the appliance operates must comply with the prevailing regulations.
- To facilitate maintenance and to allow access to the various components, we recommend that you provide sufficient space all around the hydraulic unit.

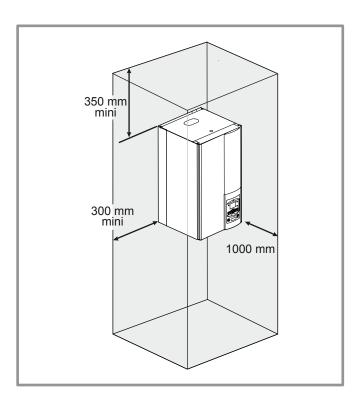

 Be careful not to bring inflammable gas near to the heat pump during its installation, in particular when it requires brazing. The appliances are not fireproof and should therefore not be installed in a potentially explosive atmosphere.

## 2.5.2 Positioning the hydraulic unit

- Fix the support solidly (4 screws and plugs) to a flat, hard-wearing wall (not a light partition) ensuring that it is correctly levelled.
- Hook the appliance onto its support.

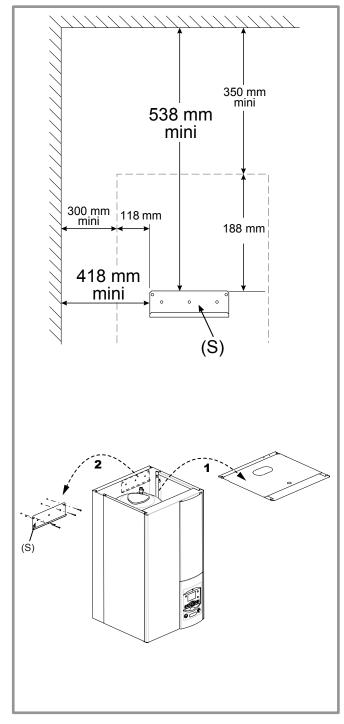


figure 13 - Mounting bracket

## 2.6 Refrigeration connections

### This appliance uses refrigerant R410A.

Comply with the legislation for handling refrigerants.

#### 2.6.1 Rules and precautions

 After every intervention on the refrigeration circuit and before final connection, take care to replace the plugs in order to avoid any pollution from the refrigeration circuit.


#### • Tools

- Set of manometers with hoses exclusively reserved for HFCs (Hydrofluorocarbons).
- Vacuum pump specially for HFCs.
- Provision on using tools that have been in contact with HCFCs (R22 for example) or CFCs.
- Use of a traditional vacuum pump is authorized if, and only if, it is fitted with a non-return valve on the suction side.

The manufacturer declines any liability with regard to the guarantee if the above instructions are not observed.

#### Flared connections

- Lubrication with mineral oil (for R12, R22) is forbidden.
- Only lubricate with polyolester refrigeration oil (POE).
   If POE is not available, fit without lubrication.

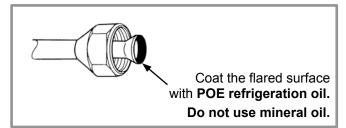

## • Brazing on the refrigeration circuit (if necessary)

- Silver brazing (40% minimum recommended).
- Brazing only under dry nitrogen internal flux.
- To eliminate any filings in the pipes, use dry nitrogen to avoid introducing any humidity that may adversely affect the appliances operation. In general, take every precaution to avoid humidity penetrating into the appliance.
- Proceed to insulate the gas and liquid pipes to avoid any condensation. Use pipe insulators resistant to temperatures over 90°C. In addition if the humidity level in areas where the refrigeration pipes are installed is expected to exceed 70%, protect the pipes with pipe insulators. Use an insulating material thicker than 15mm if the humidity level is 70~80%, and an insulating material thicker than 20mm if the humidity exceeds 80%. If the recommended thicknesses are not observed under the conditions described above. condensation will form on the surface of the insulation material. Lastly, take care to use pipe insulators whose thermal conductivity is 0.045 W/mK or less when the temperature is 20°C. The insulation must be impermeable to resist the passage of steam during the defrosting cycles (fibreglass wool is prohibited).

## 2.6.2 Refrigeration connections

The outdoor unit must be connected to the hydraulic unit with copper pipes and connections (refrigeration quality), insulated separately.

Comply with the pipe diameters and the permitted pipe lengths (figure 15, page 18).

## The minimum length of the refrigeration connections is 5 m for correct operation.

The appliance will be excluded from guarantee if it is used with refrigeration connections less than 5 m long.

Manipulate the pipes and take them through walls with protective plugs in place.

## 2.6.3 Accessing the hydraulic module's refrigerant connections

- Remove the front panel (2 screws A).
- Remove the left-hand panel (2 screws B).

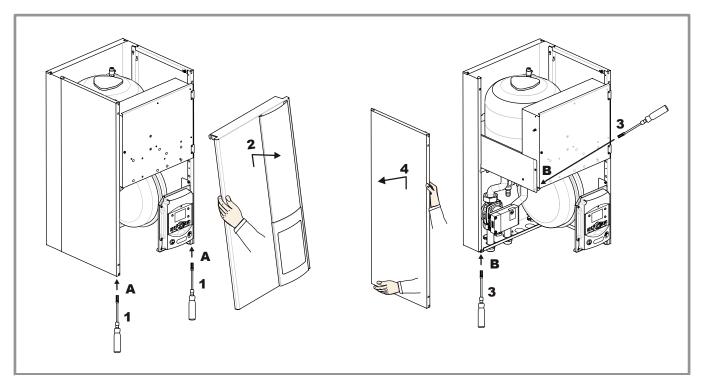


figure 14 - Removing the casing

### 2.6.4 Creating the flarings


- Cut the pipe to an appropriate length with a pipe-cutter without deforming it.
- Carefully deburr it, holding the pipe towards the bottom to avoid introducing filings into the pipe.
- Remove the flared connection nut situated on the valve to be connected and slip the pipe into the nut.
- Proceed to flare, letting the pipe overflow the flaring tool.
- After flaring, check the condition of the working radius (L). This must not show any scratch or trace of any fracturing. Also check the dimension (B).

### 2.6.5 Shaping the refrigeration pipes

The refrigeration pipes must be shaped only on a bending machine or with a bending spring in order to avoid any risk of crushing or breaking them.

### 

- Remove the insulation material locally to bend the pipes.
- Do not bend the copper to any angle over 90°.
- Never bend pipes more than 3 times in the same position otherwise traces of fracturing may appear (from strain-hardening the metal).

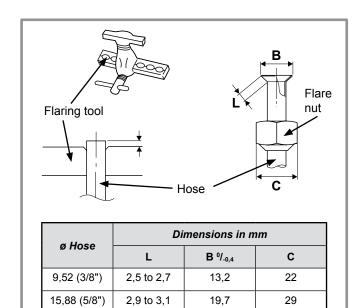

	HP model	Waterstage High Power single phase & 3-phase			
	nr model	gas	fluid		
Outdoor unit	connections	5/8"	3/8"		
	Diameter	(D1) 5/8"	(D2) 3/8"		
Refrigeration	Minimum length (L)	5			
connections	Maximum length* (L)	15			
	Maximum length** (L)	2	0		
	Maxi level difference** (D)	15			
Hydraulic unit	t connections	5/8"	3/8"		

<sup>\*:</sup> without additional charge of R410A.

<sup>\*\*:</sup> Taking into account the possible additional load of refrigerant R410A (see para. "Additional charge", page 20).


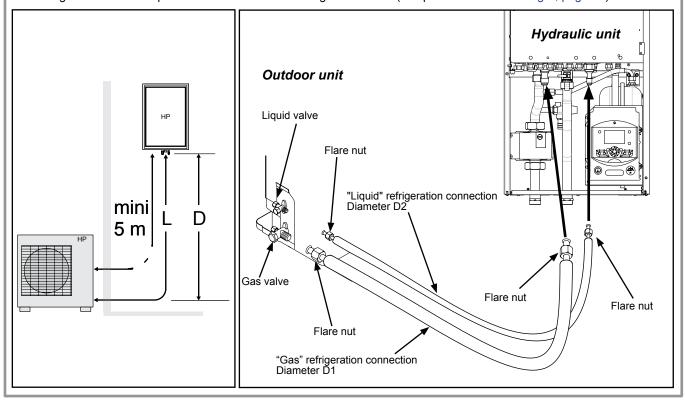


figure 15 - Connecting the flared connections (Pipe diameters and permissible lengths)

### 2.6.6 Connecting the flared connections

- The small pipe must always be connected before the large one.
- Take particular care positioning the tube opposite its connector so as not to risk damaging the threads. A carefully aligned connector can be fitted easily by hand without much force being required.
- The refrigeration circuit is very sensitive to dust and humidity, check that the area around the connection is clean and dry before removing the plugs protecting the refrigeration connectors.
- Remove the plugs from the pipes and the refrigeration connections.
- Present the pipe to the flared connector and screw the nut by hand while holding the connector with a wrench until contact.
- Warning! Avoid positioning the Gas pipe in front of the pump.
- Comply with the indicated tightening torques.

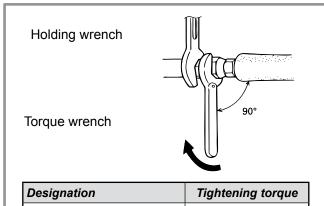

Designation	Tightening torque
Flare nut 9,52 mm (3/8")	32 to 42 Nm
Flare nut 15,88 mm (5/8")	63 to 77 Nm
Plug (A) 3/8"	20 to 25 Nm
Plug (A) 5/8"	30 to 35 Nm
Plug (B) 3/8", 5/8"	10 to 12 Nm

figure 16 - Tightening torque

## 2.7 Filling the installation with gas

- This operation is reserved for installers familiar with the legislation for handling refrigerants.
- Creating a vacuum with a vacuum pump is essential.
- Never use equipment used beforehand with any refrigerant other than a HFC.

## 2.7.1 Example of commissioning procedure

#### First seal test

- Remove the protective plugs (**B**) from the charging hole (Schrader) in the gas valve (large diameter).
- Connect the hose to the manifold.
- Connect the bottle of nitrogen to the manifold.
- Pressurize the refrigerant circuit to 10 bar with nitrogen.
- Leave the circuit under pressure for half a day.
- Check that the pressure has not fallen.
- Look for and repair any leaks, and then recommence the test.
- Once the pressure has remained steady for a few hours, empty the nitrogen.

## • Creating a vacuum and filling the refrigeration connections with gas

- Connect the vacuum pump to the manifold.
- Create a vacuum until the residual pressure in the circuit falls below 0.01 bar.
- Let the pump continue to operate for another 30 minutes after reaching the vacuum.
- Close the blue valve on the set of manometers and then stop the vacuum pump without disconnecting any of the hoses in place.
- Leave for at least half a day.

If after this time the pressure has risen, there is a leak. Find and repair the leak and then recommence vacuum testing.

When the pressure remains steady for a few hours after stopping the vacuum pump, the circuit can be considered airtight.

- Remove the access plugs (A) from the valve controls.
- First of all fully open the small valve and then the large one using a hex key (counterclockwise direction) without forcing excessively against the stop.
- Remove the blue hose rapidly.
- Refit the 2 plugs and tighten them to the recommended tightening torque (figure 16, page 18).

The outdoor unit does not contain any additional refrigerant, enabling the installation to be purged.

Flushing is strictly forbidden.

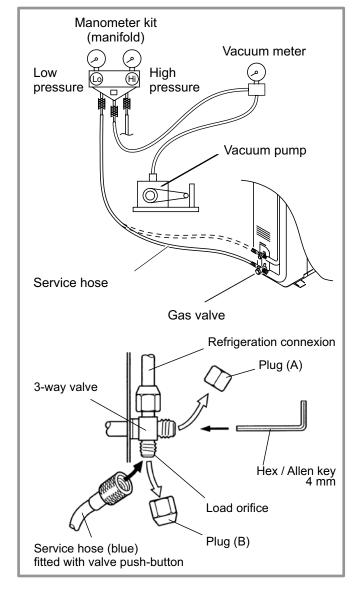


figure 17 - Extraction under vacuum and gassing

#### 2.7.2 Sealing test

Once the refrigeration circuit has been gassed as described above, check that all the refrigeration connectors are gas-tigh (4 connectors).

The sealing test must be performed with an approved gas detector. If the flarings have been made correctly, there should be no leaks.

#### 

- Bring the gas into the outdoor unit (pump down).
- Make the connection again.
- Repeat the commissioning procedure.

#### 2.7.3 Additional charge

	50 g of R410A per additional meter		
Length of the connections	15 m	20 m max.	
Additional charge	none	250 g	

The charge in the outdoor units corresponds to the maximum distances between the outdoor unit and the hydraulic unit defined in figure 15. If the distances are greater, an additional charge of R410A is required. The additional charge depends on the distance between the outdoor unit and the hydraulic unit for each type of appliance. The additional charge of R410A must necessarily be made by an approved refrigeration engineer.

### • Example of additional charge :

An outdoor unit 17 m away from the hydraulic unit will require an additional charge of :

Additional charge =  $(17 - 15) \times 50 = 100 \text{ g}$ .

The charge must be introduced after creating the vacuum and before the hydraulic unit is filled with gas, as follows:

- Disconnect the vacuum pump (yellow hose) and connect a bottle of R410A instead <u>in the liquid</u> <u>extraction position</u>.
- Open the bottle's valve.
- Bleed the yellow hose by loosening it slightly on the manifold side.
- Place the bottle on scales with a minimum accuracy of 10 g. Note the weight.
- Carefully open the blue valve slightly and check the value shown on the scales.
- As soon as the value displayed has dropped by the value for the calculated additional charge, close the bottle and disconnect it.
- Then rapidly disconnect the hose connected to the appliance.
- Proceed to fill the hydraulic unit with gas.

#### Warning

- Only use R410A!
- Only use tools suitable for R410A (set of manometers).
- Always charge in the liquid phase.
- Never exceed the length or the maximum difference in level.

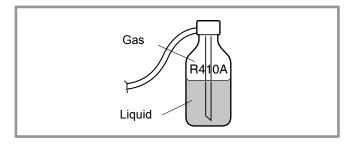


figure 18 - Gas bottle R410A

## 2.7.4 Pump down operation (Refrigerant collecting operation) single phase outdoor unit

### • Preparation for pump down

Confirm that the power (ref. **3**, figure 7, page 10) is off, and then open the service panel.

### Pump down procedure

- **1** Check the 3-way valves (both at the liquid side and gas side) are opened.
- 2- Turn the power on.

POWER	ERROR	PUMP	LOW	NOISE	PEAK CUT		
MODE		DOWN (L1)	(L2)	(L3)	(L4)	(L5)	(L6)
•	0	0	0	0	0	0	0

- **3**- Press "PUMP DOWN" switch for 3 seconds or more after 3 minutes after power on.

POWER	ERROR			NOISE	PEAK CUT		
MODE		ERROR DOWN (L1)	(L2)	(L3)	(L4)	(L5)	(L6)
•	0	•	0	0	•	•	•

LED display lights on as shown in the above figure, and the fans and the compressor start operating. If the "PUMP DOWN" switch is pressed while the compressor is operating, the compressor will stop, then start again in about 3 minutes.

4- LED display will change as shown below about
 3 minutes after the compressor starts. Fully close the 3-way valve on the liquid pipe side at this stage.


POWER	ERROR	EDDOD	PUMP LOW NOISE ERROR DOWN		PEAK CUT		
MODE		(L1)	(L2)	(L3)	(L4)	(L5)	(L6)
•	0	•	0	0	0	•	•

If the valve on the liquid pipe side is not closed, the pump down cannot be performed.

- **5**- When LED display changes as shown in the below figure, close the 3-way valve on the gas pipe side tightly.

POWER	ERROR	EDDOD	PUMP ERROR DOWN		LOW NOISE		PEAK CUT		
MODE		(L1)	(L2)	(L3)	(L4)	(L5)	(L6)		
•	0	•	0	0	0	0	•		

- If the valve on the gas pipe side is not closed, refrigerant may flow into the piping after the compressor stops.

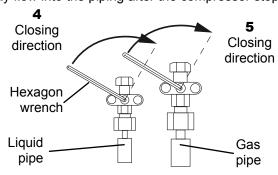

- **6**- LED display changes after 1 minute as shown in the figure below:

POWER	ERROR	EDDOD	PUMP ERROR DOWN		LOW	LOW NOISE		PEAK CUT		
MODE		(L1)	(L2)	(L3)	(L4)	(L5)	(L6)			
•	0	•	0	0	0	0	0			

Fans and compressor stop automatically. If the pump down is successfully completed (the above LED display is shown), the outdoor unit remains stopped until the power is turned off.

- 7- Turn the power off.

POWER	EDDOD	RROR PUMP LOW NOISE DOWN (L1) (L2) (L3)		PEAK CUT			
MODE	ERROR			(L3)	(L4)	(L5)	(L6)
0	0	0	0	0	0	0	0

#### Note:

- To stop pump down, press the "PUMP DOWN" switch again.
- To start the pump down again after the compressor is automatically stopped due to an error, turn the power off and open the 3-way valves. Wait 3 minutes, turn the power on and start the pump down again.
- When starting the operation after completion of the pump down, turn the power off, and then open the 3-way valves.

## 2.7.5 Pump down operation (Refrigerant collecting operation) 3-phase outdoor unit

Perform the following procedures to collect the refrigerant.

- **1** Turn OFF the start/stop switch (ref. **3**, figure 7, page 10).
- **2** Remove the front panel. Then turn ON the DIP SW 1 on the interface card.
- 3- Turn ON the start/stop switch.
   (Green and Red LED on the board start flashing;
   1 sec. on / 1 sec. off repeated).
- 4- The outdoor unit begins cooling operation about 3 minutes after switching ON.
   Close the liquid valve on the outdoor unit 1 minute after operation starts.
- 5- Close the gas valve on the outdoor unit 1-2 minutes after closing the liquid valve, while the outdoor unit keeps running.
- 6- Disconnect the power supply.

#### Remarks:

- Make sure to turn OFF the start/stop switch before touching DIP SW.
- The pump down operation cannot be activated even if DIP SW is changed while heat pump's power is on.
- Do not forget to turn back DIP SW 1 on the interface card to OFF, after the pump down operation has been completed.
- When the pump down operation is repeated, temporarily turn OFF the start/stop switch after opening the closed valves (both liquid and gas).
- Then turn ON the start/stop switch again after 2 3 minutes and perform the pump down operation.

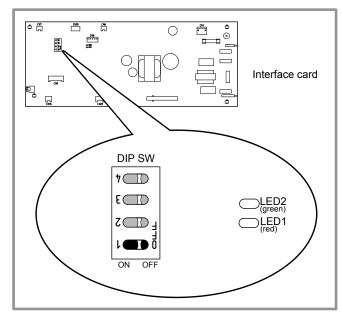


figure 19 - Location of DIP switches and diodes on the hydraulic unit interface card

## 2.8 Hydraulic connecting

#### 2.8.1 General

The connection must comply with good trade practice according to local building regulations.

The heating circulating pump is built into the hydraulic unit. Connect the central heating pipes to the appliance, complying with the direction of circulation.

The pipe between the heat pump and the heat collector must be at least one inch in diameter (26x34 mm).

Calculate the diameter of the pipes according to the flow rates and the lengths of the hydraulic systems.

Tightening torque: 15 to 35 Nm.

Use union connectors to facilitate removing the hydraulic unit.

Preferentially use connection hoses to avoid transmitting noise and vibrations to the building.

Connect the drains from the drain valve and the safety valve to the main sewer system.

Verify the correct functioning of the expansion system. Control the vessel pressure (1 bar) and the safety valve setting.

Reminder: Seal everything when fitting in accordance with prevailing trade practice for plumbing work:

- Use suitable seals (fibre seals, o-rings).
- Use Teflon tape or hemp.
- Use sealing paste (synthetic depending on the case).

The use of glycol is not necessary. If you are using a glycol/water mix, provide for an annual check on the quantity of glycol. Use monopropylene glycol only. **Never use monoethylene glycol.** 

- In certain installations, the presence of different metals can cause corrosion problems; the formation of metal particles and sludge in the hydraulic circuit is then seen.
- In this case, it is advisable to use a corrosion inhibitor in the proportions indicated by its manufacturer.
- Please refer to the chapter "Treatment of domestic and heating water" in our price catalogue.
- It is also necessary to ensure that the treated water does not become aggressive.

#### 2.8.2 Rinsing out the installation

Before connecting the hydraulic unit to the installation, rinse out the heating system correctly to eliminate any particles that may affect the appliance's correct operation.

Do not use solvents or aromatic hydrocarbons (petrol, paraffin, etc.).

In the case of an old installation, provide a sufficiently large decanting pot with a drain on the return from the boiler and at the lowest point in the system in order to collect and remove the impurities.

Add an alkaline product to the water and a dispersant. Rinse the installation several times before filling it definitively.

#### 2.8.3 Filling and purging the installation

Check the pipe fixings, the tightness of the connectors and the stability of the appliance.

Check the direction in which the water is circulating and that all the valves open.

Proceed to fill the installation.

Do not operate the circulating pump while filling. Open all the drain valves in the installation and the bleeder valve for the hydraulic unit (**P**) to remove the air contained in the conduits.

Close the drain and bleeder valves and add water until the pressure in the hydraulic circuit reaches 1 bars.

Check that the hydraulic circuit has been purged correctly. Check there is not a leak.

After the "Start-up" stage (see page 31), once the machine has started, purge the hydraulic unit again (2 litres of water).

Precise filling pressure is determined by the manometric height of the installation.

### 2.8.4 Connecting the Fan convector circuit

Heat pump > 11 kW: It must be installed on this circuit a buffer tank (minimum capacity: 50 liters).

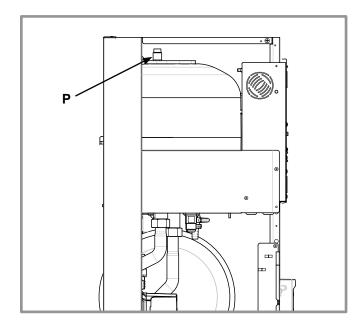


figure 20 - Hydraulic module bleeder valve

## 2.9 Heating circulation pump speed settings

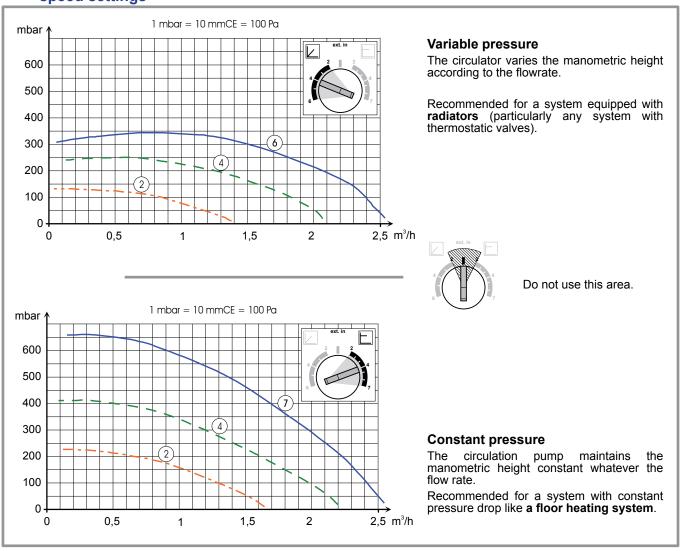


figure 22 - Hydraulic pressures and flow rates available

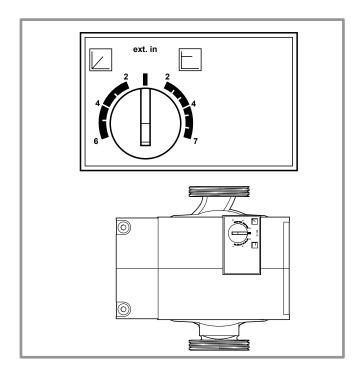


figure 21 - Pump dial

Circulation pump sticking or blocked:

If the motor is blocked, a start cycle is launched.

If the motor remains blocked it will be permanently stopped.

Cut off the electricity supply from the circulation pump for 30 seconds in order to release and authorise another start cycle.

#### 2.10 Electrical connections

Ensure that the general electrical power supply has been cut off before starting any repair work.

## 2.10.1 Characteristic of the electrical supply

The electrical installation must be conducted in accordance with the prevailing regulations.

The electrical connections must only be made when all the other fitting operations have been completed (fixing, assembly, etc.).

#### Warning!

The contract concluded with the energy provider must be sufficient not only to cover the heat pump's power but also the combined sum of all the appliances likely to be operating at the same time. When the power is too low, check with your energy provider the value subscribed to in your contract.

Never use a socket for the power supply.

The heat pump must be supplied with power by special protected leads from the electric panel via 2-pole circuit breakers specially dedicated to the heat pump, Curve D for the outdoor unit, curve C for the electrical heating and domestic water back-ups (see tables on page 25).

The electrical installation must necessarily be equipped with a 30mA differential protection.

This appliance is designed to operate under a nominal voltage of 230 V or 400 V, +/- 10%, 50 Hz (according to model).

#### 2.10.2 General remarks on electrical connections

It is essential to maintain the live-neutral polarity when making the electrical connections.

Tighten the screws on the terminal blocks perfectly. Unsufficient tightening can cause overheating, leading to breakdown or even a fire.

Tighten the cables using the cable glands to prevent the conductors from disconnecting accidentally.

Connection to Earth and Earth bonding continuity are essential.

#### Connecting to screw terminals

### Rigid wires (A)


Rigid wires are always preferable for fixed installations, particularly in a building.

- Always select a wire that complies with the prevailing standards.
- Strip away around 25 mm from the end of the wire.
- With round end pliers, form a loop with a diameter corresponding to the tightening screws on the terminal.
- Tighten the terminal screw firmly onto the loop created.

#### Flexible wires (B)


H07RNF type (or superior quality) flexible wire can be used with certain precautions:

- Strip away around 10 mm from the end of the wire.
- With tightening pliers, fit a round tag with a diameter corresponding to the terminal screw's diameter on the end of the wire.
- Tighten the tag firmly onto the terminal with a screwdriver. We strongly advise against using flexible wires without round tags.
- Always protect the cables when passing them through cable clamps with PVC protective conduit 0,5 to 1 mm thick.

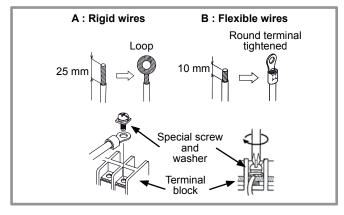

## Connecting to regulation cards

 - Remove the corresponding connector and make the connection.




#### Connecting to spring terminals

#### Rigid wires

- Strip away around 10 mm from the end of the wire.
- Slide the wire into the opening provided for this purpose.
- Push the spring with a screwdriver so that the wire enters the cage.
- Remove the screwdriver and then check that the wire is jammed in the cage by pulling on it.

#### Flexible wires

- Use the ends and proceed as before.

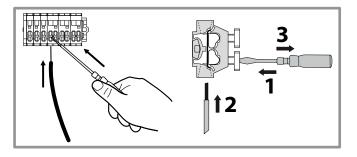

#### 2.10.3 Overview of all the electrical connections

The wiring diagram for the hydraulic unit is shown in detail on figure 42, page 54.

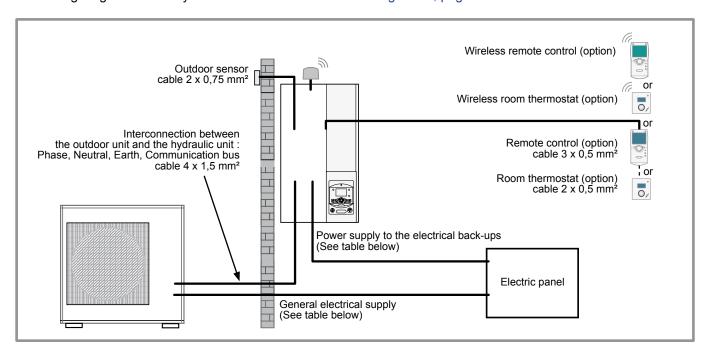


figure 23 - Overall layout of the electrical connections for a simple installation (1 heating circuit)

## 2.10.4 Cable section and protection rating

The cable sections are given for information purposes only and do not exempt the installer from checking that these sections correspond to the requirements and comply with the prevailing standards.

#### Power supply to outdoor unit

Heat pump (sin	gle phase)	Electricity supply 230 V - 50 Hz		
Model	Maxi. power absorbed	Cable connection (phase, neutral, earth)	Curve D circuit breaker size	
High Power 11 single phase	High Power 11 single phase 5060 W		20.4	
High Power 14 single phase	5750 W	3 x 6 mm²	32 A	
Heat pump (3	3-phase)	Electricity supply 400 V - 50 Hz		
Model Maxi. power absorbed		Cable connection (3 phases, neutral, earth)	Curve D circuit breaker size	
High Power 11 3-phase	5865 W			
High Power 14 3-phase	6555 W	5 x 2,5 mm²	20 A	
High Power 16 3-phase	7245 W			

## • Interconnection between the outdoor unit and the hydraulic unit

The hydraulic unit is powered by the outdoor unit by means of a cable with 4 x 1,5 mm<sup>2</sup> (phase, neutral, earth, communication bus).

### Power supply to the electrical back-ups

The hydraulic unit contains two stages of electrical back-ups installed in a heat exchange tank.

Heat pump (HP)	Electrical	ical back-ups Power supply to the electrica		e electrical back-ups
Model	Power	Nominal current	Cable connection Curve C circuit breaker size	
High Power single phase	2 x 3 kW	26,1 A	3 x 6 mm²	32 A
High Power 3-phase	9 kW	13 A	4 x 2,5 mm²	20 A

Figure 2 Ensure that the general electrical power supply has been cut off before starting any repair work.

## 2.10.5 Electrical connections on the single phase outdoor unit side

Access to the connection terminals:

- Remove the front panel. Remove the screws and the front panel.

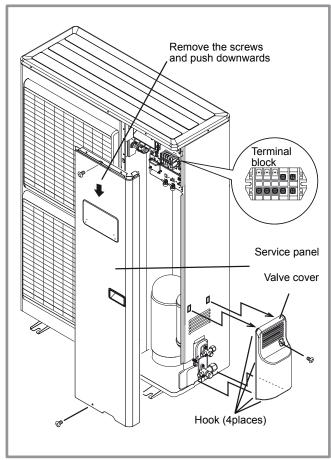


figure 24 - Access to sinlge phase outdoor unit's terminal block

- Make the connections in accordance with the diagram figure 33, page 30.

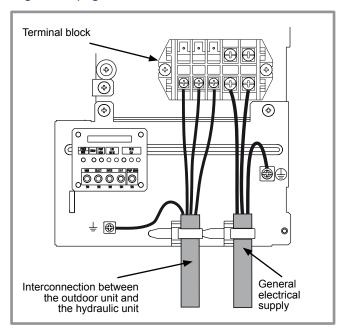


figure 25 - Connections to sinlge phase outdoor unit's terminal block

- Use cable clamps to prevent the conductors from being disconnected accidentally.
- Use the cover plate to hold the cables against the insulating plate.

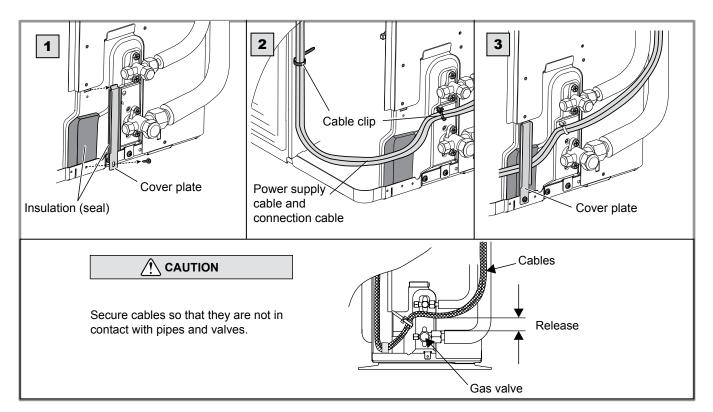


figure 26 - Finalisation of connection to sinlge phase outdoor unit

## 2.10.6 Electrical connections on the 3- phase outdoor unit side

Access to the connection terminals.

- Remove the front panel. Remove the screws and the front panel.

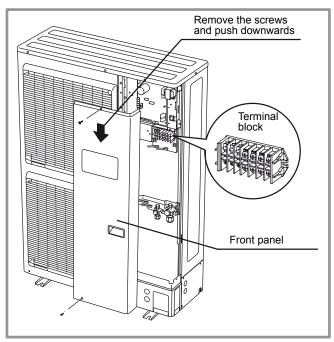


figure 27 - Access to 3-phase outdoor unit's terminal block

- Make the connections in accordance with the diagram figure 33, page 30.

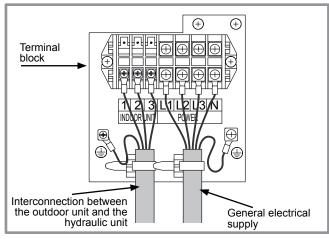


figure 28 - Connections to 3-phase outdoor unit's terminal block

- Use cable clamps to prevent the conductors from being disconnected accidentally.
- Fill in the space where the cables enter the outdoor unit with the insulating plate.

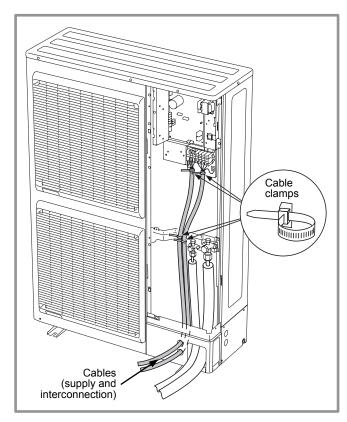


figure 29 - Finalisation of connection to 3-phase outdoor unit

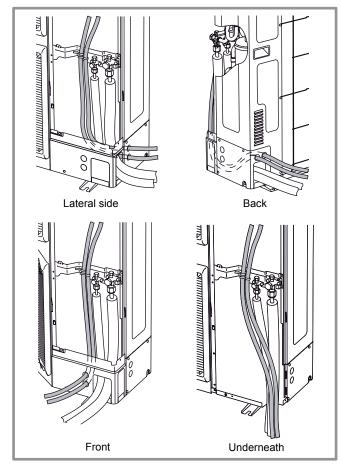


figure 30 - Location of electrical cables and refrigeration connections to 3-phase outdoor unit

## 2.10.7 Electrical connections on the hydraulic unit side

Access to the connection terminals:

- Remove the front panel (2 screws) (figure 14, page 17).
- Open the power control box.
- Make the connections in accordance with the diagram figure 32.

Do not place the sensor lines and the sector supply lines in parallel in order to avoid interferences due to voltage points in the sector supply.

Ensure that all the electrical cables are housed in the spaces provided for this purpose.

## Interconnection between the outdoor unit and the hydraulic unit

Comply with the correspondence between the markings on the hydraulic unit's terminals and those on the outdoor unit when connecting the interconnection cables.

A connection error could cause the destruction of one or other of the units.

## Boiler connection (option)

- Please refer to the instructions supplied with the boiler connection kit.
- Please refer to the instructions supplied with the boiler.

#### Second heating circuit

- Please refer to the instructions supplied with the second circuit kit or/and Regulation extension kit.

## • DHW tank with electrical back-up heating (option)

If the installation is fitted with a DHW tank with electrical back-up heating:

- Please refer to the instructions supplied with the DHW kit.
- Please refer to the instructions supplied with the DHW tank.

## Contract with the power provider

The heat pump's operation can be controlled to suit special contracts (e.g. off-peak, day/night). In particular, domestic hot water (DHW) at Nominal temperature will be produced during the off-peak hours when electricity is cheaper.

- Connect the "Power Provider" contact to input EX2.
- Set the parameter (1620) to "Off-peak hours".
- 230V on input EX2 = "Peak hours" information activated.

## · Power shedding or EJP (peak day removal)

Power limitation is intended to reduce electrical consumption when this is too high compared to the contract with the power provider.

- Connect the power limiting device to input EX1, the back-ups for the heat pump and the DHW stop in the event of over-consumption by the dwelling.
- 230 V on input EX1 = power limitation in progress.

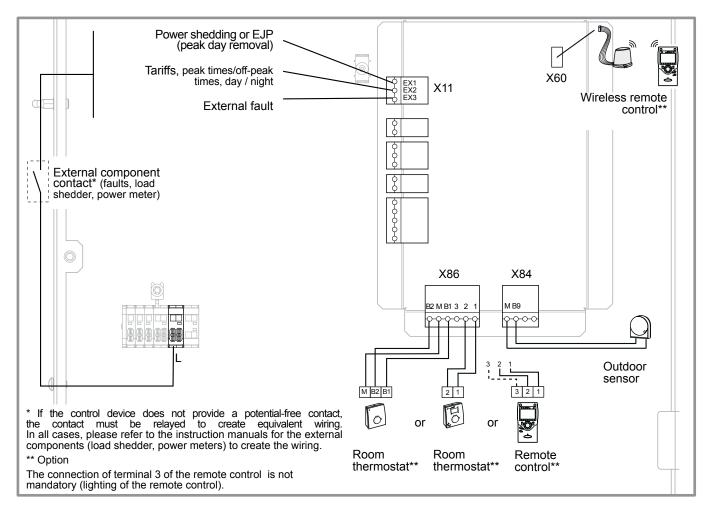


figure 31 - Connections to the heat pump regulator (accessories and options)

## · External faults the heat pump

Any component of carryforward of information (thermostat, pressure switch, etc.) may signal an external problem and stop the heat pump.

- Connect the external component to input EX3.
- 230 V on input EX3 = stoppage of heat pump (the system displays Error 369).
- In the case of a heated floor, insert the heated floor thermal safety in the binding of circulating heated floor.

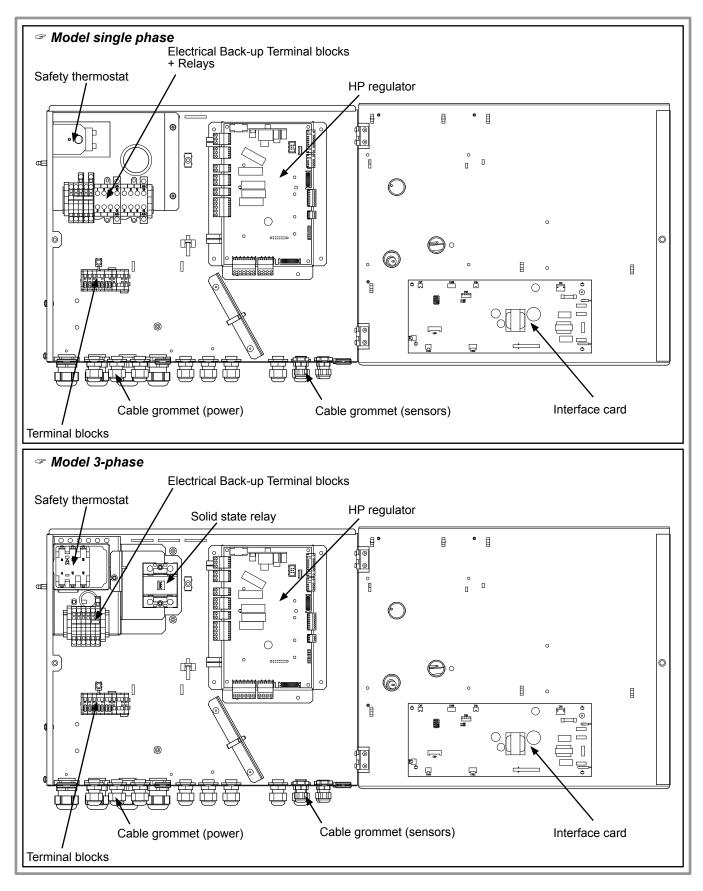
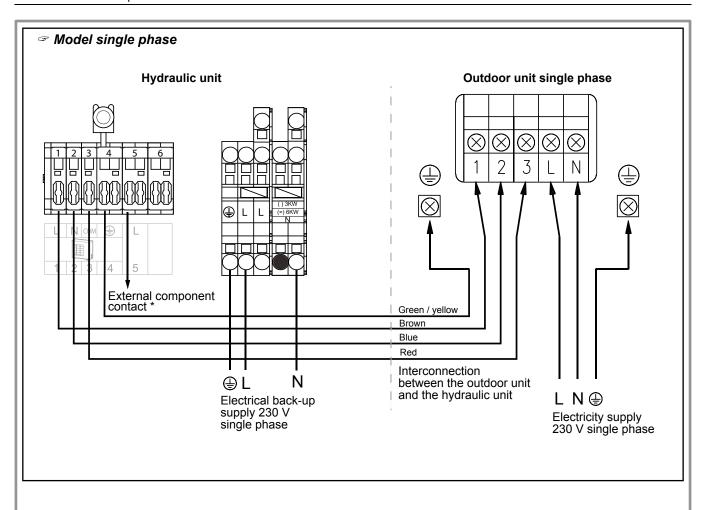


figure 32 - Access to hydraulic model electric box and description



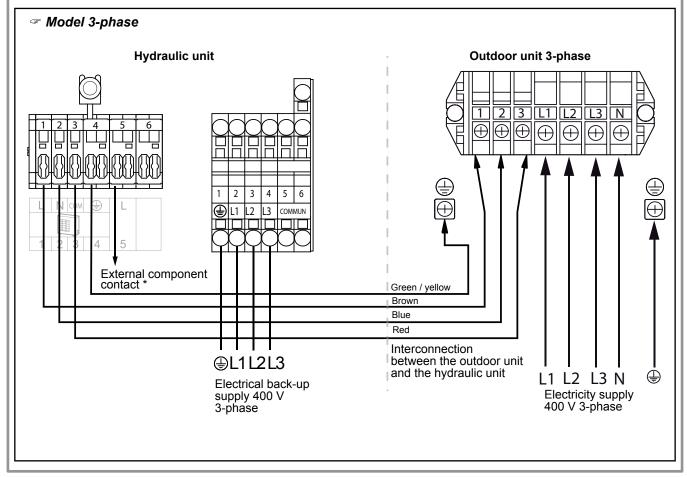


figure 33 - Connection to terminal block and power relays

#### 2.11 Outdoor sensor

The outdoor sensor is required for the heat pump to operate correctly.

Consult the fitting instructions on the packaging.

Place the sensor on the coldest part, generally the northern or north-eastern side.

In any case, it must not be exposed to the morning sun. It must be installed so as to be easily accessible but at least 2.5 m from the floor.

It is essential that it avoid any sources of heat such as flues, the upper parts of doors and windows, proximity to extraction vents, the underneath of balconies and under-eave areas, which would isolate the sensor from variations in the outdoor air temperature.

- Connect the outdoor sensor to the connector **X84** (terminals **M** and **B9**) on the heat pump control board.

## 2.12 Room thermostat and/or remote control

The room thermostat (remote control) is optional.

Consult the fitting instructions on the packaging.

The sensor must be installed in the living room area on a very uncluttered wall, 1,5 m above the floor.

Avoid direct sources of heat (chimney/flue, television, cooking hobs), draughty areas (ventilation, door, etc.).

Air leaks in the seals in the constructions are often translated into cold air blowing through the electrical conduits. Lag the electrical conduits if there is a cold draught on the back of the IR sensor.

## 2.12.1 Installing a room sensor

#### Room thermostat

- Connect the room thermostat to the **X86** connector of the heat pump's regulator board using the connector provided (terminals **1**, **2**).

#### · Wireless room thermostat

- Connect the wireless room thermostat to the connector **X60**.

## 2.12.2 Installing a remote control

#### Remote control

- Connect the remote control to the **X86** connector of the heat pump's regulator board using the connector provided (terminals **1**, **2** and **3**).

#### • Wireless remote control

- Connect the wireless remote control to the connector **X60**.

## 2.13 Commissioning

- Close the installation's main circuit breaker.

On first commissioning (or in winter), in order to allow the compressor to pre-heat, engage the installation's main circuit breaker (power supply to the outdoor unit) some hours before starting up the tests.

- Engage the start/stop switch.

To ensure that inputs EX1, EX2 and EX3 operate correctly: Check that the live-neutral polarity of the electrical supply is correct.

When the power is switched on and every time that the ON/OFF button is switched off and then switched on again, the outdoor unit will take approximately 4 minutes to start up, even if the setting is requesting heating.

The display can show error 370 when the appliance (re)starts. Do not be concerned, the communication between the outdoor and hydraulic unit will re-establish itself in a few moments.

During the regulator initialisation phase, the display shows all the symbols and then "Data, update" and then "State heat pump"

- Make all the specific adjustments to the setting. (Installation configuration):
- Press D.
- Hold down the key of for 3s and select the level of access used with the aid of the knob.
- Confirm with the key  $\bigcirc$ .
- Parameter the heat pump's setting (Consult the settings' list page 38).

On commissioning (or the case of error 10), the electrical back-up heaters are liable to start up even if the outdoor temperature at the time is above the heaters' trigger temperature.

The regulating system uses an average initial outdoor temperature of 0°C and requires some time to update this temperature.

To avoid this situation, the sensor must be connected correctly. Re-initialise parameter 8703 (commissioning level, consumer diagnostic menu).

## 2.14 Configuring room thermostat

To configure the room thermostat and connect it to the appropriate heating zone:

- Hold down the presence key for more than 3 seconds.
   The room thermostat displays RU and a number flashes.
- Turn the wheel to choose the zone (1, 2).
- If the installation is fitted with 2 room thermostats,
- First connect one room thermostat and configure it in zone 2.
- Then connect the other room thermostat and configure it as default in zone 1.
- Hold down the presence key; the room thermostat displays P1 and a flashing number. 1: Automatic recording: a correction of the setting with the button is adopted without any particular confirmation (timeout) or by pressing the mode key. 2: Recording with confirmation: a correction of the setting with the button is not adopted until the mode key is pressed.
- Press the presence key again; the room thermostat displays P2 and a flashing number.
- 0: OFF: all the operating elements are engaged.
- 1: ON: the following operating elements are locked:
  - Switching over the heating circuit's operating mode.
  - Adjusting the comfort setting,
  - Changing the operating level.

The room thermostat displays OFF for 3 seconds when a locked button is pressed.

## 2.15 Configuring remote control (wireless)

During commissioning, after an initialisation period of approx. 3 minutes, the user's language must be set:

- Press D.
- Choose menu "Operator section".
- Choose language.
- Select the language (**English**, Deutsch, Français, Italiano, Nederlands, Español, Português, Dansk...).

## In the case of 2 heating circuits

- Choose the allocation of the remote control (room appliance 1 or 2...) line **40\*** (see page 38).
- According to the allocation selected check and, if necessary, modify the settings for lines **42\***, **44\***, **48\*** (see page 38).

Line		Function	Setting range or display	· · · · · · · · · · · · · · · · ·	Basic setting	
40		Use as	Room appliance 1, 2, P, User interface 1, 2, P, Service appliance		Room appliance 1	
		This line regulates the use of the remote control. (lines 42, 44, 48).	Depending on how it is used,	other settings wil	I be necessary	
42	ı	Appliance allocation 1	Heating circuit 1, Heating circuit 1 & 2, Heating circuit 1 & P, All the heating circuits		Heating circuit 1	
44	I	Operation HC2 (command HC2)	Commonly with HC1, Independent		Commonly with HC1	
		This function enables you to choose whether you wish the room thermostat (as an option) to act on both zones or just a single zone.				
48	ı	Occupancy control switch function	Without, Heating circuit 1, Heating circuit 2, Common			

<sup>\*</sup> These parameter lines are only accessible from the remote control.

Air to Water Heat Pump		

## 3 Regulation system

## 3.1 User interface, Remote control (option) and Room thermostat (option)

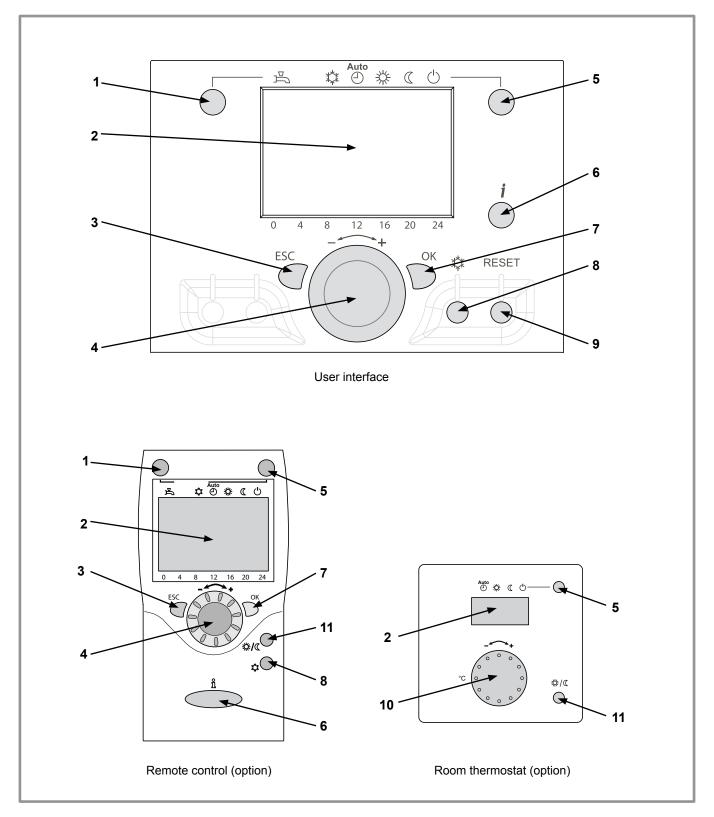


figure 34 -

Ref.	Function	- Definitions
1	Selecting of the DHW operating mode (Domestic hot water)	- If the installation is fitted with a DHW tank On: Production of DHW according to the time program.
	On	- Off: Preparing the domestic hot water for stopping with the anti-frost function active.
	一 Off	- Manual start button: Hold down the DHW key for 3 seconds. Switch from "reduced" to "comfort" until the next time the ECS timer switches over.
2	Digital display	- Operating control. Readout of the current temperature, of the heating mode and of any faults $\ \ \ \ \Box$
		- View the settings.
3	Exit "ESC"	- Quit the menu.
4	Navigation and setting	- Selecting the menu.
		- Setting parameters.
		- Adjusting the ambient temperature setpoint.
5	Selecting the heating mode	- ୬୭ Heating operating according to the heating program
		(Summer/winter mode switchover is automatic).
		- * Constant comfort temperature.
		- Constant reduced temperature.
		- O Stand-by mode with anti-frost protection (Provided that the heat pump's electrical power supply is not interrupted).
6	Information display	- Various data (please see page 59).
		- A Reading error code (please see page 56).
		- « Information concerning maintenance, special mode.
7	Confirm "OK"	- Input into the selected menu.
		- Confirmation of the parameter settings.
		- Confirmation of the adjustment to the comfort temp. setting.
8	Selecting cooling mode	- If the installation is fitted with the cooling kit:
		- 🌣 Cooling operating according to the heating program (Summer/winter mode switchover is automatic).
9	RESET button (Hold down the "RESET" key for 3 sec).	<ul> <li>Reinitialising the parameters and cancelling error messages.</li> <li>Do not use during normal operation.</li> </ul>
10	Control knob	- Adjusting the ambient temperature setpoint.
11	Presence key	- Comfort / Reduced switchover.

## 3.2 Description of the display

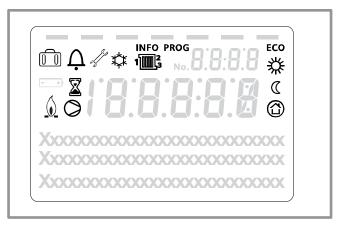


figure 35 - User interface display

Symbols	Definitions
1 23	Heating mode active with reference to the heating circuit.
*	- Heating in comfort mode.
	- Heating in reduced mode.
	- Heating in "standby" mode (freeze protection).
*	- Cooling mode active.
	- Holiday mode activated.
X	- Process in progress.
	- Compressor operation.
<u> </u>	- Burner operation.
$\bigcap_{\bullet}$	- Default message.
J.	- Service / Special operation.
INFO	- Information level activated.
PROG	- Program activated.
ECO	- ECO mode activated (Heating temporarily stopped).
1828 o	- Hour / Parameter number / Setpoint value.
2 0.5°C temperature ambiante	- Room temperature / Setpoint value.
20.5°	- Setpoint information /

Parameter Information.

## 3.4 Temperature control

The heat pump's operation is subject to the temperature control.

The set temperature for the water in the heating circuit is adjusted according to the outdoor temperature.

If there are thermostatic valves on the installation, these must be fully open or adjusted for higher than the normal set temperature.

#### 3.4.1 Set to

During installation, the temperature control must be parametered according to the heat emitters and the dwelling's insulation.

The temperature control' curves (figure 36) refer to an ambient setting of 20°C.

The slope of the temperature control (parameter 720) determines the impact of the variations in the outdoor temperature on the initial heating temperature variations.

The higher the slope, the more a slight reduction in the outdoor temperature causes a significant increase in the flow water temperature in the heating circuit.

The off-set in the temperature control (parameter 721) modifies the initial temperature of all the curves, without modification of the slope (figure 37).

The corrective actions in the case of any inconvenience are detailed in the table (figure 38).

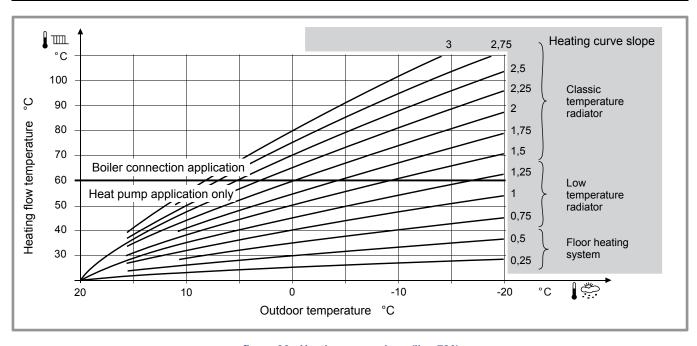


figure 36 - Heating curve slope (line 720)

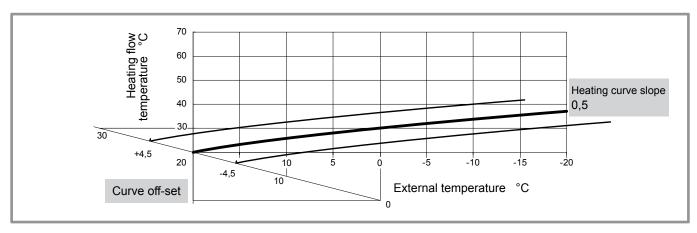


figure 37 - Off-set of the heating curve (line 721)

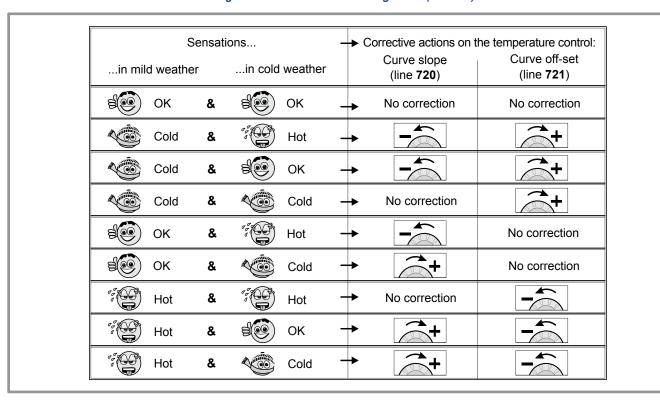


figure 38 - Corrective actions in the case of discomfort

#### 3.5 Parametering the setting

#### 3.5.1 General

Only the parameters accessible to levels:

- U End user.
- I Commissioning level.
- S Engineer level.

Are described in this document.


The access levels are specified in the second column of the table by means of the letters  $\boldsymbol{U}, \boldsymbol{I}$  and  $\boldsymbol{S}$ .

The OEM parameters are not described and require a manufacturer's access code.

#### 3.5.2 Setting parameters

- Choose the desired level.
- Scroll the menu list.
- Choose the desired menu.
- Scroll the function lines.
- Choose the desired line.
- Adjust the parameter
- Check the setting by pressing OK.
- To return the menu, press ESC.

If no setting is made for 8 minutes, the screen returns automatically to the basic display.

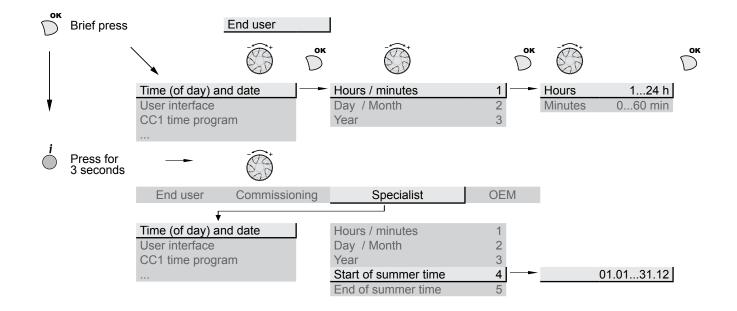

#### 3.5.3 List of function lines (settings, diagnosis, status)

Line		Function	Setting range or display	Setting increment	Basic setting
Time of	f day a	and date			
1	U	Hours / Minutes	00:00 23:59	1	
2	U	Day / Month	01.01 31.12	1	
3	U	Year	1900 2099	1	
5	S	Start of Summer time (Day / Month)	01.01 31.12	1	25.03
6	S	End of Summer time (Day / Month)	01.01 31.12	1	25.10
		The change of hour will appear at 3:00 first \$	Sunday after the regulated date.		
Operate	or sec	tion			
20	U	Language	English, Français, Italiano, Nederlands		English
22	S	Info	Temporary, Permanent		Temporary
26	S	Operation locking	On, Off		Off
27	S	Programming locking	Off, On		Off
28	S	Direct adjustment	automatic storage, with confirmation		with confirmation
29	S	Temperature units Pressure units	°C, °F bar, psi		°C bar
70	S	Display software version			

Line		Function	Setting range or display	Setting increment	Basic setting
Time pr	ograi	m heating circuit 1			
500	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sun
501	U	1st phase On (start)	00:00:	10 min	6:00
502	U	1st phase Off (end)	00:00:	10 min	22:00
503	U	2nd phase On (start)	00:00:	10 min	:
504	U	2nd phase Off (end)	00:00:	10 min	:
505	U	3rd phase On (start)	00:00:	10 min	:
506	U	3rd phase Off (end)	00:00:	10 min	:
515	U	Сору			
516	U	Default values, Circuit 1	No, Yes		No
		Yes + OK: The default values memorised in customised settings are therefore lost.	the regulator replace and cancel the c	ustomised heatir	ng programs. Y
Time pr	ograi	m heating circuit 2			
		Only with the 2nd circuit kit option.			
520	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sur
521	U	1st phase On (start)	00:00:	10 min	6:00
522	U	1st phase Off (end)	00:00:	10 min	22:00
523	U	2nd phase On (start)	00:00:	10 min	:
524	U	2nd phase Off (end)	00:00:	10 min	:
525	U	3rd phase On (start)	00:00:	10 min	:
526	U	3rd phase Off (end)	00:00:	10 min	:
535	U	Сору			
536	U	Default values, Circuit 2	No, Yes		No
		Yes + OK: The default values memorised in customised settings are therefore lost.	the regulator replace and cancel the c	ustomised heatir	ng programs. Y
Time pr	ograi	m 4 / DHW			
		If the installation is fitted with the DHW kit.			
560	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sur
561	U	1st phase On (start)	00:00:	10 min	00:00
562	U	1st phase Off (end)	00:00:	10 min	05:00
563	U	2nd phase On (start)	00:00:	10 min	14:30
564	U	2nd phase Off (end)	00:00:	10 min	17:00
565	U	3rd phase On (start)	00:00:	10 min	:
566	U	3rd phase Off (end)	00:00:	10 min	:
575	U	Сору			,

Yes + OK: The default values memorised in the regulator replace and cancel the customised heating programs. Your customised settings are therefore lost.

No, Yes

Default values

576


U

No

Line		Function	Setting range or display	Setting increment	Basic setting
Γime pr	ograi	m 5 / Cooling			
		If the installation is fitted with the cooling kit (Only	with the cooling kit option).		
600	U	Pre-selection (Day / Week)	Mon-Sun, Mon-Fri, Sat-Sun, Monday, Tuesday,		Mon-Sur
601	U	1st phase On (start)	00:00:	10 min	8:00
602	U	1st phase Off (end)	00:00:	10 min	20:00
603	U	2nd phase On (start)	00:00:	10 min	;
604	U	2nd phase Off (end)	00:00:	10 min	:
605	U	3rd phase On (start)	00:00:	10 min	:
606	U	3rd phase Off (end)	00:00:	10 min	:
615	U	Сору			
616	U	Default values	No, Yes		No
		Yes + OK: The default values memorised in the r customised settings are therefore lost.	egulator replace and cancel the c	ustomised heatir	ng programs. Y
Holiday	s, he	ating circuit 1 (For the Holiday program is active, t	he heating mode should be on AU	TO).	
641	U	Preselection	Period 1 to 8		Period 1
642	U	Period Start (Day / Month)	01.01 31.12	1	
643	U	Period End (Day / Month)	01.01 31.12	1	
648	U	Operating level	Frost protection, Reduced		Frost protectio
Holiday	s, he	ating circuit 2 (For the Holiday program is active, t	he heating mode should be on AU	TO).	
		If the installation consists of 2 heating circuits (On	ly with the 2nd circuit kit option).		
651	U	Preselection	Period 1 to 8		Period 1
652	U	Period Start (Day / Month)	01.01 31.12	1	
653	U	Period End (Day / Month)	01.01 31.12	1	
658	U	Operating level	Frost protection, Reduced		Frost protectio
Heating	, circ	uit 1			
710	U	Comfort setpoint	Reduced setpoint Comfort setpoint maximum	0,5 °C	20 °C
712	U	Reduced setpoint	Frost protection setpoint Comfort setpoint	0,5 °C	19 °C
714	U	Frost protection setpoint	4 °C Reduced setpoint	0,5 °C	8 °C
716	s	Comfort setpoint maximum	20 °C 35 °C	1 °C	28 °C
720	ı	Heating curve slope (figure 36, page 37)	0,1 4	0,02	0,5
721	ı	Heating curve displacement (figure 37, page 37)	-4,5 °C 4,5 °C	0,5 °C	0
726	ı	Heating curve adaption	Off, On		Off
		Warning! Not to modify, let on "Off".			
730	ı	Summer / Winter heating limits	8 °C 30 °C	0,5 °C	18 °C
		When the average of the outside temperatures over (as an economy measure). During summer mode, t			
732	s	24-hour heating limit	-10 °C 10 °C	1 °C	-2 °C
		This function enables you partially to offset the autorior lincreasing the value delays the switchover to sum Decreasing the value advances the switchover to This function is only active in automatic mode.	mer regime.	during the interm	ediate seasons

Line		Function	Setting range or display	Setting increment	Basic setting
740	1	Flow temp setpoint min (for fan convector)	8 °C Flow temp setpoint max	1 °C	8 °C
741	ı	Flow temp setpoint max	Flow temp setpoint min 70 °C	1 °C	55 °C
		Floor heating system = 50 °C / Radiators = 65 °C. Important Note : Maximum temperature limitation	is not a safety function as required	d by ground hea	iting.
750	s	Room influence	1% 100%	1%	50%
		If the installation is fitted with a room thermostat: This function enables you to choose the ambient t If no value is entered, the setting is made based o If the parameter is set at 100%, the setting is only	n the temperature control.	· ·	
780	s	Quick setback	Off, Down to reduced setpoint, Down to frost prot setpoint		Down to reduced setpoint
790	S	Optimum start control max (Early start to switch to the comfort setting.)	0 360 min	10 min	180 min
791	S	Optimum stop control max (Early stop to switch from the comfort setting to the reduced setting.)	0 360 min	10 min	60 min
800	S	Reduced setpoint increase start	-30 10 °C	1 °C	
801	s	Reduced setpoint increase end	-30 10 °C	1 °C	-5 °C
830	s	Mixer valve boost	0 50 °C	1 °C	0 °C
834	s	Actuator running time	30 873 s	1 s	240 s
850	ı	Floor curing function (figure 39)			Off
		Off: Early interruption of the current program, pro- Functional heating. Heating ready for occupation. Functional heating + Curing heating. Curing heating + Functional heating. Manually: Manual mode enables you to program automatically after 25 days.		ime.The functio	n ends
851	ı	Floor curing setpoint manually (if line 850 = manual)	0 95 °C	1 °C	25 °C
		This function enables you to set the custom of the concrete slab-drying program stops automatic		This temperatu	re remains fixe
856	ı	Floor curing day current	0 32		
857	ı	Floor curing day completed	0 32		
900	S	Operating mode changeover	None, Protection mode, Reduced, Comfort, Automatic	1	Protection mode

Operating mode at end of concrete slab curing period

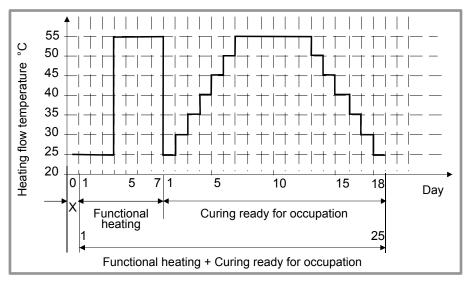

Please comply with the standards and instructions of the manufacturer of the building! A good performance of this function is only possible with an installation correctly implemented (hydraulic, electricity and adjustments)! This function can be stopped by anticipation when setting the adjustment on "Stop".

figure 39 - Diagram of the concrete slab curing programs

		Function	Setting range or display	Setting increment	Basic setting
Heating	g, circ	uit 2			
		Only with the 2nd circuit kit option (If the installation	on consists of 2 heating circuits).		
1010	U	Comfort setpoint	Reduced setpoint Comfort setpoint maximum	0,5 °C	20 °C
1012	U	Reduced setpoint	Frost protection setpoint Comfort setpoint	0,5 °C	19 °C
1014	U	Frost protection setpoint	4 °C Reduced setpoint	0,5 °C	8 °C
1016	S	Comfort setpoint maximum	Comfort temp 35 °C	1 °C	28 °C
1020	ı	Heating curve slope (figure 36, page 37)	0,1 4	0,02	0,5
1021	ı	Heating curve displacement (figure 37, page 37)	-4,5 4,5 °C	0,5 °C	0 °C
1026	ı	Heating curve adaption	Off, On		Off
		Warning! Not to modify, let on "Off".			
1030	ı	Summer / Winter heating limits	8 30 °C	0,5 °C	18 °C
		When the average of the outside temperatures over (as an economy measure). During summer mode, t			
1032	S	24-hour heating limit	-10 10 °C	1 °C	-2 °C
		This function enables you partially to offset the au Increasing the value delays the switchover to sum Decreasing the value advances the switchover to This function is only active in automatic mode.	mer regime.	during the interm	ediate seasons
1040	ı	Flow temp setpoint min (for fan convector)	8 70 °C	1 °C	8 °C
1041	I	Flow temp setpoint max	8 70 °C	1 °C	55 °C
		Floor heating system = 50 °C / Radiators = 65 °C. Important Note : Maximum temperature limitation	n is not a safety function as require	ed by ground heat	ing.
1050	S	Room influence	1 % 100 %	1 %	50 %
	Ū				
1080		If the installation is fitted with a room thermostat: This function enables you to choose the ambient the If no value is entered, the setting is made based of the parameter is set at 100%, the setting is only	n the temperature control. based on the ambient temperatur	ting. e.	
1080	s	If the installation is fitted with a room thermostat: This function enables you to choose the ambient t If no value is entered, the setting is made based of	n the temperature control.	ting. e.	Down to reduced setpoint
1080		If the installation is fitted with a room thermostat: This function enables you to choose the ambient the If no value is entered, the setting is made based of the parameter is set at 100%, the setting is only	on the temperature control. based on the ambient temperature  Off, Down to reduced setpoint,	ting. e.	Down to reduced
	S	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is only Quick setback	on the temperature control. based on the ambient temperature  Off, Down to reduced setpoint, Down to frost prot setpoint	ting. e.	Down to reduced setpoint
1090	S	If the installation is fitted with a room thermostat: This function enables you to choose the ambient to the setting is made based of the parameter is set at 100%, the setting is only Quick setback  Optimum start control max	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min	ting. e. 10 min	Down to reduced setpoint 180 min
1090 1091	S S	If the installation is fitted with a room thermostat: This function enables you to choose the ambient to lift no value is entered, the setting is made based of lift the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min.  0 360 min.	ting. e. 10 min 10 min	Down to reduced setpoint 180 min 60 min
1090 1091 1100	S S S	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is made based of the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  0 360 min  -30 10 °C,°C	10 min 10 min 10 min	Down to reduced setpoint 180 min 60 min
1090 1091 1100 1101	S S S	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is made based of the parameter is set at 100%, the setting is only  Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start  Reduced setpoint increase end	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  -30 10 °C,°C  -30 10 °C,°C	10 min 10 min 1 °C 1 °C	Down to reduced setpoint 180 min 60 min5 °C
1090 1091 1100 1101 1130	S S S S	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is made based of the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start  Reduced setpoint increase end  Mixer valve increase	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  0 360 min  -30 10 °C,°C  -30 10 °C,°C	10 min 10 min 1 °C 1 °C 1 °C	Down to reduced setpoint  180 min  60 min   -5 °C  0 °C
1090 1091 1100 1101 1130 1134	\$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is made based of the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start  Reduced setpoint increase end  Mixer valve increase  Actuator running time	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  0 360 min  -30 10 °C,°C  -30 10 °C,°C  30 873 s	10 min 10 min 1 °C 1 °C 1 °C 1 s	Down to reduced setpoint  180 min  60 min   -5 °C  0 °C  240 s  Off
1090 1091 1100 1101 1130 1134	\$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is made based of the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start  Reduced setpoint increase end  Mixer valve increase  Actuator running time  Floor curing function (figure 39, page 41)  - Off: Early interruption of the current program, pro-Functional heating Heating ready for occupation Functional heating + Curing heating Curing heating + Functional heating Manually: Manual mode enables you to program.	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  0 360 min  -30 10 °C,°C  -30 10 °C,°C  30 873 s	10 min 10 min 1 °C 1 °C 1 °C 1 s	Down to reduced setpoint  180 min  60 min   -5 °C  0 °C  240 s  Off
1090 1091 1100 1101 1130 1134 1150	S S S S S I	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the price of the setting is made based of the parameter is set at 100%, the setting is only the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start  Reduced setpoint increase end  Mixer valve increase  Actuator running time  Floor curing function (figure 39, page 41)  Off: Early interruption of the current program, program, increase the program of the current program, program of the current program, program of the prog	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  0 360 min  -30 10 °C,°C  -30 10 °C,°C  30 873 s  ogram inactive.  me your own concrete slab drying  0 95 °C  oncrete slab drying temperature.	ting. e.  10 min 10 min 1 °C 1 °C 1 °C 1 s  time.The function 1 °C	Down to reduced setpoint  180 min  60 min   -5 °C  0 °C  240 s  Off
1090 1091 1100 1101 1130 1134 1150	S S S S S I	If the installation is fitted with a room thermostat: This function enables you to choose the ambient of the parameter is set at 100%, the setting is made based of the parameter is set at 100%, the setting is only Quick setback  Optimum start control max  Optimum stop control max  Reduced setpoint increase start  Reduced setpoint increase end  Mixer valve increase  Actuator running time  Floor curing function (figure 39, page 41)  - Off: Early interruption of the current program, profunctional heating Functional heating + Curing heating Curing heating + Functional heating Manually: Manual mode enables you to program automatically after 25 days.  Floor curing setpoint manually (if line 1150 = manual)  This function enables you to set the custom of	on the temperature control. based on the ambient temperature.  Off, Down to reduced setpoint, Down to frost prot setpoint.  0 360 min  0 360 min  -30 10 °C,°C  -30 10 °C,°C  30 873 s  ogram inactive.  me your own concrete slab drying  0 95 °C  oncrete slab drying temperature.	ting. e.  10 min 10 min 1 °C 1 °C 1 °C 1 s  time.The function 1 °C	Down to reduced setpoint  180 min  60 min   -5 °C  0 °C  240 s  Off

Line		Function	Setting range or display	Setting increment	Basic setting
1200	s	Operating mode changeover	None, Protection mode, Reduced, Comfort, Automatic		Protection mode
		Operating mode at end of concrete slab drying	g period.		
Domesti	ic ho	t water			
		If the installation is fitted with the DHW kit.			
1610	U	Nominal setpoint	Reduced setpoint (line 1612) 65 °C	1	55 °C
		The backup electrical system is required to re-	ach this level.		
1612	U	Reduced setpoint	8 °C Nominal setpoint (line 1610)	1	40 °C
1620	I	Release (of DHW load)	24h / day Time program HCs Time program 4 / DHW Low-tariff (Off-peak) T°prog 4 / DHW or Low-tariff		Time progra 4 / DHW
		24h / day: The temperature of the DHW is con	nstantly maintained at the DHW comfort	t setting.	
		Time program HCs: The DHW is produced a advance when switched on).	ccording to the programming for the an	nbient temperatu	ure (with 1 hour
		Time program 4 / DHW: The DHW program i	s separate form the heating circuit prog	ram.	
		Low-tariff*: The electrical backup heating is	only authorised to operate during the of	f-peak period.	
		T'prog 4/DHW or low-tariff *: The electrical ba	ckup heating is authorised to operate du	ring the comfort	period or off pea
		* - Connect the "Power Provider" contact to inpelectric back-ups for the DHW tank are subject DHW tank is only authorised during off-peak h	ct to the power supplier's tariffs. Switchi		
1640	I	Legionella function	Off, Periodically (depending line setting 1641), Fixed weekday (depending line setting 1642)		Off
1641	s	Legionella function periodically	1 to 7	1 day	7
1642	s	Legionella function weekday	Monday, Tuesday,		Sunday
Swimmi	ng p	ool (Only with swimming pool kit option)			
2056	U	Setpoint source heating	8 35 °C		22 °C
Heat pu	mp (l	HP)			
2803	s	Overrun time cond pump	8 240 s	1 s	240s
2843	s	Compressor off time min	0 120 min	1 °C	8 min
2844	s	Switch-off temp max	8 100 °C	1 °C	75 °C
2862	s	Locking time stage 2 / mod	0 40 min	1 min	5 min
2873	s	Compressor mod run time	10 600 s	1 s	240 s
2882	S	Release integr electric flow	0 500 °Cmin	1 °Cmin	100 °Cmin
2884	S	Release el flow below OT Electrical release - start-up with outside temperature	-30 30 °C		2 °C
2886	S	Compensation heat deficit	Off, On, Only with floor curing fct		Off
2916	s	Max setpoint HP DHW charg	8 80 °C		60 °C
2920	S	With electrical utility lock (EX1)	Locked (Blocked on standby), Released		Released
		Released: HP = ON _ Back-up DHW = off _ Locked (Blocked on standby): HP = off _ Boiler = ON	1st back-up HP = off 2nd back-up Back-up DHW = off 1st back-up HP	HP = off _ Boile = off _ 2nd bac	er = ON ck-up HP = off _

Supplementary   Source   Boller connection	Line		Function	Setting range or display	Setting increment	Basic setting
3701   S   Release above outside temperature   -50 50 °C   1 °C	Supplem	nenta	ary source (Boiler connection)			
3705   S   Overrun time	3700	S	Release below outside temperature	-50 50 °C	1 °C	2 °C
S   Switching integral (for boiler relief)   0 500 "Cmin   1 "Cmin   3723   S   Locking time   1 120 min   1 m	3701	S	Release above outside temperature	-50 50 °C	1 °C	
3723   S   Locking time   1 120 min   1 min	3705	S	Overrun time	0 120 min	1 min	20 min
DHW storage tank	3720	s	Switching integral (for boiler relief)	0 500 °Cmin	1 °Cmin	100 °Cmin
If the installation is fitted with the DHW kit.	3723	S	Locking time	1 120 min	1 min	30 min
South Sout	DHW sto	orag	e tank			
Social Schedule   Sc			If the installation is fitted with the DHW kit.			
Second   S	5024	s	Switching diff	0 20 °C	1 °C	7 °C
Second   S	5030	S	Charging time limitation	10 600 min	10 min	90 min
\$ Electric immersion heater release 24h / day, DHW release, Time program 4 / DHW  5093 \$ Not used  Installation configuration  5700 I Pre-setting 1.2.39 1  This control enables you to choose one of the 4 pre-selected installation configurations. The hydrovarious configurations are detailed in the section: "Installation Configurations." The hydrovarious configurations are detailed in the section: "Installation Configurations." The hydrovarious configurations are detailed in the section: "Installation Configurations." The hydrovarious configurations are detailed in the section: "Installation Configurations." The hydrovarious configurations are detailed in the section: "Installation Configurations." The hydrovarious configurations." The hydrovarious configurations. The hydrovariou	5055	s	Recooling temp	10 95 °C	1 °C	65 °C
Solution	5057	S	Recooling collector	Off, Summer, Always		Summer
Pre-setting   1,2,3,9   1   This control enables you to choose one of the 4 pre-selected installation configurations. The hydra various configurations are detailed in the section: "Installation Configurations."	5061	S	Electric immersion heater release			DHW release
Pre-setting   1,2,3,9   1   This control enables you to choose one of the 4 pre-selected installation configurations. The hydra various configurations are detailed in the section: "Installation Configurations."	5093	S	Not used			
This control enables you to choose one of the 4 pre-selected installation configurations. The hydravarious configurations are detailed in the section: "Installation Configurations".  - Pre-setting 1: 1 heating circuit with or without DHW tank Pre-setting 2: 2 heating circuits with or without DHW tank Pre-setting 3: Boiler connection and 1 heating circuit and with or without DHW tank Pre-setting 4: Boiler connection and 2 heating circuits and with or without DHW tank Pre-setting 5 and more: Not used.  5710 S Heating circuit 1 Off, On  5711 S Cooling circuit 1 Off, On  5712 S Heating circuit 2 Off, On  5713 S DHW controlling element Q3 No charging request, Charging pump, Diverting valve  5714 S Contact type elimm heater flow  1: 3-stage, 2: 2-stage excluding, 3: 2-stage complementary, 4: Modulating UX  5715 S Contact type input EX1 Normally-closed contact (NC) Normally-opened contact (NO)  5716 S Contact type input EX2 Normally-closed contact (NC) Normally-opened contact (NC) Normally-opened contact (NC) Normally-opened contact (NC)  5716 S Contact type input EX3 Normally-closed contact (NC) Normally-opened contact (NC)  5716 S Contact type input EX3 Normally-closed contact (NC) Normally-opened contact (NC)  5717 S Contact type input EX3 Normally-closed contact (NC)  5718 S Contact type input EX3 Normally-opened contact (NC)  5719 S Contact type input EX3 Normally-opened contact (NC)  5710 S Readjustm outside sensor -3 3 °C 0,1 °C  5110 S Frost protection plant On, Off  5110 S Reset to default parameters No, Yes  5110 S Software version (RVS) 0 99  5111 Function input H33 (= contact in X152) 1 56  5111 (1) Mode changeover HC-1 (1) Mode changeover HC	nstallati	ion c	configuration			
various configurations are detailed in the section: "Installation Configurations".  - Pre-setting 1: 1 heating circuit with or without DHW tank Pre-setting 3: Boiler connection and 1 heating circuit and with or without DHW tank Pre-setting 4: Boiler connection and 2 heating circuit and with or without DHW tank Pre-setting 5 and more: Not used.  5710  \$ Heating circuit 1	5700	ı	Pre-setting	1,2,3, 9	1	1
5711         S         Cooling circuit 1         Off, System with 4 tubes, System with 2 tubes           5715         S         Heating circuit 2         Off, On           5731         S         DHW controlling element Q3         No charging request, Charging pump, Diverting valve           5806         I         Type el imm heater flow         1 : 3-stage, 2 : 2-stage excluding, 3 : 2-stage complementary, 4 : Modulating UX           5981         S         Contact type input EX1         Normally-closed contact (NC) Normally-opened contact (NO)           5983         S         Contact type input EX2         Normally-closed contact (NC) Normally-opened contact (NO)           5985         S         Contact type input EX3         Normally-closed contact (NC) Normally-opened contact (NO)           6098         S         Not used           6100         S         Readjustm outside sensor         -3 3 °C         0,1 °C           6120         S         Frost protection plant         On, Off           6205         S         Reset to default parameters         No, Yes           6220         S         Software version (RVS)         0 99           6420         S         Function input H33 (= contact in X152)         1 56           (1) Mode changeover HC-2 (5) Mode changeover HCP - (6) to (10) Not used - <td></td> <td></td> <td><ul> <li>Pre-setting 1: 1 heating circuit with or withou</li> <li>Pre-setting 2: 2 heating circuits with or witho</li> <li>Pre-setting 3: Boiler connection and 1 heatin</li> <li>Pre-setting 4: Boiler connection and 2 heatin</li> </ul></td> <td>it DHW tank. ut DHW tank. ig circuit and with or without DHW tank</td> <td></td> <td></td>			<ul> <li>Pre-setting 1: 1 heating circuit with or withou</li> <li>Pre-setting 2: 2 heating circuits with or witho</li> <li>Pre-setting 3: Boiler connection and 1 heatin</li> <li>Pre-setting 4: Boiler connection and 2 heatin</li> </ul>	it DHW tank. ut DHW tank. ig circuit and with or without DHW tank		
System with 2 tubes	5710	s	Heating circuit 1	Off, On		On
S	5711	S	Cooling circuit 1			Off
Charging pump, Diverting valve  5806	5715	s	Heating circuit 2	Off, On		On
3 : 2-stage complementary, 4 : Modulating UX  5981	5731	S	DHW controlling element Q3	Charging pump,		Diverting valve
Normally-opened contact (NÓ)  5983 S Contact type input EX2 Normally-closed contact (NC) Normally-opened contact (NC) Normally-opene	5806	ı	Type el imm heater flow	3 : 2-stage complementary,		3 : 2-stage complementa
Normally-opened contact (NO)  S Contact type input EX3  Normally-closed contact (NC) Normally-opened contact (NO)  Normally-opened contact (NO)  Normally-closed contact (NO)  Normally-closed contact (NO)  Normally-closed contact (NO)  Normally-closed contact (NO)  S Not used  On, off  On, off  On, Off  No, Yes  S Software version (RVS)  No, Yes  1 56  (1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	5981	S	Contact type input EX1			NO
Normally-opened contact (NÓ)	5983	S	Contact type input EX2			NC
6100         S         Readjustm outside sensor         -3 3 °C         0,1 °C           6120         S         Frost protection plant         On, Off           6205         S         Reset to default parameters         No, Yes           6220         S         Software version (RVS)         0 99           6420         S         Function input H33 (= contact in X152)         1 56           (1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	5985	S	Contact type input EX3			NO
6120 S Frost protection plant On, Off  6205 S Reset to default parameters No, Yes  6220 S Software version (RVS) 0 99  6420 S Function input H33 (= contact in X152) 1 56  (1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	6098	S	Not used			
6205 S Reset to default parameters No, Yes  6220 S Software version (RVS) 0 99  6420 S Function input H33 (= contact in X152) 1 56  (1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	6100	S	Readjustm outside sensor	-3 3 °C	0,1 °C	0 °C
6220 S Software version (RVS)  6420 S Function input H33 (= contact in X152)  (1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	6120	S	Frost protection plant	On, Off		On
6420 <b>S</b> Function input H33 (= contact in X152) 1 56  (1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	6205	S	Reset to default parameters	No, Yes		No
(1) Mode changeover HC+DHW - (2) Mode changeover HC - (3) Mode changeover HC1 - (4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	6220	S	Software version (RVS)	0 99		
(4) Mode changeover HC2 - (5) Mode changeover HCP - (6) to (10) Not used -	6420	S	Function input H33 (= contact in X152)	1 56		1
			(4) Mode changeover HC2 - (5) Mode chang	eover HCP - (6) to (10) Not used -	r HC1 -	
6421 <b>S</b> Contact type H33 Normally-closed contact (NC) Normally-opened contact (NO)	6421	S	Contact type H33			NO

Line		Function	Setting range or display	Setting increment	Basic setting
LPB sys	stem				
6600	S	Not used			
Error					
6711	U	Reset HP	No, Yes		No
6800	S	History 1	Time, Date, Error code		
6802	S	History 2	Time, Date, Error code		
6804	S	History 3	Time, Date, Error code		
6806	S	History 4	Time, Date, Error code		
6808	S	History 5	Time, Date, Error code		
6810	S	History 6	Time, Date, Error code		
6812	S	History 7	Time, Date, Error code		
6814	S	History 8	Time, Date, Error code		
6816	S	History 9	Time, Date, Error code		
6818	S	History 10	Time, Date, Error code		
Mainten	ance	e / special regime			
7070	S	HP interval	, 1 240	1 month	
7071	S	HP time since maint Reset ? (no, yes)	0 240	1 month	0
7073	S	Cur starts compr1/hrs run (since the 6 last weeks) Reset ? (no, yes)	0 12		0
7141	U	Emergency operation	Off, On		Off
		Off: Heat pump functions normally (with boosters if On: Heat pump uses the electric boost system or the Use the "On" position only in Assist mode or Test m	ne boiler connection.	3.	
7142	S	Emergency operating function type	Manual, Automatic		Manual
		Manual: Emergency mode is not active when a faul Automatic: Emergency mode is active when a fault In "Automatic" position, the energy cost can be one	occurs (Emergency mode = ON).		
7150	ı	Simulation outside temp	-50 50 °C	0,5	
Inputs /	outp	uts test			
7700	ı	Relay test			0
		This consists of instructing the regulator's relays on the relays are working and that the cabling is correct (0) No test, (1) Everything is on STOP, (2) Relay output Electrical back-up (1st stage) or Boiler connection dist Boiler connection contact, (5) Relay output QX4: DF (7) Relay output QX6, (8) Relay output QX31: Heat chart circ mix valve close Y2, (10) Relay output QX33: he pool distribution valve, (13) Relay output QX21 module (16) Relay output QX21 module 2, (17) Relay output (20) Not used, (21) Not used.	tt. Check that each appliance in the t QX1: heat pump CC1 (Main regula tribution valve, (4) Relay output QX3-HW distribution valve, (6) Relay output circ mix valve open Y1 (or Control pat pump CC2, (11) Relay output QX34-1, (14) Relay output QX22 module 1	einstallation is opation board), (3) F 3 : Electrical back but QX5 : DHW bilot-wire), (9) Re 6, (12) Relay outpu 7, (15) Relay outpu	perating correctly Relay output QX2 up (2nd stage) c Electrical back-up elay output QX32 t QX35: Swimming ut QX23 module 1
		The display shows the "Key" symbol. Pressing the Warning: The component being tested is receiv		the test.	
7710	ı	Output UX1 test	0 100%	1	
7712	ı	PWM signal UX1	0 100%	1	0
7716	ı	Output UX2 test	0 100%	1	
7719	ı	PWM signal UX2	0 100%	1	0
7722	ı	Cooling mode D2	Off, On		Off
7723	ı	Heat pump D3	Off, On		Off

Line		Function	Setting range or display	Setting increment	Basic setting
7724	ı	Outputs test UX3 ("Inverter" command)	0 100 %		
7725	ı	Voltage value (UX3)	0 10 v		
7804	ı	Sensor temperature BX1 (HP flow temperature)	-28 350 °C		
7805	ı	Sensor temperature BX2 (HP return temperature)	-28 350 °C		
7806	ı	Sensor temperature BX3 (DHW temperature)	-28 350 °C		
7807	ı	Sensor temperature BX4 (Outside temperature)	-28 350 °C		
7808	ı	Sensor temperature BX5	-28 350 °C		
7809	ı	Sensor temperature BX6	-28 350 °C		-
7830	ı	Sensor temperature BX21 module 1	-28 350 °C		-
7832	ı	Sensor temperature BX21 module 2	-28 350 °C		
7847	ı	Contact status H2, module 2	Open, Closed		Open
7911	ı	Input EX1 (Power shedding, EJP)	0, 230 V		
7912	ı	Input EX2 (Tariffs day/night)	0, 230 V		
7913	ı	Input EX3 (External fault)	0, 230 V		-
7973	ı	Sensor temperature BX31 (Mixing circuit temp.)	-28 350 °C		-
7974	ı	Sensor temperature BX32	-28 350 °C		-
7975	ı	Sensor temperature BX33	-28 350 °C		-
7976	ı	Sensor temperature BX34 (Swimming pool exchanger temperature)	-28 350 °C		
7977	ı	Sensor temperature BX35	-28 350 °C		
7978	ı	Sensor temperature BX36	-28 350 °C		
7996	ı	Contact status H33	Open, Closed		Open
State					
8000	I	State heating circuit 1			
8001	ı	State heating circuit 2			
8003	ı	State DHW			
8004	ı	State cooling circuit 1			
8006	ı	State heat pump			-
8007	ı	Not used			
8010	ı	Not used			
8011	ı	State swimming pool			
8022	ı	State supplementary source			
Diagnos	stics	heat generation			
8402	ı	El imm heater flow 1	Off, On		Off
8403	ı	El imm heater flow 2	Off, On		Off
8406	ı	Condenser pump	Off, On		Off
8410	U	Return temp HP	0 140 °C		
		Setpoint (flow) HP			
8412	U	Flow temp HP	0 140 °C		
		Setpoint (flow) HP			
8413	U	Compressor modulation	0 100%		
8414	I	Modulation electric flow	0 100%		


8425 8454 8455	s s	Temp diff condensor  Locking time Heat Pump Reset ? (no, yes)	-50 140 °C		
		Locking time Heat Pump			
8455	S	11000t : (110, you)	0 2730 h		
		Counter number of locks HP Reset ? (no, yes)	0 65535		
8456	S	Hours run electrical flow Reset ? (no, yes)	0 2730 h		
8457	S	Start counter electrical flow Reset ? (no, yes)	0 65535		
8499	s	Not used			
8505	S	Not used			
8510	s	Not used			
8511	S	Not used			
8512	s	Not used			
8513	s	Not used			
8515	s	Not used			
Diagnos	tics	consumers			
8700	U	Outside temperature	-50 50 °C		
8701	U	Outside temp min Reset ? (no, yes)	-50 50 °C		
8702	U	Outside temp max Reset ? (no, yes)	-50 50 °C		
8703	I	Outside temp attenuated Reset ? (no, yes)	-50 50 °C		
		This is the average of the outside temperature This value is used for automatic Summer / Wi	e over a 24-hour period. nter switchover (line 730).		
8704	ı	Outside temp composite	-50 50 °C		
		The mixed outside temperature is a combination calculated by the regulator. This value is used	on of the current outside temperature for calculating the initial temperatu	e and the average oເ ure.	utside temperatur
8730	ı	Heating circuit pump, circuit 1	Off, On		Off
8731	ı	Mixer valve HC1 open	Off, On		Off
8732	ı	Mixer valve HC1 closed	Off, On		Off
8740	U	Room temperature 1	0 50 °C		
		Room setting 1			20 °C
8743	U	Flow temperature 1	0 140 °C		
		Flow temperature setpoint 1			
8756	U	Cooling flow temperature 1	0 140 °C		
		Cooling flow temperature setpoint 1			
8760	ı	Heating circuit pump, circuit 2	Off, On		Off
8770	U	Room temperature 2	0 50 °C		
		Room setpoint 2			20 °C
8773	U	Flow temperature 2	0 140 °C		
		Flow temperature setpoint 2			
8820	ı	DHW pump	Off, On		Off
8821	ı	El imm heater DHW	Off, On		Off

Line		Function	Setting range or display	Setting increment	Basic setting
8830	U	DHW (domestic hot water) temperature	0 140 °C		
		DHW temperature setpoint			50 °C
8840	S	Hours run DHW pump	0 2730 h		
8841	s	Start counter DHW pump	0 199999		
8842	s	Hours run electric DHW	0 2730 h		
8843	s	Start counter electric DHW	0 65535		
8900	U	Swimming pool temperature	0 140 °C		
		Swimming pool temperature setpoint			22 °C
8950	s	Common flow temperature	0 140 °C		
		Common flow temperature setpoint			
8957	S	Common flow setpoint, refrigeration	0 140 °C		
8980	S	Not used			
8981	s	Not used			
9031	ı	Relay output QX1	Off, On		On
9032	ı	Relay output QX2	Off, On		On
9033	ı	Relay output QX3	Off, On		On
9034	ı	Relay output QX4	Off, On		Off
9035	ı	Relay output QX5	Off, On		Off
9050	ı	Relay output QX21 module 1	Off, On		Off
9051	ı	Relay output QX22 module 1	Off, On		Off
9052	ı	Relay output QX23 module 1	Off, On		Off
9053	ı	Relay output QX21 module 2	Off, On		Off
9054	I	Relay output QX22 module 2	Off, On		Off
9055	I	Relay output QX23 module 2	Off, On		Off
9071	ı	Relay output QX31	Off, On		On
9072	I	Relay output QX32	Off, On		On
9073	ı	Relay output QX33	Off, On		Off
9074	ı	Relay output QX34	Off, On		Off
9075	ı	Relay output QX35	Off, On		Off


Air to Water Heat Pump		
	 	<u> </u>

# 4 Overall hydraulic layout

## • Configuration 1: 1 heating circuit

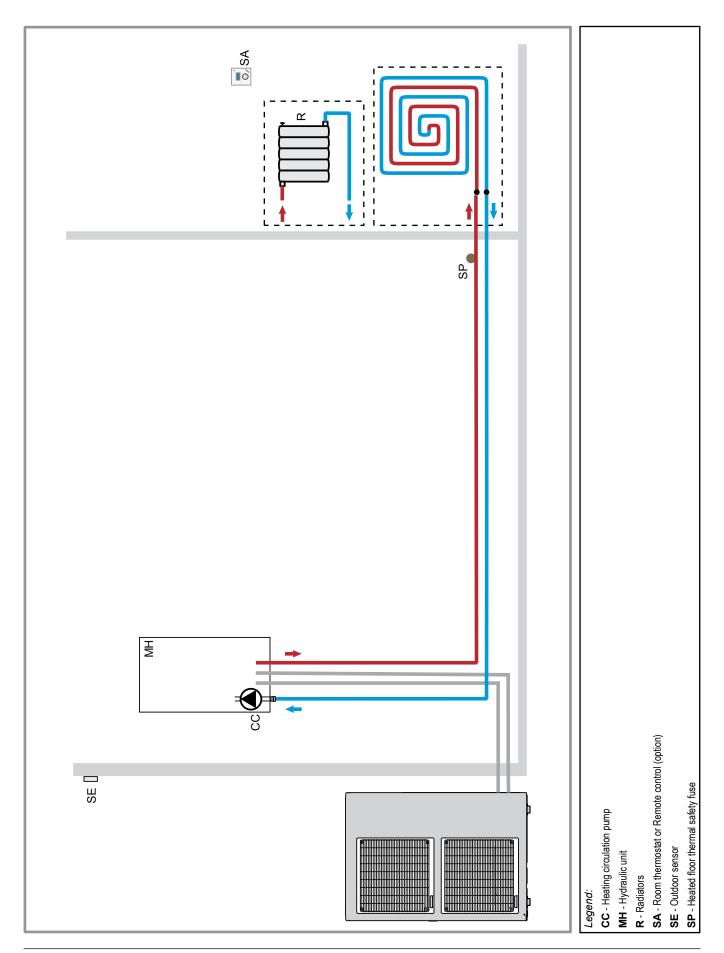

#### • Configuration 1: 1 heating circuit and DHW tank (with electrical back-up)

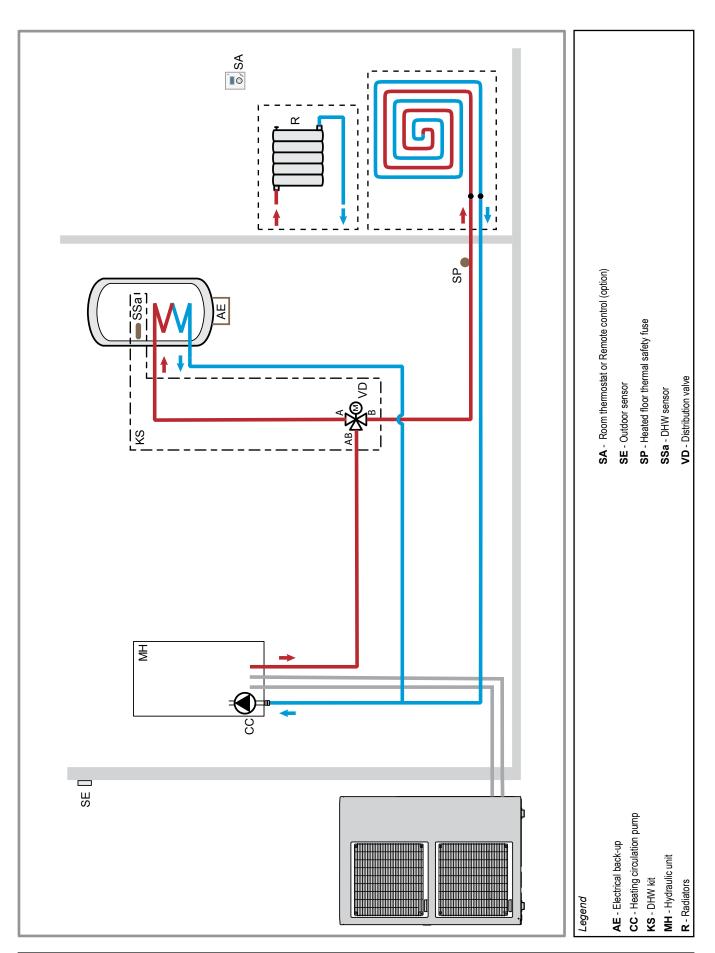

## 5 Electrical wiring diagrams

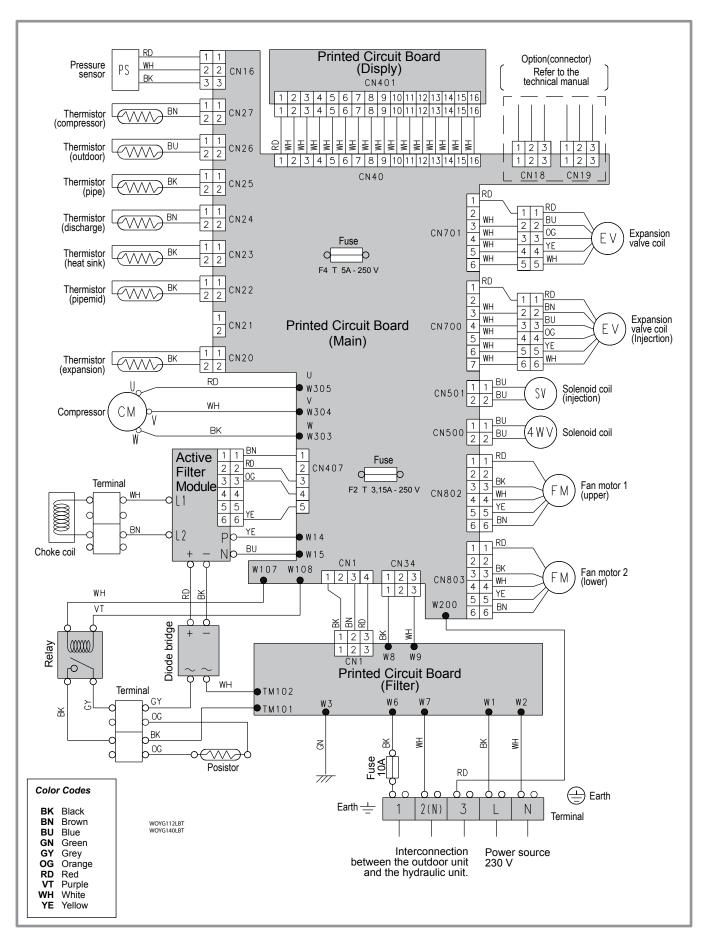


figure 40 - Electrical wiring of outside unit Single phase type Waterstage

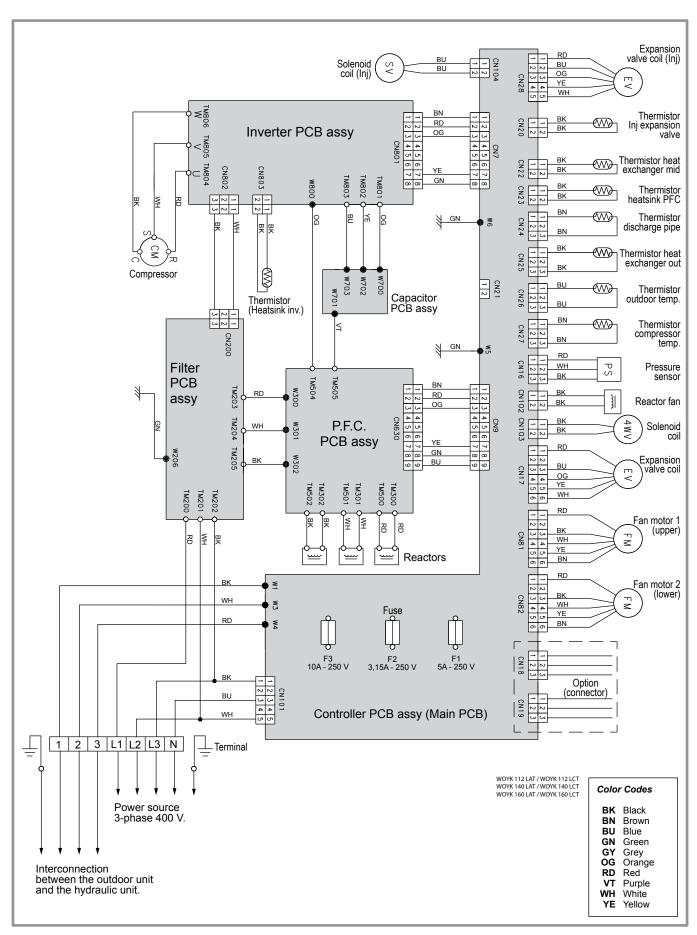


figure 41 - Electrical wiring of outside unit 3-phase type Waterstage

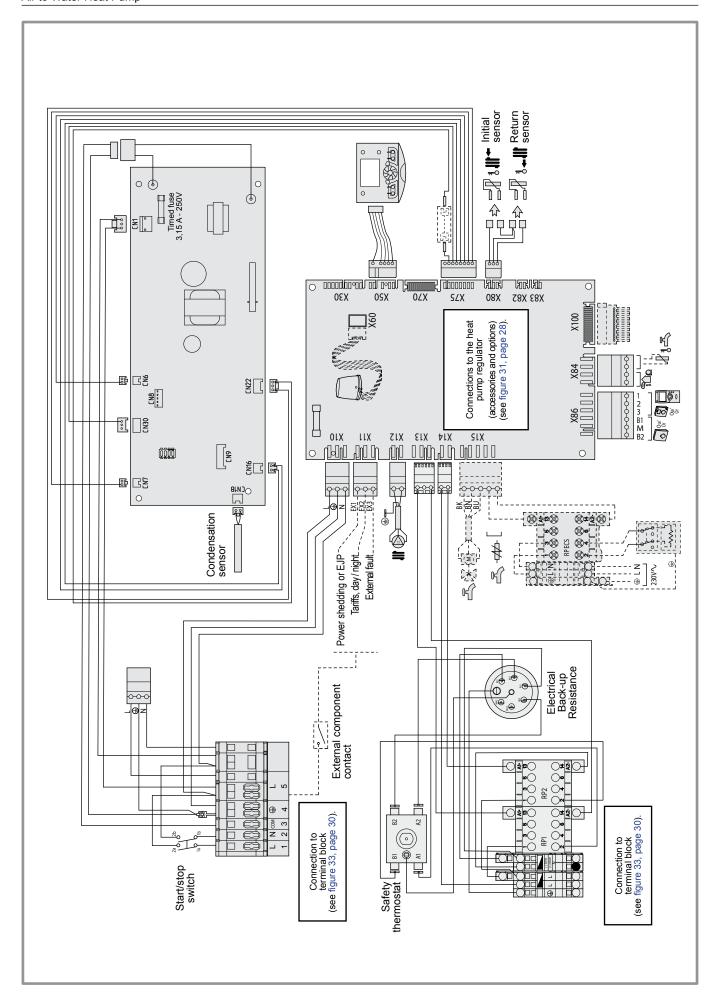


figure 42 - Electrical wiring, Hydraulic unit HP single phase (Except installer's connections)

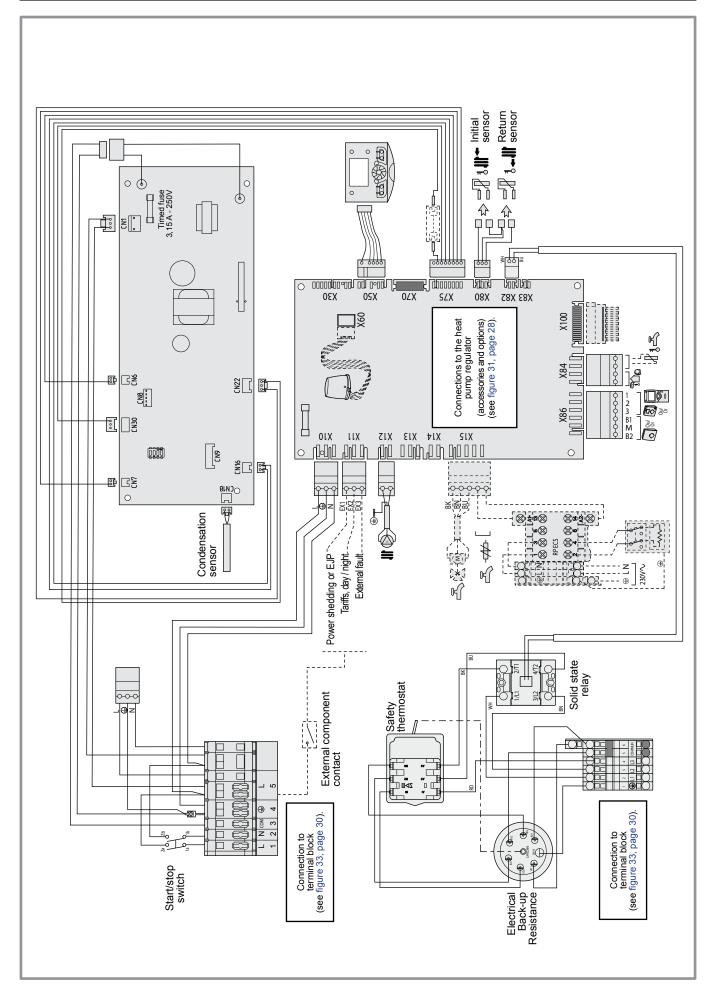


figure 43 - Electrical wiring, Hydraulic unit HP 3-phase (Except installer's connections)

## 6 Troubleshooting

Depending on whether the fault comes from the outdoor unit or the hydraulic unit, the fault may be indicated by the digital display or the diode on the interface cards.

### 6.1 Faults displayed on the hydraulic unit

Faults or breakdowns on the hydraulic unit are indicated by the display on the user interface.

Hydraulic unit: Fault visible on the digital display.

The display shows the  $\triangle$  symbol.

Press the key for more details on the origin of the fault

When the error has been resolved, the faults are reinitialised at zero automatically.

Error number	Error description	Error location	Heat pump operation despite the error
-	No connection.	Failure to comply with room thermostat's polarity.	No
10	Outdoor sensor.	X86	Yes with OT = 0 °C
33	Heat pump initial temperature sensor error.	X70	Yes
44	Heat pump return temperature sensor error.	X70	Yes
50	DHW temperature sensor.	X84	Yes
60	Ambient temperature sensor 1.		Yes
65	Ambient temperature sensor 2.		Yes
105	Maintenance message.		Yes
121	Flow temperature for (HC1) not reached.		Yes
122	Flow temperature for (HC2) not reached.		Yes
127	Anti-legionella temperature not reached.		Yes
369	External fault (safety component).		No
370	Outside unit connection error. (In the start phase, see the para. "Start-up").	See below and page 58 & 59.	No

Hydraulic unit: Flashing of the diode visible on the interface card.

Diodes display Error contents		Every contents
LED 2 (green)	LED 1 (red)	Error contents
1 Flash	1 Flash	Communication error between Hydraulic unit and Outdoor unit.
4 Flashes	1 Flash	Heat pump capacity signal error (Open or short).
4 Flashes	2 Flashes	Hydraulic unit heat-exchange thermistor Error.
6 Flashes	3 Flashes	Inverter error.
6 Flashes	4 Flashes	Active filter error.
7 Flashes	1 Flash	Discharge thermistor error.
7 Flashes	2 Flashes	Compressor thermistor error.
7 Flashes	3 Flashes	Heat-exchange thermistor (outlet / intermediate) error.
7 Flashes	4 Flashes	Outdoor thermistor error.
7 Flashes	7 Flashes	Heat sink thermistor error.
7 Flashes	8 Flashes	Expansion valve thermistor error.
8 Flashes	4 Flashes	Current sensor error.
8 Flashes	6 Flashes	Pressure sensor error / Pressure switch error.
9 Flashes	4 Flashes	Current trip.
9 Flashes	5 Flashes	Detection of compressor position error / Compressor start up error.
9 Flashes	7 Flashes	Outdoor unit fan motor error.
10 Flashes	1 Flashes	Discharge temperature protection.
10 Flashes	3 Flashes	Compressor temperature protection.
10 Flashes	5 Flashes	Low pressure abnormal.
Continuous flashing (1 s	sec On / 1 sec Off)	Pump down operation.
Continuous lighting	Off	Defrosting.

#### 6.2 Information display

Various data can be displayed by pressing the info button.

Depending on the type of unit, configuration and operating state, some of the info lines listed below may not appear.

- Possible error messages from the error code list (see table, page 56).
- Possible service messages from the maintenance code list.
- Possible special mode messages.
- Various data (see below).

Designation	Line
Floor drying current setpoint .	-
Current drying day.	-
Terminated drying days.	-
State heat pump.	8006
State supplementary source.	8022
State DHW.	8003
State swimming pool.	8011
State heating circuit 1.	8000
State heating circuit 2.	8001
State cooling circuit 1.	8004
Outdoor temperature.	8700
Room temperature 1.	0740
Room setpoint 1.	8740
Flow temperature 1.	0740
Flow temperature setpoint1.	8743
Room temperature 2.	0770
Room setpoint 2.	8770
Flow temperature 2.	0772
Flow temperature setpoint 2.	8773
DHW (domestic hot water) temperature.	8830
Heat pump return temperature.	8410
Setpoint (return) HP.	0410
Heat pump flow temperature.	8412
Setpoint (flow) HP.	0412
Swimming pool temperature.	8900
Swimming pool temperature setpoint.	0900
Minimum remaining stop time for compressor 1.	-
Minimum remaining running time for compressor 1.	-

# 6.3 Faults displayed on the single phase outdoor unit

To access the electronic board, you must remove the front (right-hand) facing from the outdoor unit.

Faults are coded by diode flashes.

When an error occurs:

- The diode "ERROR" (2) blinks.
- Press once on the switch "ENTER" (SW3).
- The "ERROR" (2) diode blinks several times depending on the error's type (see below).

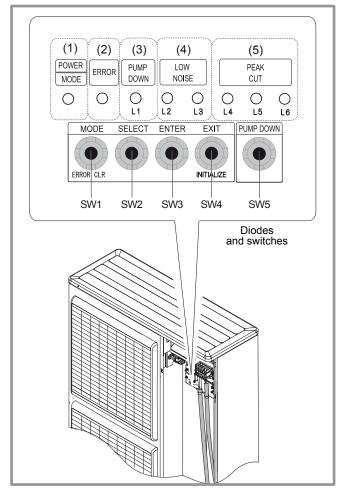


figure 44 - Location of switches and diodes on single phase outdoor unit

Diode display	Error contents
1 Flash	Serial forward transfer error.
2 Flashes	Discharge thermistor error.
3 Flashes	Pressure sensor error.
4 Flashes	Heat-exchange thermistor (outlet) error.
5 Flashes	Heat-exchange thermistor (intermediate) error.
6 Flashes	Expansion valve thermistor error.
7 Flashes	Outdoor temperature thermistor error.
8 Flashes	Compressor thermistor error.
9 Flashes	Heat sink thermistor error.
11 Flashes	Discharge temperature protection (permanent stoppage).
12 Flashes	Compressor temperature protection (permanent stoppage).
13 Flashes	Current trip (permanent stoppage).
14 Flashes	Detection of compressor position error (permanent stoppage).
15 Flashes	Compressor start up error (permanent stoppage).
16 Flashes	Fan motor 1 error (permanent stoppage).
17 Flashes	Fan motor 2 error (permanent stoppage).
18 Flashes	Inverter error.
19 Flashes	Active filter error.
20 Flashes	Low pressure abnormal.
21 Flashes	Connection with hydraulic unit error.
22 Flashes	Hydraulic unit abnormality condition.

- Ensure that the general electrical power supply has been cut off before starting any repair work.
- When the HP is not under tension, protection frost-free is not assured.

# 6.4 Faults displayed on the 3-phase outdoor unit

To access the electronic board, you must remove the front (right-hand) facing from the outdoor unit.

Faults are coded by diode flashes.

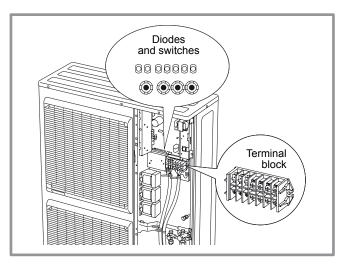


figure 45 - Location of switches and diodes on 3-phase outdoor unit

When an error occurs:

- The diode "ERROR" (2) blinks.
- Press once on the switch "ENTER" (SW4).
- The "ERROR" (2) diode blinks several times depending on the error's type (see below).

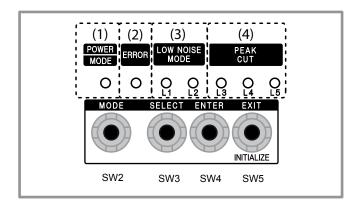


figure 46 - LED display on the 3-phase outdoor unit

Diode display	Error contents
1 Flash	Serial forward transfer error.
2 Flashes	Discharge thermistor error.
3 Flashes	Pressure sensor error.
4 Flashes	Heat-exchange thermistor (outlet) error.
5 Flashes	Heat-exchange thermistor (intermediate) error.
6 Flashes	Expansion valve thermistor error.
7 Flashes	Outdoor temperature thermistor error.
8 Flashes	Compressor thermistor error.
9 Flashes	Heat sink thermistor (inverter) error.
10 Flashes	Heat sink thermistor (P.F.C.) error.
11 Flashes	Discharge temperature protection (permanent stoppage).
12 Flashes	Compressor temperature protection (permanent stoppage).
13 Flashes	Current trip (permanent stoppage).
14 Flashes	Detection of compressor position error (permanent stoppage).
15 Flashes	Compressor start up error (permanent stoppage).
16 Flashes	Fan motor 1 error (permanent stoppage).
17 Flashes	Fan motor 2 error (permanent stoppage).
18 Flashes	Inverter error.
19 Flashes	P.F.C. error.
20 Flashes	Low pressure abnormal.
21 Flashes	Connection with hydraulic unit error.
22 Flashes	Hydraulic unit abnormality condition.

## 7 Quick-start procedure

Before switching on the hydraulic unit:

- Check the electric wiring.
- Check the refrigeration circuit and make sure the gas supply has been performed.
- Check the pressure of the hydraulic circuit (1-2 bar), check that the heat pump is purged, and the rest of the installation.
- Make sure that ALL DIPSW on the interface card are OFF before starting up.

#### 7.1 Start-up check-list

#### 7.1.1 Before starting-up

#### Sight checks

Outdoor unit (see chapiter "Installation of the outdoor unit" page 12).	OK	Non compliant	
Location and fittings, condensate evacuation.			
Compliance with distances from obstacles.			

#### Hydraulic checks

Hydraulic unit (see chapiter "Installing the hydraulic unit" page 15).	OK	Non compliant	Value
Connection of pipes, valves and pumps (1 or 2 circuits, DHW).			
Installation water volume (expansion vessel of adequate capacity ?).			
No leaks.			
Main system pressure and degassing.			

#### • Refrigeration connections and checks

(see chapiters "Refrigeration connections" page 16 & "Filling the installation with gas" page 19).	ОК	Non compliant	
Connections between units (pipe length, flare tightening torque).			
Installation of HP, LP pressure switches on liquid line (small pipe).			
Pump down required.			
Nitrogen leak test (~ 10 bar).			
Opening of refrigeration valves to outdoor unit.			
Refrigerant filling of hydraulic unit and pipes.			

#### Electrical checks

Outdoor unit (see chapiter "Electrical connections" page 24).	OK	Non compliant	Value
Main power supply (230v or 400v).			
Protection by rated circuit breaker.			
Cable cross-section.			
Earth connection.			

Hydraulic unit (see chapiter "Electrical connections on the hydraulic unit side" page 28).	ОК	Non compliant	
Connection with outdoor unit (phase, neutral, earth or 3 phases + earth).			
Sensors connection (positioning and connections).			
3 way valve and circulators connections.			
Power supply and protection of electric auxiliary.			

### 7.1.2 Starting-up

### • Switching On

(see chapiter "Star-up" page 31 & chapter "List of function lines (settings, diagnosis, status)", page 38).	OK	Non compliant	
Close the installation's main circuit breaker (power supply to the outdoor unit) 2 hours before starting up the tests => The compressor to pre-heat.			
Turn ON the start/stop switch => Initialisation for a few seconds.			
Operation of the heating pump.			
Outdoor unit starts after 4 mins.			
Configure Time, Date and time programs for HC1, HC2 if different than default values.			
Configure the hydraulic circuit (setting 5700)			
Ajust the heating curve slope (720 & 1020)			
Adjust the maximum start setting (741 & 1041)			

#### Outdoor unit checks

	OK	Non compliant	Value
Operation of fan(s), compressor.			
Current measurement.			
After a few minutes, measurement of air temp. delta.			
Check condensation and evaporation pressure/temperature.			

## • Hydraulic unit checks

	OK	Non compliant	Value
After 15 mins of operation.			
Primary water temp. delta.			
Operation of heating, mixing valve, boiler backup,			

#### • Remote control

(see chapiter "Configuring the room thermostat" page 32 & chapter 3.4.3 page 38).	OK	Non compliant	
Settings, manipulations, checks.			
Set the scheduled periods for heating (500 to 516 & 520 to 536).			
Adjust the heating setpoints (710 - 714; 1010-1014), if different than default values.			
Setpoint display.			
Explanations on use.			

## The heat pump is ready for operation !

## 7.2 Settings sheet

Setting	Description	Set to.	Menus				
Preliminary settings							
20	language		operator section				
1	hour / minutes		time & date				
2	day / month		time & date				
3	year		time & date				
5700	installation config.	configuration					
Heating circuit No. 1 if 2 circuits = the least warm one (e.g.: floor)							
710	comfort setpoint		HC1 adjust.				
712	reduced setpoint		HC1 adjust.				
720	heating curve slope		HC1 adjust.				
741	flow temp setpoint max		HC1 adjust.				
750	room influence		HC1 adjust.				
790 / 791	optimis. at switch-on / off		HC1 adjust.				
834	servomotor travel time		HC1 adjust.				
850 / 851	floor drying		HC1 adjust.				
Heating circuit No. 2 (with 2 <sup>nd</sup> circuit option) = the warmest one (e.g.: radiators)							
1010	comfort setpoint		HC2 adjust.				
1012	reduced setpoint		HC2 adjust.				
1020	heating curve slope		HC2 adjust.				
1041	flow temp setpoint max		HC2 adjust.				
1050	room influence		HC2 adjust.				
1090 / 1091	optimis. at switch-on / off		HC2 adjust.				
1134	servomotor travel time		HC2 adjust.				
1150 / 1151	floor drying		HC2 adjust.				
Domestic Hot Water (if DHW kit)							
1610	nominal DHW temp. setpoint		DHW				
1612	reduced DWH temp. setpoint		DHW				
1620	DHW release	DHW					
1640 to 1642	legionella cycle		DHW				
5024	DHW switch-on differ.		DHW tank				
5030	charging time limitation		DHW tank				

Setting	Description	Set to.	Menus				
5061	heater release		DHW tank				
Boiler backup							
3700	OT.switch-on authoris.	addit. gen.					
3705	swith-off delay		addit. gen.				
Miscellaneous							
6420	input H33 function	1	configuration				
6100	OT sensor correction		configuration				
6120	frost protection on/off		configuration				
6205	reset settings		configuration				
6220	software version		configuration				
6711	reset heat pump		error				
Cooling							
5711	cooling unit	2 pipes	configuration				
Faults (if a	a fault occurs, press"Info" key	<b>'</b> )					
No. 10	outdoor sensor						
No. 33	flow temp. sensor						
No. 44	return temp. sensor						
No. 50	DHW temp. sensor						
No. 60	room sensor 1						
No. 65	room sensor 2						
No. 105	maintenance message						
No. 121	HC1 flow T not reached						
No. 122	HC2 flow T not reached						
No. 127	leg. prot. T not reached						
No. 369	external fault (EX3)						
No. 370	outdoor unit connect error						
6711	reset heat pump		error				
Heat pump							
2844	switch-off temp max		heat pump				
2884	OT auth. to start elec. aux.		heat pump				
2920	Pk day clear (EX1) rel / lock	heat pump					
Swimming pool (with "swimming pool" kit option)							
2056	generator setpoint		Sw pool				
Outdoor unit faults (see page 58)							

## 7.3 Start-up data sheet

Site				Installer							
Outdoor unit	serial No.					Hydraulic unit		serial No			
	model							model	-		
		<u> </u>									
Refrigerant type						Refrigerant ch	arge				kg
Checks						Operating voltage & current on outdoor unit					
Compliance with position	oning distand	ces				L/N or L1/N		V			
Condensate evacuation	n correct					L2/N		V			
Electric connections / c	onnections t	ightnees				L3/N		V			
No GAS leaks (unit ID	No.:	)				L/T or L1/T		٧			
Installation of refrigerat	ion connecti	on correct (lenght :		m)		L2/T		٧			
Reading in HEATING	operating m	node				L3/T		V			
Compressor discharge	temperature	)		°C		N/T		V			
Liquid line temperature				°C		Icomp		Α			
Condensation temperature	HP =	bar	°C }			sub-cooling	sub-cooling				°C
Tank water output temp	erature			°C	}	ΔT condensation				°C	
Tank water input temperature °C			°C		ΔT secondary				°C		
Evaporation temperatu	re LP=	bar		°C		'					
Suction temperature °C		°C	}	Overheating				°C			
Battery air input temperature °C		°C	} }	ΔT evaporation	ΔT evaporation				°C		
Battery air output temperature °C		°C	]	ΔT battery					°C		
Hydraulic system of h	ydraulic un	nit									
	Low te	mp. heating floor								-	
Secondary system	LT Radiators			,		Circulator brand			Туре		
	fan coi	ls		}							
Domestic hot water ; ta	nk type										
Estimated water volum	e of seconda	ary system			L						
Options & accessorie	s:										
Power supply for connected electric auxiliary			Room thermos	stat							
Operation in cooling mode possible			Room thermostat radio								
Location of room sensor correct			Remote control								
Cooling kit				Wireless remote control  Details							
DHW kit											
2 zone kit											
Control settings											
Configuration type											
Essential settings											

Explain to the user how his installation operates, in particular the functions of the room thermostat and the programs accessible to him from the user interface.

Emphasise that a heated floor has significant inertia and that therefore any adjustments must be made progressively.

Also explain to the user how to check the filling of the heating circuit.

The frost protection works in all modes of operation and has priority over other functions (provided that the heat pump's electrical power supply is not interrupted).

Warning ! In winter, in case of power failure, the frost protection is no longer assured.

The water in the tank of the hydraulic module can freeze and cause damage.



#### Complies with

- Low voltage directive 2006/95/EC, under standard EN 60335-1.
- Electromagnetic compatibility Diretive 2004/108/EC,
- Directive 2006/42/EC Machinery,
- Directive for pressurised equipment 97/23/EC.

This appliance also conforms to:

- Regulation 842/2006 of the european parliament on certain fluorinated greenhouse gases.
- The standards relating to the product and the testing methods used: Air-conditioners, refrigeration units and heat pumps with compressor driven by electric motor for heating and refrigeration EN 14511-1, 14511-2, 14511-3, and 14511-4.
- To standard XP ENV 12102: Air-conditioners, heat pumps and dehumidifiers with compressor driven by electric motor. Measurement of airborne noise. Determination of acoustic power level.



This appliance is marked with this symbol. This means that electrical and electronic products shall not be mixed with general household waste. European Community countries(\*), Norway, Iceland and Liechtenstein should have a dedicated collection system for these products.

Do not try to dismantle the system yourself as this could have harmful effects on your health and on the environment.

The dismantling and treatment of refrigerant, oil and other parts must be done by a qualified installer in accordance with relevant local and national regulations.

This appliance must be treated at a specialized treatment facility for re-use, recycling and other forms of recovery and shall not be disposed of in the municipal waste stream. Please contact the installer or local authority for more information.

\* subject to the national law of each member state

Subject to modifications without notice. Non contractual document

Contact of your heating technician or your after-sales service.