



ECOSTAR 12/18/24/30/35 KW
Pellet BOILER
Assembly and exploitation manual



ECOSTAR AUTO 12/18/24/30/35 KW
Pellet BOILER
Assembly and exploitation manual

Mareli Systems

Observing the prescriptions of the present manual is in the user's favour and is one of the warranty conditions. Compliance with this instruction is in the interest of the consumer and one of the warranty terms.

INSTRUCTIONS FOR SECURITY:

- This appliance is not intended for use by people (including children) with limited physical, sensory or mental abilities or lack of experience and knowledge. The installation must be performed by a qualified expert in the field of heating installations or authorized by "Mareli Systems' service. The place and way of connecting the boiler should be selected carefully in accord with the safety instructions. Install away from flammable objects!
 - Before starting any operation, the user must read and fully understand the contents of this instruction manual. Incorrect setup may cause hazardous conditions and / or incorrect function of the boiler;
 - Do not wash the boiler with water. Water can get inside the fireplace and damage the electronics and cause an electric shock;
 - Do not put clothes to dry on the boiler. Any clothes hangers and other objects must be located within a reasonable distance from the fireplace. Fire hazard;
 - The user is fully responsible for the proper use of the product which exempts the company from liability of any users errors or misbehaviour or omissions;
 - Any intervention or replacement that is made by unauthorized people or using non original spare parts for the product can be risky for the user and release the company from all liability;
 - Most surfaces of the boiler are extremely hot (the door handle, glass, flue pipe, etc.). Avoid contact with these parts before assuring yourself that you use temperature resistant gloves as well as suitable temperature resistant instruments;
 - Under no circumstances should the fire be ignited with the door open or broken glass;
 - The product must be electrically connected to a system equipped with an effective earth conductor. (Must be grounded);
 - Turn off the boiler in case of failure or malfunction;
 - All unburned pellets in the burner after each unsuccessful attempt ignition must be removed before a new ignition;
 - When installing the product all fire safety requirements must be respected
- If there is a fire in the flue pipe, extinguish the boiler, disconnect the power cord and never open the door. Call competent authorized service technicians;
- Do not light the boiler with flammable materials if the ignition system failed;
 - Periodically check and clean the smoke outlet ducts of the boiler (connection to the flue pipe);
 - Pellet boiler is not a cooker;
 - Always keep the cover closed;

SAFE DISTANCES:

When installing the product a safe distance of at least 600 mm must be respected. This distance applies to the product located near materials of B or C flammability level. The safe distance is doubled if the product is close to materials of C3 combustion level.

1. PURPOSE

The boiler is purposed to heat domestic and public premises by the means of pellets. The boiler is equipped with a steel water jacket designed for heating systems with water temperature up to 90° C at a maximum super pressure up to 0,15 Mpa. Tests are run at pressure of 0,3 Mpa.

The boiler is designed and manufactured to work with A-class pellets only (DIN plus 51731) with the following characteristics:

- Material 100% pure conifer or broad-leaf wood;
- Diameter $\Phi 6/8$ mm;
- Length 20-30mm;
- Calorie capacity 5.2 kW/kg;
- Ash content < 8%;



The use of pellets with characteristics different from the recommended may result in power decrease, unstable and inconsistent work of the boiler.

What are the pellets.

The pellets are produced by compressed wooden waste left from the production of various furniture, sawmills and others. This type of fuel is environmentally friendly because in the production process no agglutinate agents (glues, resins and others) are added. Actually, the integrity of the pellets is guaranteed by the lignite – a natural ingredient contained in the wood itself. While the wood has a calorie capacity of 4.4 kW/kg (15% humidity at 18 months drying), the pellets have 5.2 kW/kg.



Info: To ensure the proper work of the boiler the pellets must be stored in a dry place!


Recharging of pellets can be done during work, with the following sequence:

1. Open the bunker (located at the top of the product);
2. Fill the hopper, using non-combustible container;
3. Close the lid of the bunker;

Attention!!! Use gloves! Beware of hot surfaces!


2. TECHNICAL DATA

| | | | | | | |
|---|----------------|------------------|------------------|------------------|------------------|------------------|
| Maximum output | KW | 12 | 18 | 24 | 30 | 35 |
| Heated area | m ³ | 250 | 350 | 500 | 600 | 700 |
| Height H | mm | 1485 | 1415 | 1415 | 1515 | 1515 |
| Width W | mm | 529 | 578 | 578 | 638 | 638 |
| Depth D | mm | 750 | 765 | 765 | 770 | 770 |
| Pellet bunker volume | kg | 100 | 100 | 100 | 100 | 100 |
| Fresh air pipe | φ mm | 48 | 48 | 48 | 60 | 60 |
| Exhaust gas pipe | φ mm | 80 | 80 | 80 | 80 | 80 |
| Weight | kg | 220 | 220 | 220 | 245 | 245 |
| Fuel type | | Pellets Φ6-Φ8 | Pellets Φ6-Φ8 | Pellets Φ6-Φ8 | Pellets Φ6-Φ8 | Pellets Φ6-Φ8 |
| The chimney draft | Pa | 12 | 12 | 12 | 12 | 12 |
| Electrical consumption | V/Hz | 60/310 | 60/310 | 60/310 | 60/310 | 60/310 |
| Electrical supply | V/Hz | 230/50 | 230/50 | 230/50 | 230/50 | 230/50 |
| Water jacket capacity | L | 30 | 48 | 48 | 65 | 65 |
| Working pressure | bar | 0,5-2,0 | 0,5-2,0 | 0,5-2,0 | 0,5-2,0 | 0,5-2,0 |
| Working at environment temperature | C | 5-40 | 5-40 | 5-40 | 5-40 | 5-40 |
| Humidity at 30° C environment temperature | % | 85 | 85 | 85 | 85 | 85 |
| Energy conversion efficiency | % | >94 | >95 | >95 | >93 | >93 |
| Co Emissions | Mg/m3 | <320 | <300 | <300 | <300 | <300 |
| Temperature of the flue gas | C | 110 | 125 | 125 | 147 | 147 |
| Max. water temperature | C | 90 | 90 | 90 | 90 | 90 |

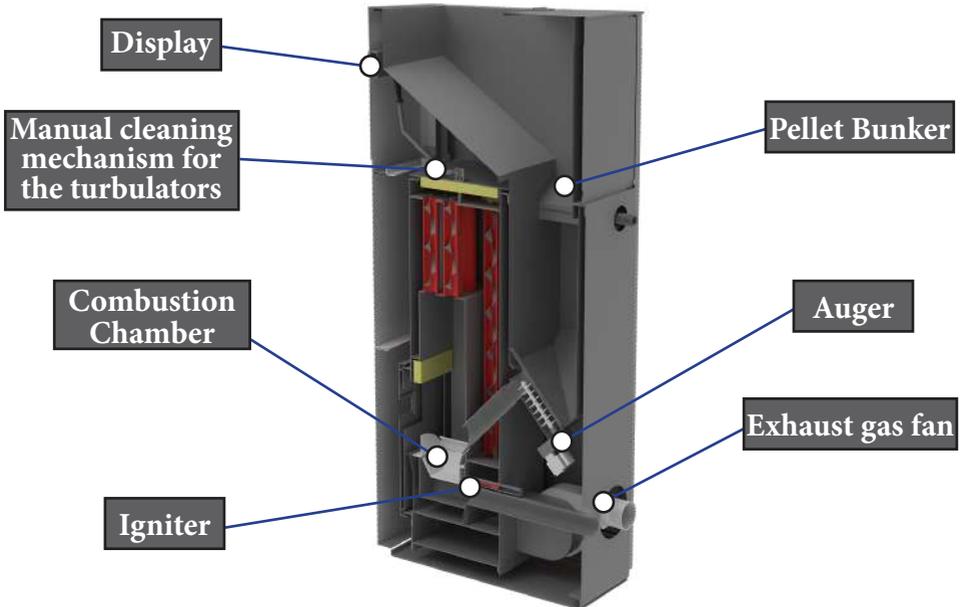

ECOSTAR AUTO

| | | | | | | |
|---|----------------|------------------|------------------|------------------|------------------|------------------|
| Maximum output | KW | 12 | 18 | 24 | 30 | 35 |
| Heated area | m ³ | 250 | 350 | 500 | 600 | 700 |
| Height H | mm | 1465 | 1465 | 1565 | 1565 | 1565 |
| Width W | mm | 600 | 600 | 680 | 680 | 680 |
| Depth D | mm | 795 | 795 | 795 | 795 | 795 |
| Pellet bunker volume | kg | 100 | 100 | 100 | 100 | 100 |
| Exhaust gas pipe | φ mm | 80 | 80 | 80 | 80 | 100 |
| Air inlet | φ mm | 60 | 60 | 76 | 76 | 76 |
| Weight | kg | 320 | 320 | 360 | 360 | 360 |
| Fuel type | | Pellets Ø6-Ø8 | Pellets Ø6-Ø8 | Pellets Ø6-Ø8 | Pellets Ø6-Ø8 | Pellets Ø6-Ø8 |
| The chimney draft | Pa | 12 | 12 | 12 | 12 | 12 |
| Electrical consumption | V/Hz | 60/350 | 60/350 | 60/350 | 60/350 | 60/350 |
| Electrical supply | V/Hz | 230/50 | 230/50 | 230/50 | 230/50 | 230/50 |
| Water jacket capacity | L | 38 | 38 | 50 | 50 | 50 |
| Working pressure | bar | 0,5-2,0 | 0,5-2,0 | 0,5-2,0 | 0,5-2,0 | 0,5-2,0 |
| Working at environment temperature | C | 5-40 | 5-40 | 5-40 | 5-40 | 5-40 |
| Humidity at 30° C environment temperature | % | 85 | 85 | 85 | 85 | 85 |
| Energy conversion efficiency | % | >95 | >95 | >94 | >94 | >93 |
| Co Emissions | Mg/m3 | <320 | <300 | <300 | <300 | <300 |
| Temperature of the flue gas | C | 94 | 96 | 99 | 91 | 93 |
| Max. water temperature | C | 90 | 90 | 90 | 90 | 90 |

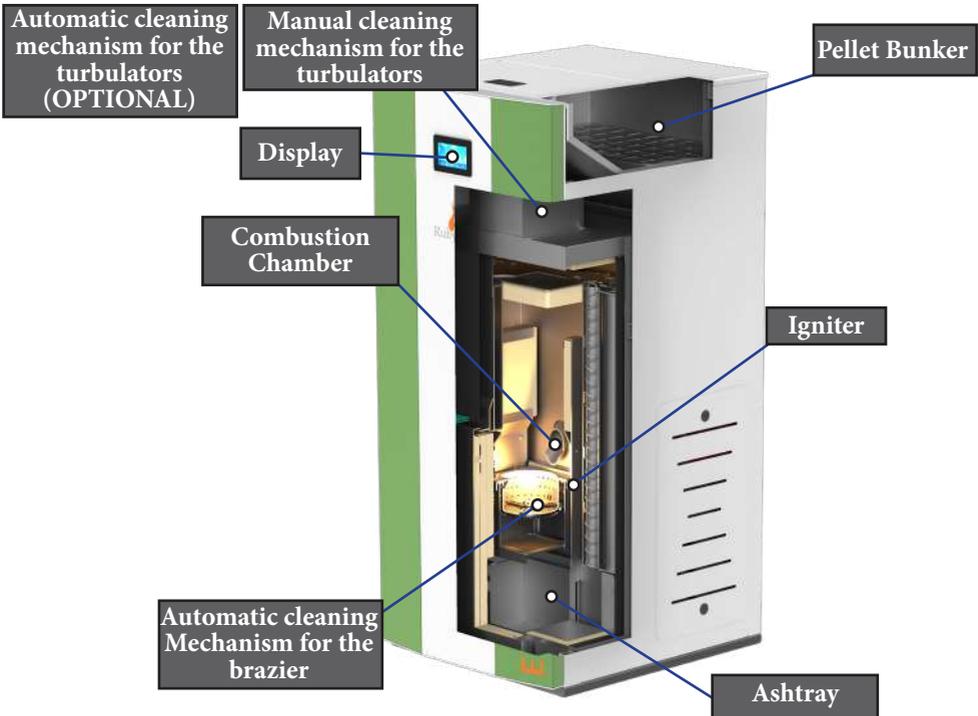

Mareli Systems

3. ASSEMBLY

3.1 General conditions.

All national, regional and European requirements for safe operation of the appliance must be respected during installation and operation.

Prior to installation, load capacity of the place where the boiler will be intended must be ensured. The weight of the boiler is specified in the technical data table. To ensure the correct and safe operation of the boiler, the following conditions must be met:

The installation of the boiler and its accessories must be carried out by authorized persons.

The floor where the boiler is installed should be flat and horizontal, made of fire-resistant materials at least 1500 mm in front of the fireplace and not less than 400 mm on both sides and at the back of the wall.


Minimum distances from the wall to the boiler should be at least 400 mm. The minimum space in front of the fireplace should be 1500 mm. The minimal distance of the boiler from combustion materials should be no less than 1500 mm.


The door of the fireplace should be closed tightly during the work process. Opening it during work is absolutely forbidden.

When installing the boiler, the connections between the individual pipes and the chimney rooftop must be dense.

When the fire is first ignited, a smell occurs as a result of the paint being heated.

The fireplace is painted with heat-resistant paint, which achieves its ultimate resistance after repeated use of the boiler. **THEREFORE KEEP OUTSIDE INTERACTIONS WITH THE COATING TO A MINIMUM** in order not to damage it.

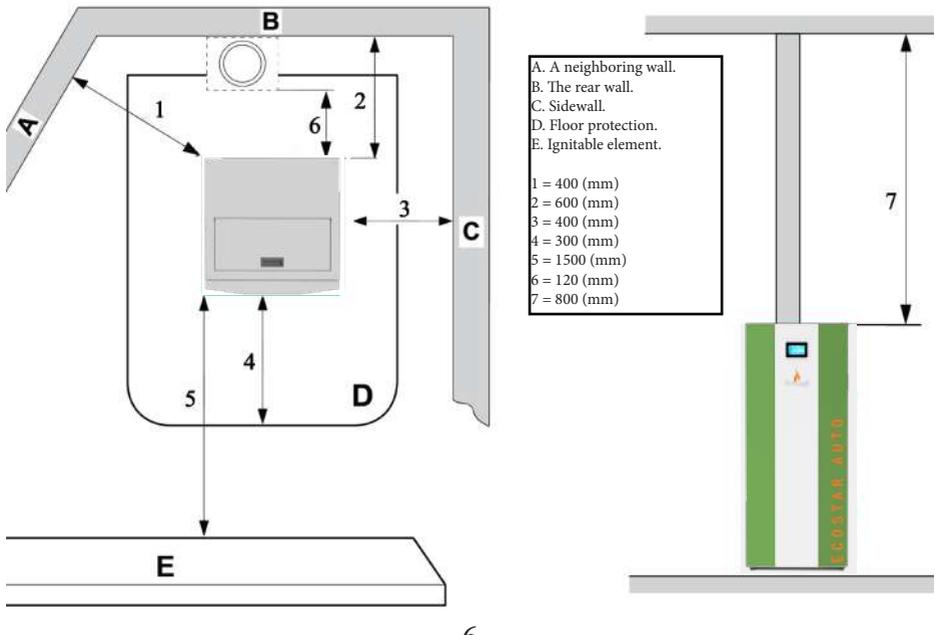

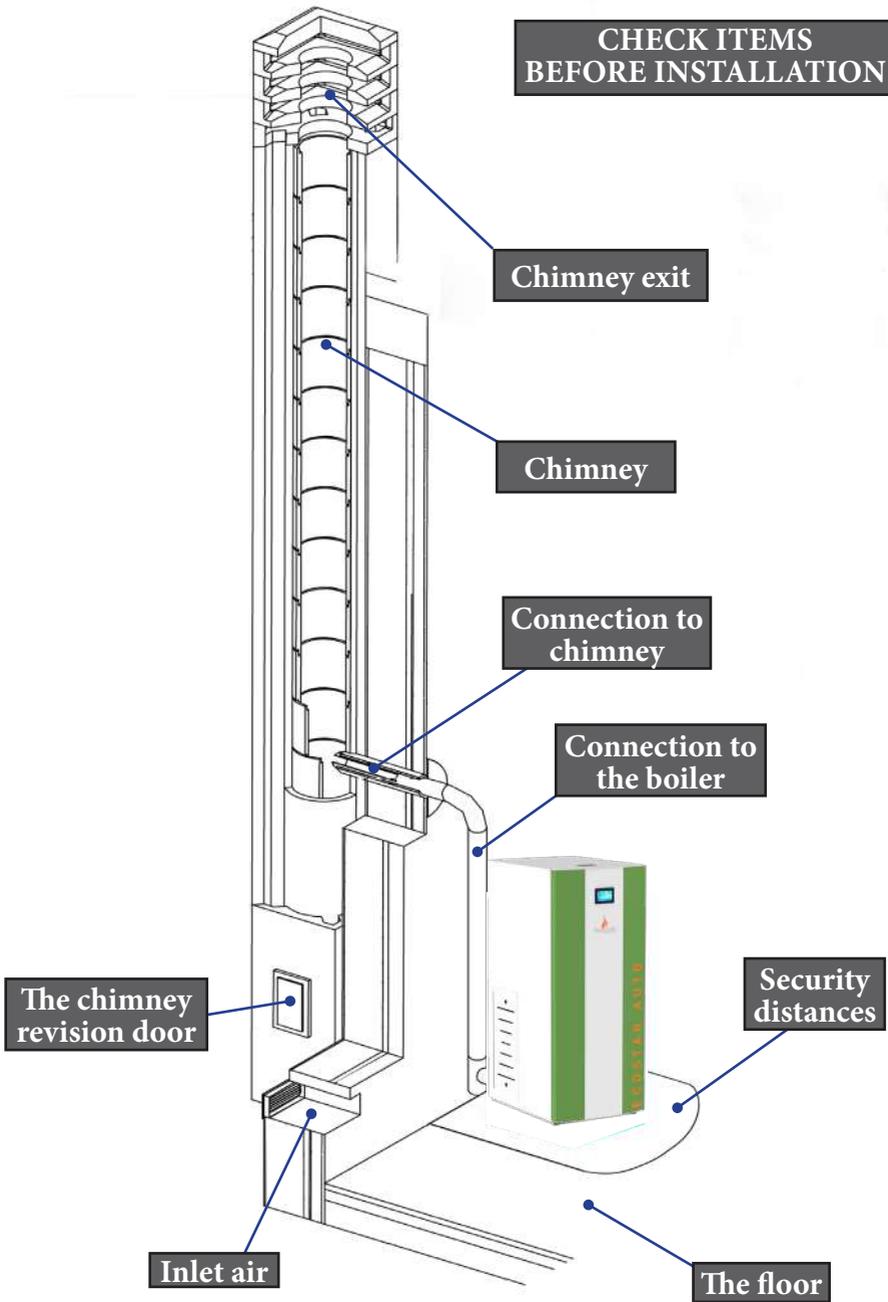

Mareli Systems

3.2 Basic rules and prescriptions.

The boiler with water jacket operates on water heating boiler principle.

The advantage of this type of heating system is the maximum utilization of the heat that is produced during the combustion process. With this method the heat from the combustion chamber is taken to remote and hard to reach for a normal heat exchange premises in order to maintain an even temperature and warmth comfort.

- Ensure that every branch and element of the installation is airtight at every single moment of its exploitation.
- All elements of the installation must be protected from freezing, especially if the enlarging pot or other parts are situated in non-heated premises.
- The circulation pump can be chosen by the capacity required by using the following formula:

$G=0,043 \cdot P$, (m³/h), in which:

P, kW is the heat output of the water jacket. The circulation pump can be turned on and off by the means of a thermostat in combination with an electric switch.

- The first service cleaning of the pump's filter must be done immediately after testing the installation.
- If an old installation is going to be used it must be washed several times to ensure the removal of any accumulated dirt on the surfaces of the water jacket.
- Do not drain the circulating water of the installation during the non-heated season.
- Chemical treatment of the circulating water is not recommended.

Chart 1 is a basic combined chart for heating with solid fuel boiler, electrical boiler equipped with water serpentine and a solar panel. For economy and efficiency of the system and a constant availability of cheap hot water a qualified assembly of the automatic shifter controlling the thermal flows to and out of the solar panel and the boiler is required.


Chart 2 shows a one storey heating with a compulsory circulation. The advantage of this chart is that the water-conducting elements can be hidden.

The enlarging pot must have a direct atmosphere connection which means that it must be placed on the highest spot in the system. Its capacity can be determined as 0,1 part of the total capacity of the system.


The filling or unloading of the system is done via a hose through a facet mounted in the lowest area. Mounting a membrane enlarging pot is permitted when constructing a closed type system. During the initial 3-4 start-ups a condensation on the surfaces of the water jacket may occur which depending on the fuel's humidity and the temperature of the incoming water may reach 0,3 liter on a single start-up. The accumulating char reduces the temperature difference and the condensation.

- "Mareli Systems" provides a warranty and out of warranty service and replacement of the water jackets.
- The warranty is not valid in case of a boiler with a swollen water jacket which is a result of pressure increase in the system and improper connecting.
- The water jackets are tested under pressure of 400 kPa (4 bar).

It is recommended that the assembly is performed by an authorized specialist.

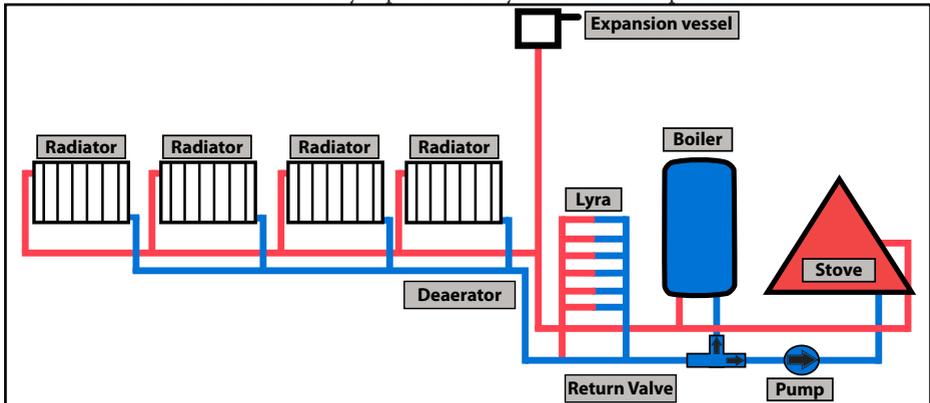

Example scheme for installation of an anti-condensation valve. It is recommended that the valve be at least 50 C. At the discretion of the installer, a valve with a higher return water temperature may be installed.

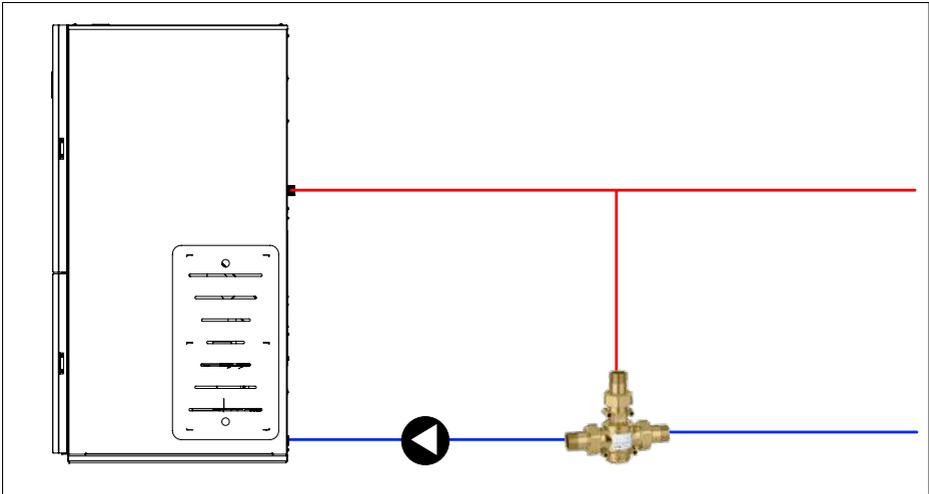



3.3 Assembly of the duct components.

Duct components and pipes

For the assembly of the duct pipes the use of non-flammable materials, resistant to the flammable products and condensation is obligatory. The assembly must be performed in such a manner so it guarantees the airtight sealing and prevents condensation. If possible, avoid adding horizontal sections. Direction shift is done by using knee joints with a max angle of 45°. For heating devices equipped with a smoke ventilator, i.e all of the “MARELI” boilers, the following instructions must be observed:

- Horizontal sections must have a minimum incline of 3° upwards;
- The length of the horizontal sections must be as short as possible, but without exceeding 3 m;
- More than four direction shifts are forbidden, including the cases where a T-shaped element is used;
- The duct components must be airtight and to be insulated if extending outside the premises in which the fireplace is installed;
- The duct components must allow a soot cleaning;
- The duct components must have a constant section. A section change is allowed only in the chimney joint;

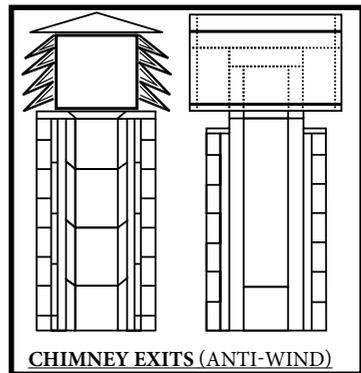

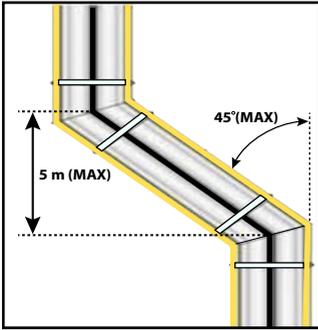


Chimney

The chimney or the duct component must conform with the following requirements: to be airtight, waterproof and properly insulated, to be constructed with materials resistant to the normal mechanical wear and to the heat coming from the combustion products and condensation.


- To be kept away from flammable materials.

The recommended chimney draft at work - from 12-20 Pa.

Attention!!! In case of a fire hazard turn off the product from the display. This will stop the oxygen flow to the product.

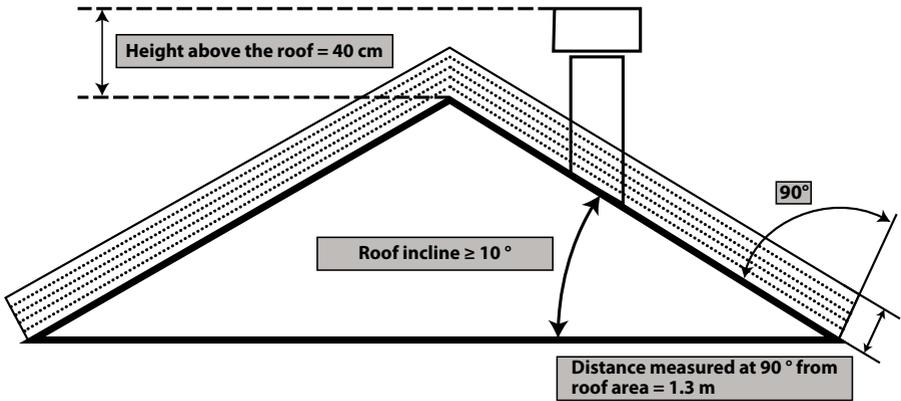

3.4 Types of connection to the chimney

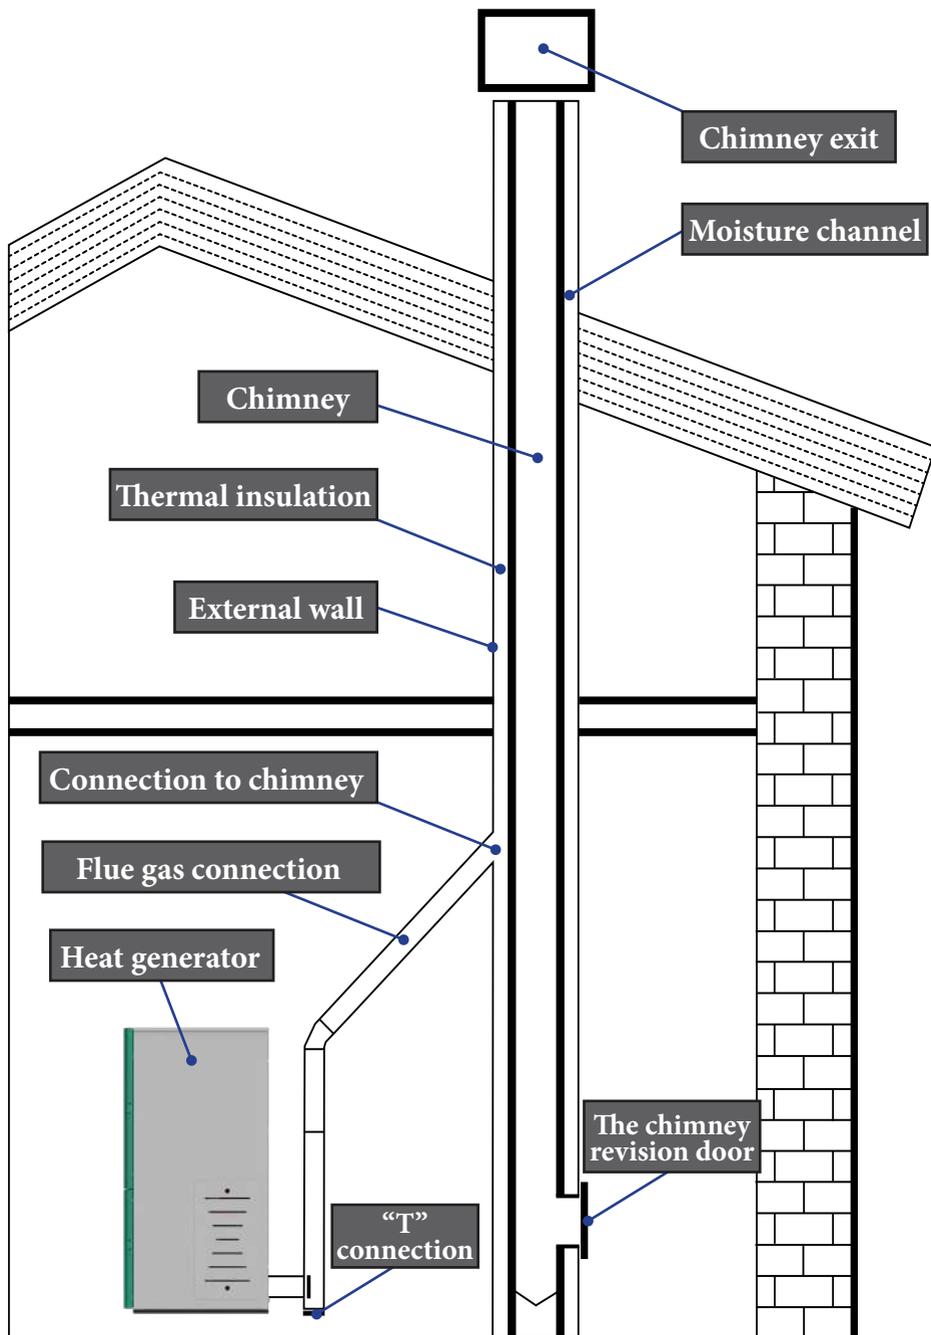

Mareli Systems

3.5 Air intake

Suction pipe or air intake is placed in the back and has a circular section with a diameter of 48 mm. The combustion air can be aspirated:

- From the camera, as long as it is near an air intake communicating with the outside wall having a minimum area of 100 cm², properly positioned and protected by a grid.
- Or by connecting directly outside with a suitable tubing having an inner diameter of 48 mm and a maximum length of 1.5 M.2

4. Cleaning

Cleaning the fireplace should be done only when cold. The cleaning of the combustion chamber must be carried out daily.


For this purpose, make sure the fireplace has ceased operation and is completely cold. Pull up the combustion pot and remove it from the boiler and then clean it from soot.

When removed fuel pot at the bottom of the combustion chamber opens a hole designed for the accumulated ash. Collect ashes in the ashtray and return fuel pot in place and then close the door. The fireplace is ready for operation.

Cleaning of flues and chimneys are conducted once every 1.5 tons of fuel used



Combustion Chamber

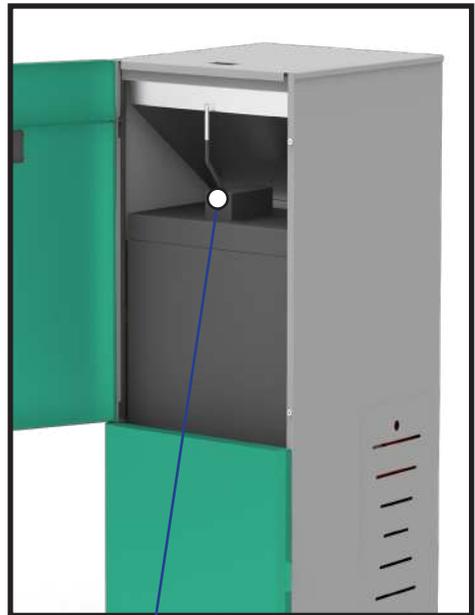

Manual cleaning mechanism for the turbulators


Automatic cleaning mechanism for the turbulators (OPTIONAL)

ECOSTAR

Cleaning the glass
Use an non-abrasive
cloth



Cleaning the
pellet bunker

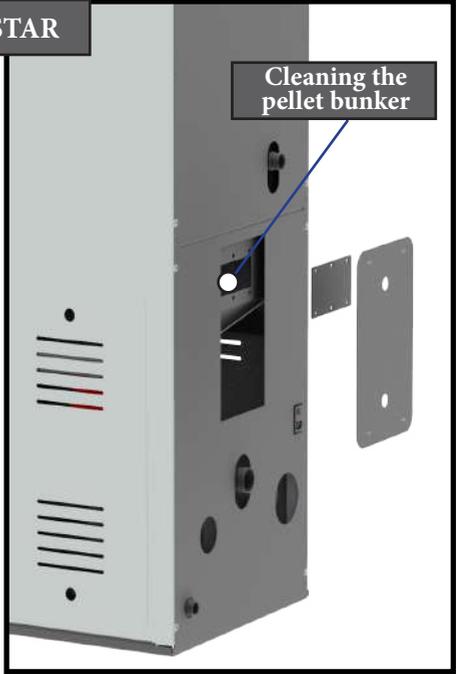


Clean the flue gas
outlet





Combustion
chamber

Clean the
ashtray

Revision
door

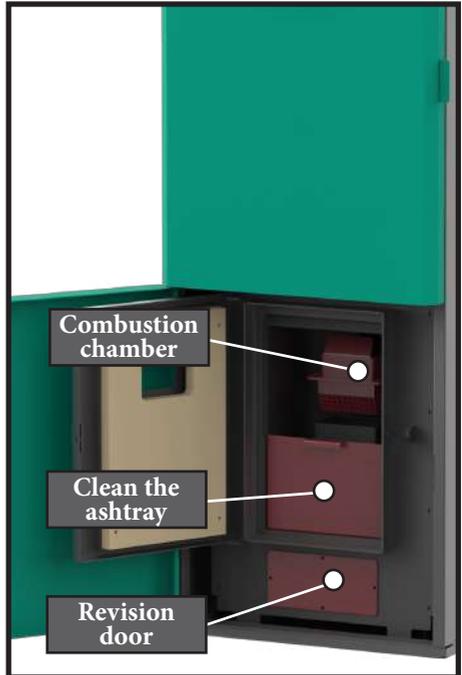

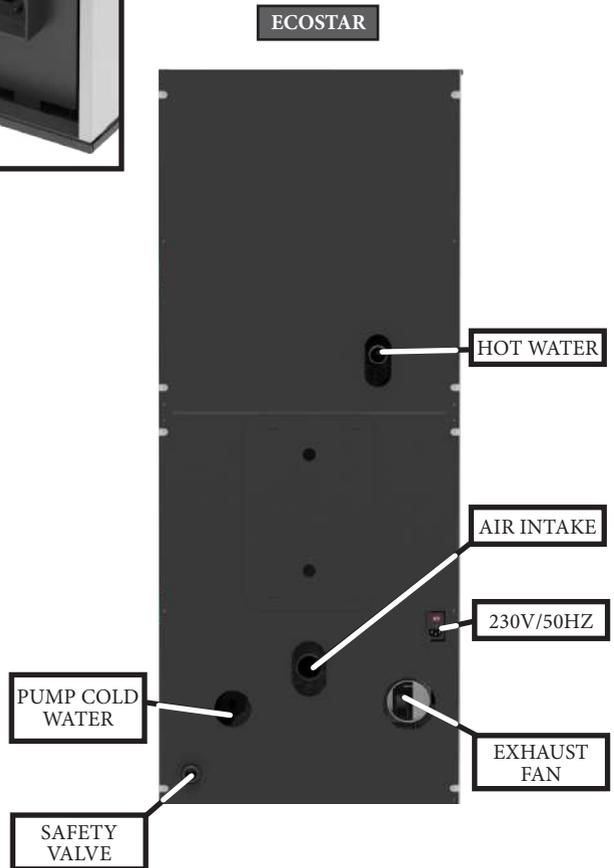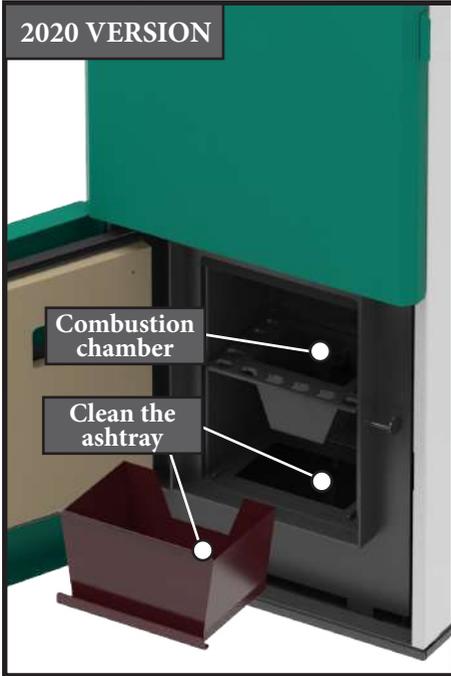

ECOSTAR AUTO



CLEANING THE GLASS USE A NON-ABRASIVE CLOTH

ECOSTAR AUTO



CLEANING THE PELLET TANK

ECOSTAR AUTO




Left inspection door



ECOSTAR


ECOSTAR AUTO

Right inspection door

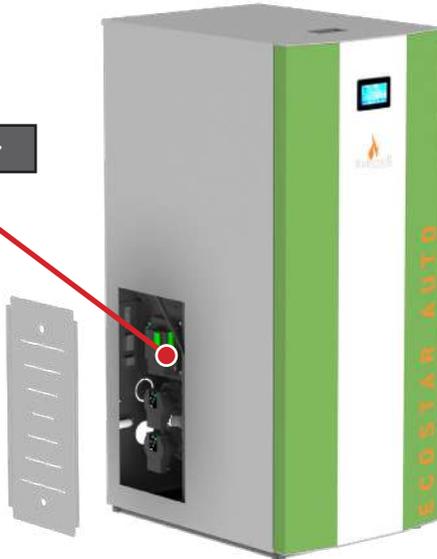


ECOSTAR

ECOSTAR AUTO

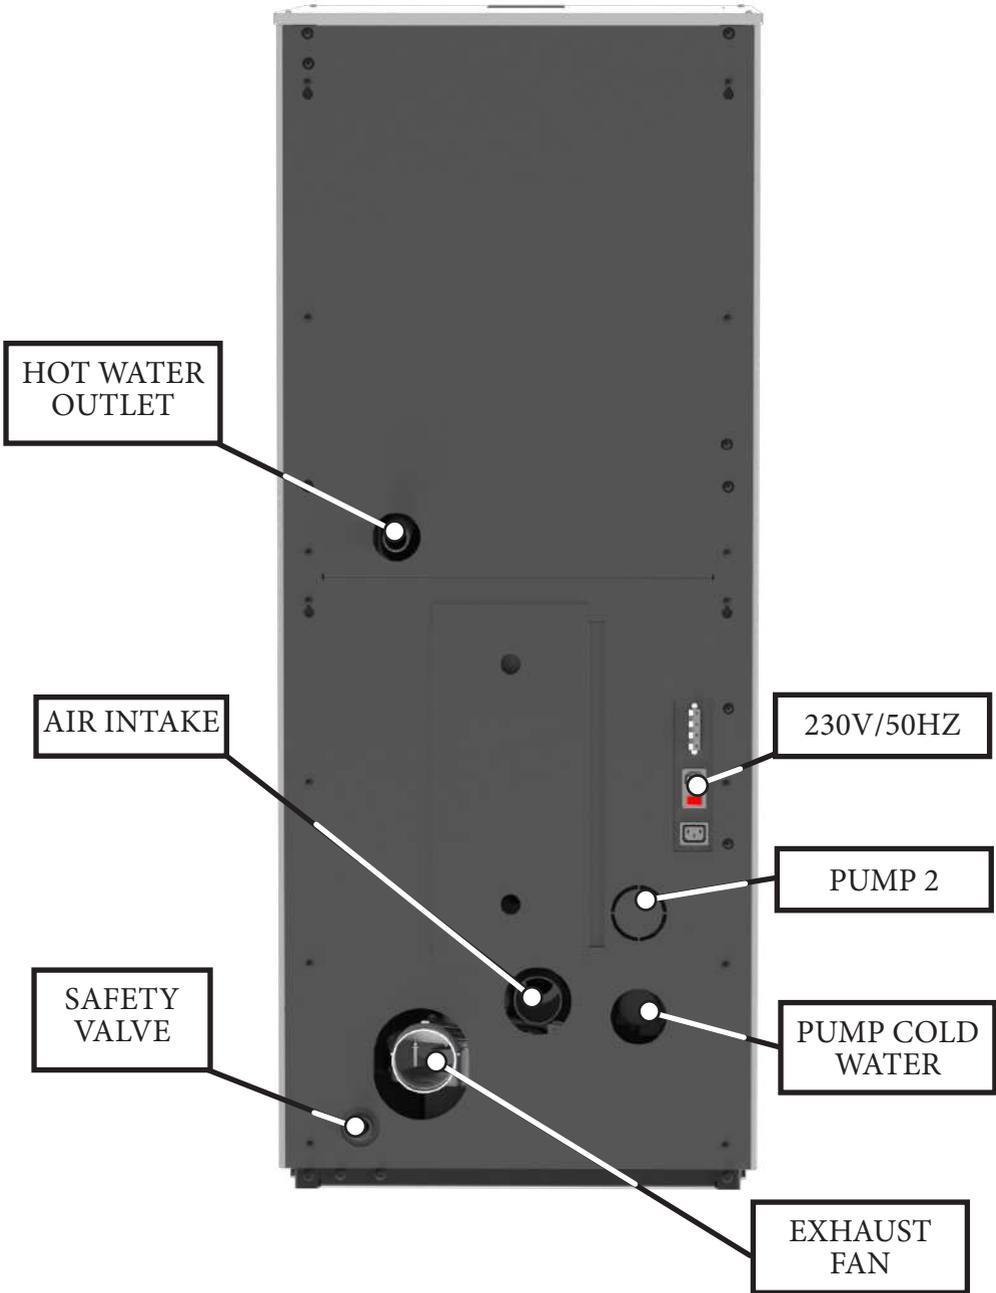

ECOSTAR AUTO

1

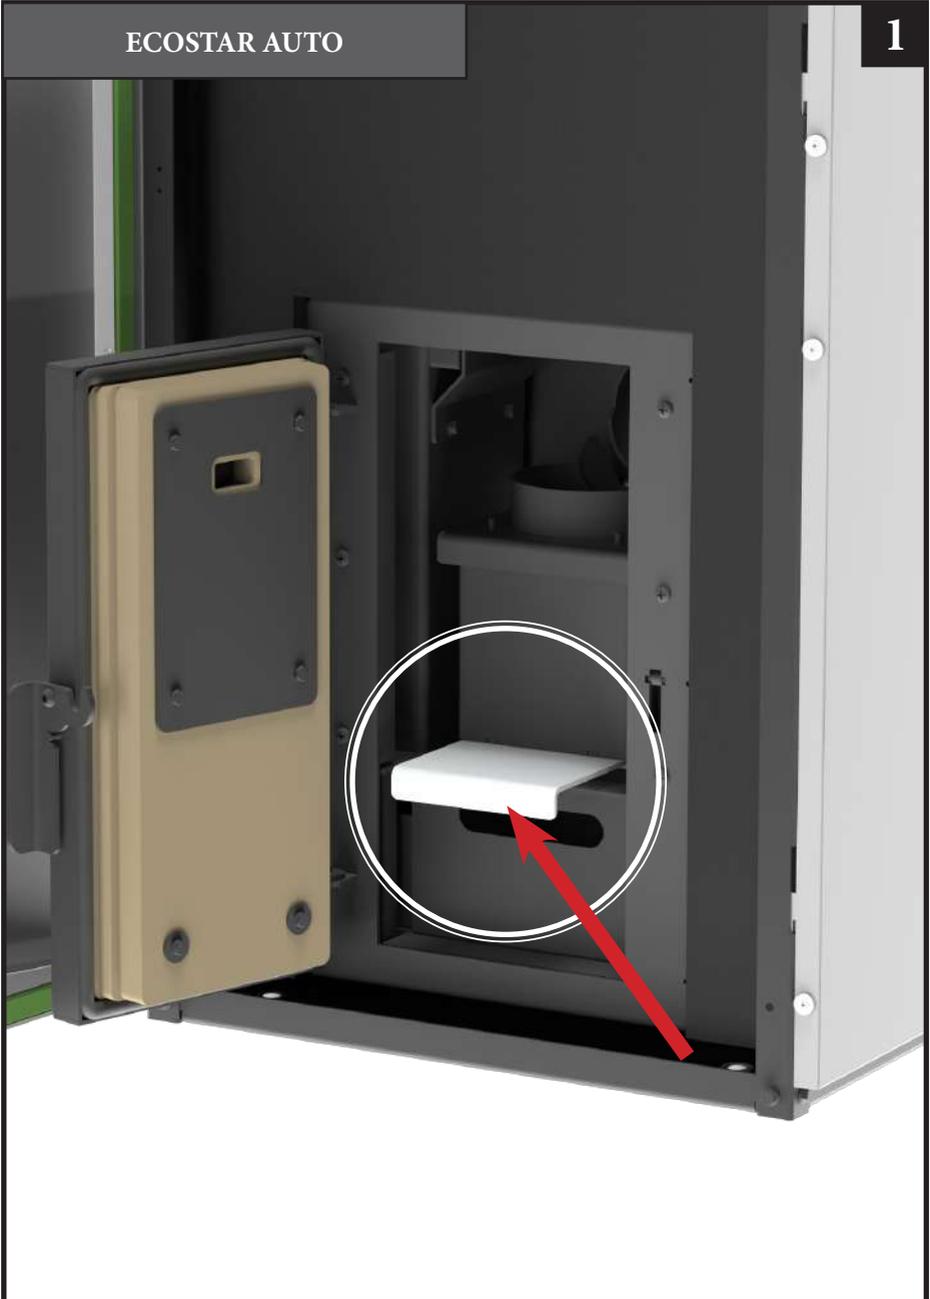


IT IS MANDATORY THAT AT EACH EMPTYING OF THE ASH CONTAINERS, THE COMBUSTION BOX IS ALSO CLEANED.



EMPTY THE FIRST ASH CONTAINER

ECOSTAR AUTO

3

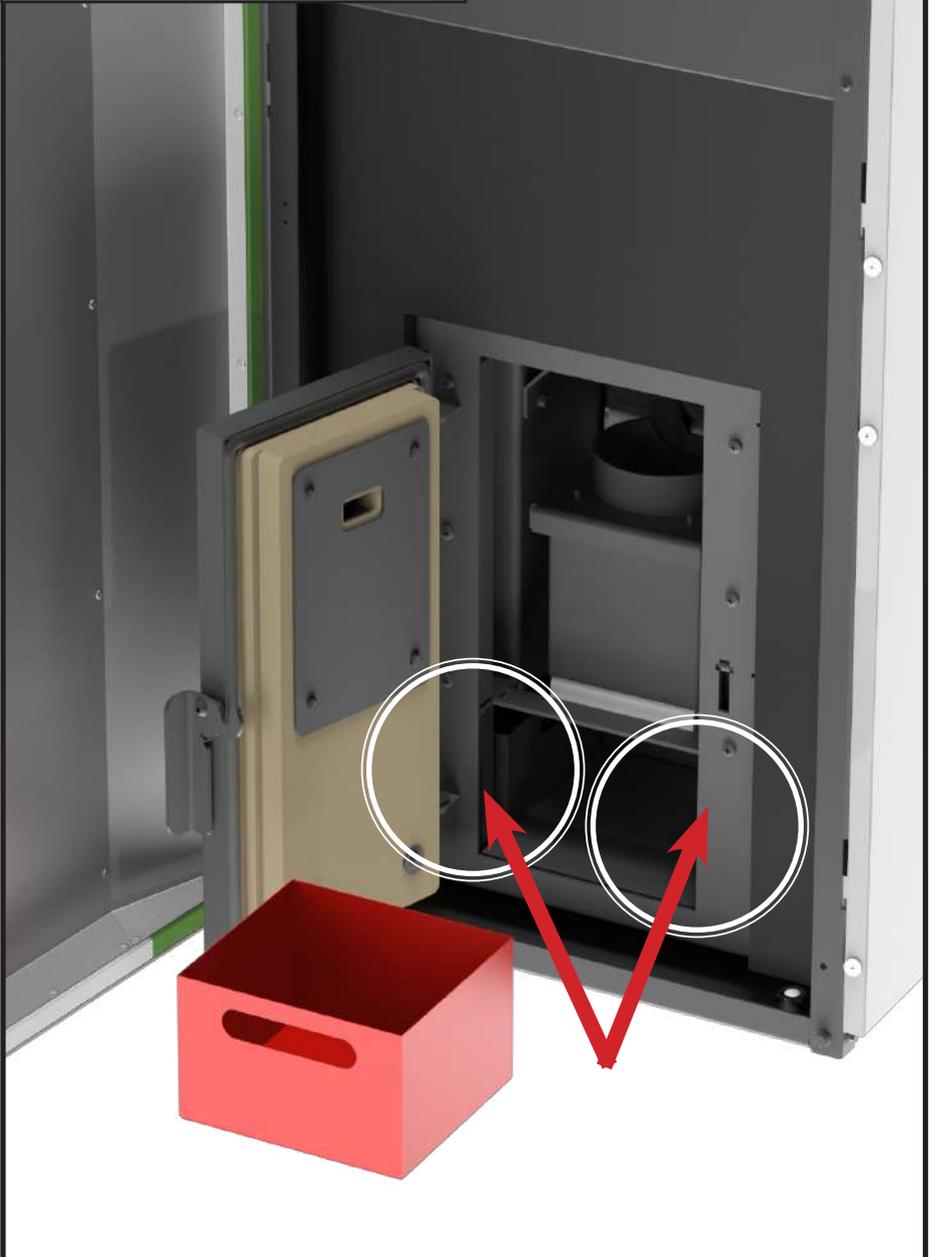

REMOVE THE 2 OTHER ASH CONTAINERS FROM THE SIDES.

ECOSTAR AUTO



EMPTY THE 2 SIDE ASH CONTAINERS

| Maintenance program | | | | |
|----------------------------------|-------------------------|---------------|-------------------------|---------------|
| | At each ignition | Weekly | Twice per season | Annual |
| Combustion chamber | V | | | |
| Clean the ashtray | | V | | |
| Glass | | V | | |
| The Door | | V | | |
| Clean the flue gas outlet | | | V | V |
| Door seals | | | | V |
| Chimney | | | V | V |

5 Safety and unexpected risks

Terms of danger may arise in the following cases:

- Automated pellet boiler is used incorrectly;
- The unit is installed by unqualified personnel;
- The safety instructions described in this management are not met;


Unforeseen risks:

Pellet fireplace “Mareli” has been designed and manufactured in accordance with the safety requirements on the national, regional and European levels. Although considered possible risks arising from improper use, you may experience the following risks:

- Risks of spreading combustion outside fireplace - opening the door of the chamber of the fireplace may fall hot / burning particles (as hot ash and small particles burning coal), which could lead to a fire in the heated room. It is therefore necessary that the product always works with a tightly closed door. It can only be opened when the product has completely cooled down;
- Risks of burns caused by high temperatures as a result of the combustion process in the combustion chamber and / or access to the door of this burn chamber when the product is not completely cool;

In case of fire hazard the product should be stopped by the controller and power supply until the cause of the problem is determined.

CONTROL PANEL: USE AND FUNCTIONS

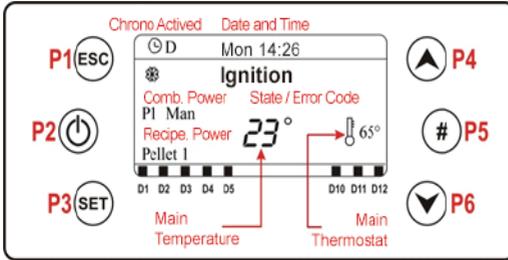

The main frame shows:

time and date, chrono activation, combustion power and recipe, functioning state, error code main temperature, main thermostat, summer/winter mode.

| Button | Function |
|-----------|--|
| P1 | Exit Menu/Submenu; |
| P2 | Ignition and extinguishing (push for 3 seconds), Reset errors (push for 3 seconds), Enable/disable chrono; |
| P3 | Enter in User Menu 1/submenu, Enter in User Menu 2 (push for 3 seconds), Save data; |
| P4 | Enter in Visualizations Menu, Increase |
| P5 | Activation chrono time band |
| P6 | Enter in Visualizations Menu, Decrease |

| Led | Function |
|------------|-------------------------------|
| D1 | Igniter ON |
| D2 | Auger ON |
| D3 | Pump 1 ON |
| D4 | V2: Pump 2 ON |
| D9 | External Chrono reached |
| D10 | Lack of pellet |
| D11 | Local Room Thermostat reached |
| D12 | Sanitary water demand |

ALARMS

Er01 - Security Error High Voltage 1. It may also intervene with the system off;
Er02 - Security Error High Voltage 2. It can only intervene if the Combustion fan is active;
Er03 - Extinguishing for low exhaust temperature or missing light in the brazier;
Er04 - Extinguishing for water over temperature;
Er05 - Extinguishing due to high exhaust temperature;
Er06 - Pellet Thermostat open (flame return from the brazier);
Er07 - Encoder Error. The error may occur due to lack signal from Encoder;
Er08 - Encoder Error. The error can occur due to problems of adjustment of the number of revolutions;
Er09 - Water pressure low;
Er10 - Water pressure high;
Er11 - Clock Error. The error occurs due to problems with the internal clock;
Er12 - Extinguishing for ignition failure;
Er15 - Extinguishing due to power failure for more than 50 minutes;
Er16 - RS485 communication error (Display);
Er17 - Adjusting the Air Flow Failed;
Er18 - No more Pellet in the bunker;
Er23 - Boiler probe or Back boiler probe or probe Buffer open;
Er25 - Engine cleaning brazier broken;
Er26 - Engine cleaning broken;
Er27 - Engine cleaning 2 broken;
Er39 - Sensor Flowmeter broken;
Er41 - Minimum air flow in Check Up is not reached;
Er42 - Maximum air flow exceeded;
Er44 - Open door error;
Er47 - Error Encoder Auger: missing signal Encoder;
Er48 - Error Encoder Auger: Auger regulation speed not achieved;
Er52 - Error Module I/O I2C;
Er57 - Test 'Forced Draught High' in Check Up fail;
Service - Service error. It notifies that the planned hours of functioning is reached. It is necessary to call for service.

MESSAGES

| Description | Code |
|---|-----------------------|
| Anomaly of the probes checking, during Check Up phase. | PRob |
| Room temperature greater than 99 °C. | Hi |
| This message notifies that the planned hours of functioning (parameter T67) are reached. | Clean |
| Door Open. | Port |
| The message appears if the system is turned off during Ignition (after Preload) not manually: the system will stop only when it goes in Run Mode. | Ignition block |
| Periodical Cleaning in progress. | Cleaning on |
| No communication between motherboard and keyboard | Link Error |

VISUALIZATIONS

Exhaust T. [°C] - Exhaust temperature;
Room T. [°C] - Room Temperature; it is displayed only if an input has been set as a Room Probe;
Boiler T. [°C] - Boiler Temperature;
Buffer T. [°C] - Buffer Temperature, it is visible only if P26 is set on 2,3,4;
Pressure [mbar] - Water pressure;
Air Flux - Air flow; it is visible only if A24 is different from 5;
Fan Speed [rpm] - Exhaust fan speed; it is visible only if P25 is different from 0;
Auger [s] - Auger work time; it is visible only if P81 is equal to 0;
Recipe [nr] - Combustion recipe set; it is visible only if P04 is greater than 1;
Product Code: 510 - Product code;

USER MENU 1

Combustion Management

Power - In this menu it is possible to modify the combustion power of the system. It can be set in automatic or manual modality. In the first case the system chooses the combustion power. In the second case the user selects the desired power. On the left side of the display are signalled the combustion modality (A=automatic combustion, M>manual combustion) and the working power of the system.

Recipe - Menu to select the combustion recipe. The maximum value is the number of recipes visible to the user.

Heating Management

Boiler thermostat - Menu to change the value of the boiler thermostat.

Buffer thermostat - Menu to change the value of the Buffer Thermostat; it is only visible if a plumbing plan with a Buffer is selected.

Room Thermostat - This Menu allows to modify the Local Room Thermostat's value. It is visible only if the ambient probe is select.

Summer-Winter - Menu that allows the selection Summer-Winter.

Manual Load

The procedure activates the pellet manual loading with activation in continue modality of the Auger engine. The loading is stopped automatically after 600 seconds. The system must be OFF for the function can be activated.

Cleaning Reset

Menu to reset the 'System Maintenance 2' function.

CHRONO

This Menu allows selecting the programming modalities and and the Ignition/Extinguishing time slots.

Modality - It allows selecting the disired modality, or disable all set programming.

1. Enter modification mode through the key **P3**.
2. Select the chosen modality (Daily, Weekly or Week end).
3. Enable/disable chrono modality through the keys **P2**.
4. Save the settings through the keys **P3**.

Disable
Daily
Weekly
Week -End

Programming

The system includes three type of programming: Daily, Weekly, Week end.

After selecting the desired kind of programming:

1. Select the programming time through the keys **P4/P6**.
2. Enterthe adjustment modality (selected time will be flashing) through the keys **P3**.
3. Change the time via keys **P4/P6**.
4. Save the programming with the keys **P3**.
5. Enable (a "V" is displayed) or disable the time slot (a "V" is not displayed") by pressing the keys **P5**.

| Monday | |
|--------|---------|
| ON | OFF |
| 09:30 | 11:15 V |
| 00:00 | 00:00 |
| 00:00 | 00:00 |

Daily

Select the day of the week to program and set the ignition and extinguishing times.

Programs around midnight

Set the clock On of the previous day at the desired time: Ex. 20.30

Set the clock of OFF of the previous day at: 23:59

Set the clock On of the following day at 00:00

Set the clock of OFF of the following day at the desired time: Ex. 6:30

The system turns on at 20.30 on Tuesday and turns off at 6.30 on Wednesday

Monday
Tuesday
Wednesday
Thrusday
Friday

Weekly

The programs are the same for all days of the week.

Week-end

Choose between 'Monday-Friday' and 'Saturday-Sunday' and then set the switching on and off times.

Mon-Fri
Sat-Sun

USER MENU 2

Menu is accessed by pressing the **P3** buttons for 3 seconds .

Settings

Time and Date - Used to set the day, month, year and current time.

Language - Menu to modify the language of the LCD board.

Auger Calibration - It allows to modify the value set in firm of Auger's speed or On times. The values are in the range - 7 ÷ 7. The firm's value is 0.

Fan Calibration - It allows to modify the value set in firm of Combustion Fan's speed. The values are in the range - 7 ÷ 7. The firm's value is 0.

Summer-Winter - This Menu allows you to modify the hydraulic plant functioning depending on the season.

Display Menu

Contrast - Menu used to regulate the display contrast.

Brightness - It allows you to adjust the screen brightness.

Minimum Brightness - Menu used to regulate the lighting of the display when the command aren't used.

Keyboard Address - This Menu is protected by a password (the password is 1810), that allows you to set the RS485 node address. With the bus 485 it is not possible to have more nodes with the same address.

Sound - It allows you to enable or disable sound from the control panel.


Node List - This menu shows: communication address of the board, typology of the board, firmware code and firmware version. Data are not modifiable. The typologies of board that can appear are:

MSTR - Master; INP - Input; KEYB - Keyboard; OUT - Output;

CMPS - Composite; SENS - Sensor; COM - Communication;

Acoustic Alarm - It allows to enable or disable the acoustic alarm of the keyboard.

CONTROL PANEL K500

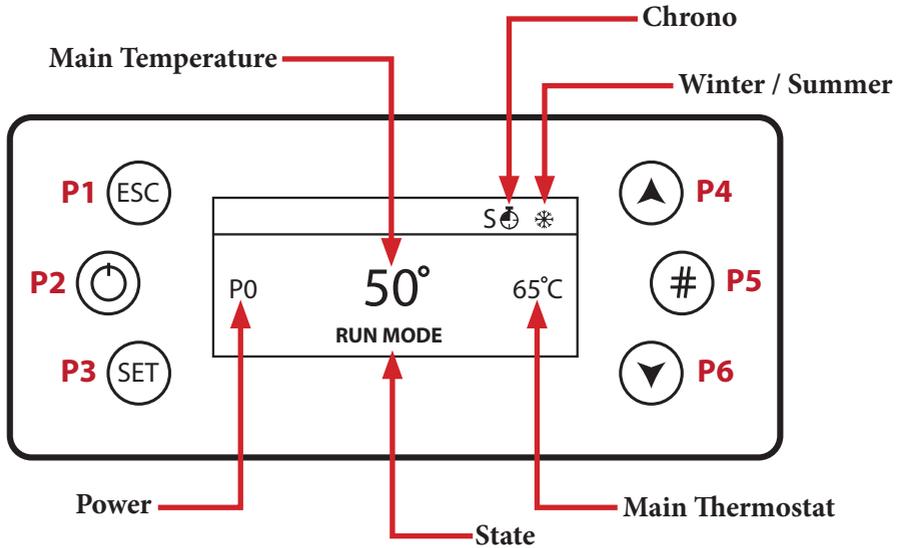

- P1** - Exit from menu/submenu refill Function (push for 3 seconds)
- P2** - Ignition, extinguishing and errors reset (push for 3 seconds) Enable/Disable Chrono
- P3** - Access to User Menu 1/ submenu / Access to user 2 menu (push for 3 seconds) / Save Data
- P4** - Access to combustion power / Menu Increase
- P5** - Enable chrono time slot / Access to the Info Menu
- P6** - Access to Room Thermostat / Boiler Thermostat / Menu Decrease

P3 + P5 - Direct access to the Secondary Information menu inside the Service menu. (push for 3 seconds)



G - Daily Chrono on / **S** - Weekly chrono on / **FS** - Week End Chrono On



DHW demand or buffer tank thermostat not reached



Local room heating target reached

USER MENU 1

Power - Pellet Menu to modify the combustion power of the system in Pellet mode. It is possible to set it in auto or manual mode: in the first case the system chooses the power combustion, while in the second one, the user selects the power. On the left of the display the combustion mode is reported (A= automatic combustion, M=manual combustion) and the system working power.

Thermostats

Boiler - Menu to modify the Boiler Thermostat value. You can program the minimum and maximum value by setting the Thermostats Th26 and Th27. With climatic function switched on the thermostat value cannot be modified, because it is automatically computed by the system.

Buffer Tank - Menu that allows to modify the Buffer tank Thermostat value; it is shown if, it is displayed if a hydraulic plant requiring it has been selected.

DHW - Menu to edit the DHW thermostat value.

CHRONO

This Menu allows selecting the programming modalities and and the Ignition/Extinguishing time slots.

Mareli Systems

Modality - It allows selecting the desired modality, or disable all set programming.

1. Enter modification mode through the key **P3**.
2. Select the chosen modality (Daily, Weekly or Week end).
3. Enable/disable chrono modality through the keys **P2**.
4. Save the settings through the keys **P3**.

Disable
Daily
Weekly
Week -End

Programming

The system includes three type of programming: Daily, Weekly, Week end.

After selecting the desired kind of programming:

1. Select the programming time through the keys **P4/P6**.
2. Enter the adjustment modality (selected time will be flashing) through the keys **P3**.
3. Change the time via keys **P4/P6**.
4. Save the programming with the keys **P3**.
5. Enable (a "V" is displayed) or disable the time slot (a "V" is not displayed") by pressing the keys **P5**.

| Monday | |
|--------|---------|
| ON | OFF |
| 09:30 | 11:15 V |
| 00:00 | 00:00 |
| 00:00 | 00:00 |

Daily

Select the day of the week to program and set the ignition and extinguishing times.

Programs around midnight

Set the clock On of the previous day at the desired time: Ex. 20:30

Set the clock of OFF of the previous day at: 23:59

Set the clock On of the following day at 00:00

Set the clock of OFF of the following day at the desired time: Ex. 6:30

The system turns on at 20.30 on Tuesday and turns off at 6.30 on Wednesday

Monday

Tuesday

Wednesday

Thursday

Friday

Weekly

The programs are the same for all days of the week.

Week-end

Choose between 'Monday-Friday' and 'Saturday-Sunday' and then set the switching on and off times.

Mon-Fri

Sat-Sun

USER MENU 2

Settings

Time and Date - It allows you to set day, month, year and current time.

Language - It allows you to modify the language of the keyboard.

Recipe - Menu for the selection of the combustion recipe.

Summer/Winter - Menu to edit the functioning of the hydraulic system according to the season.

Service

Counters - Ignitions (Number of attempted Ignitions) - **Failed Ignition** (Number of failed ignitions) -

Working hours (Operating hours in Run mode, Modulation and Safety).

Errors List - The menu shows the last 10 errors; in each line the error code and time/date of the error itself are shown.

Secondary Information - Information about configurable outputs and inputs are only available if they have been set.

Cleaning Reset - Menu to reset the function 'System Maintenance 2'. It is displayed only if T67>0.

Auger Calibration - This menu allows you to modify the default values of the Auger speed or its On times. You can set the values in a range within $-7\div7$. The default value is 0.

Fan Calibration - This menu allows you to modify the default values of the Combustion Fan speed. You can set the values in a range within $-7\div7$. The default value is 0.

Mixer Valve - Menu to manage the Mixer Valve operation.

Automatic Power - This menu allows you to set combustion power in automatic mode only. If you set it, power change menus are no longer displayed.

Loading - The procedure enables the pellet manual charge and it is automatically interrupted after 300 seconds. In order to enable this function, the system must be on mode Off.

Loading Test - The procedure allows calculating the amount of pellet used in 10 minutes with the auger.

Display


Contrast - It allows you to adjust the screen contrast.

Screen saver - This Menu allows the user to enable and disable the screen saver.


Acoustic Alarm - Menu to enable/disable the acoustic alarm.

Minimum Brightness - It allows you to adjust the screen brightness when not using the controls.

K400 TOUCH SCREEN DISPLAY

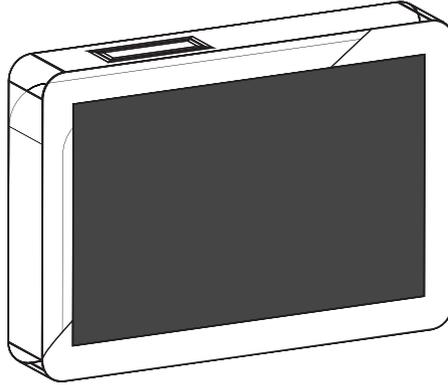

1. HOMEPAGE

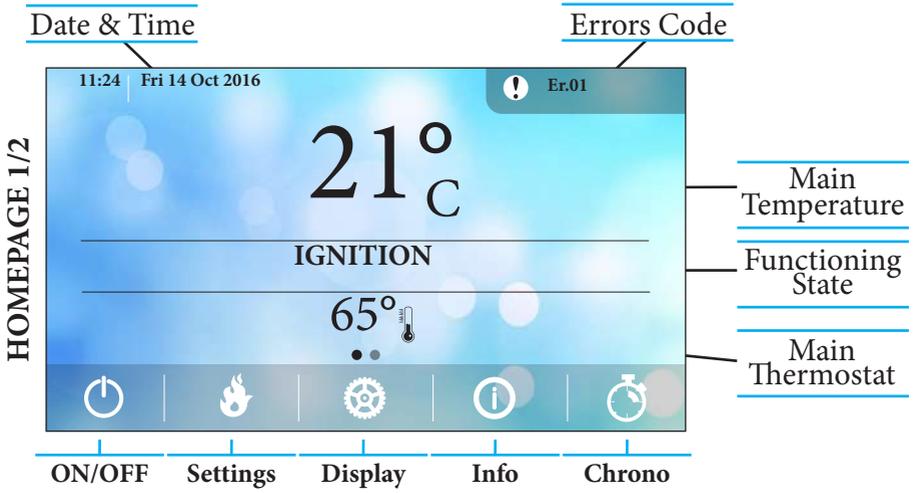

Main Commands



In order to go to Homepage 2 a horizontal swipe must be performed to the right side of the screen.

HOMEPAGE 2/2



System activity LEDs



The Quick visualization of the system main function is accessed through a vertical swipe to the top side of the screen.



SPECIAL LEDs



Quick visualization of the system main function

2. ERROR LIST



Blocking or non-blocking error is highlighted with a **!** and the related error code. When pressed the error window opens

| Error List | |
|------------|-------|
| Er10 | 10:50 |
| Er 53 | 11:20 |


By clicking on (**i**) you can see the errors stored by date / time and description



When this message is on screen this means that the product is in blocking mode and you can remove the error. You can do this by swiping to the right in the center of the screen.

Blocking / Removing Error


4. MAIN COMMANDS

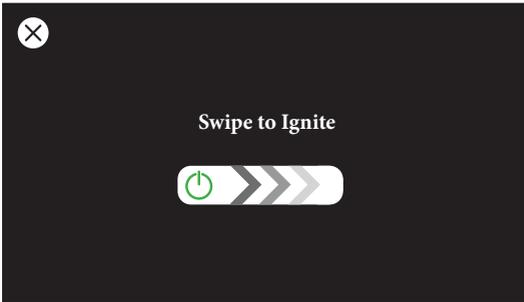

ON/OFF Menu

Screen image :


- System power ON
- System power OFF
- Alarms reset

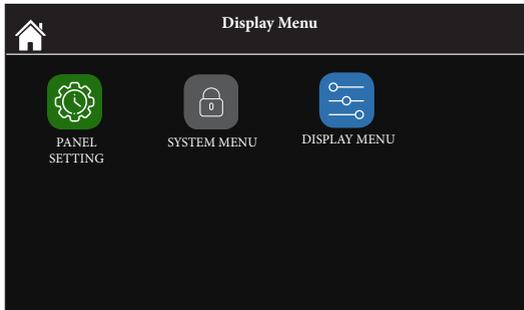

Display Menu



In this screen you can view all the variables of the control panel.

Furthermore, it is possible to access the SYSTEM MENU which is reserved exclusively for technical personnel.

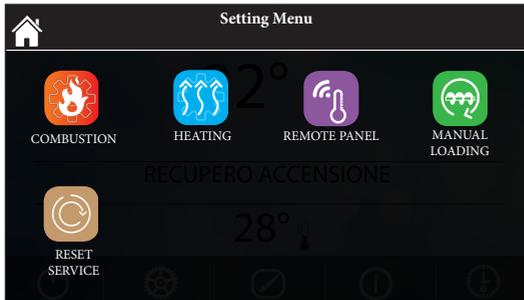

Settings Menu


From this screen it is possible to view all the variables for the proper functioning of the heating system.

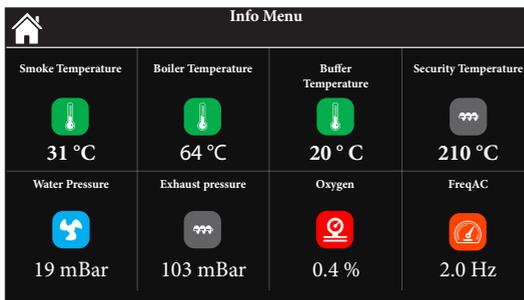

Info Menu

From this screen it is only possible to display the values of all inputs and outputs.

5. CHRONO

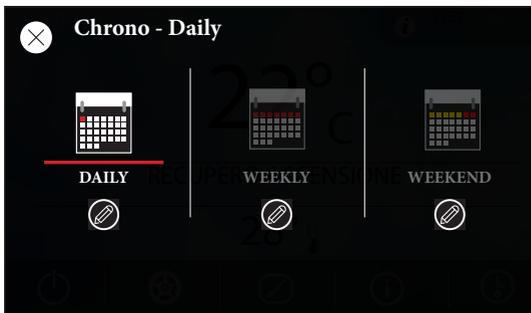

To select the desired CHRONO program, press on the respective tabs:

- Daily
- Weekly
- Weekend.

To change the chrono program, press on .

If the Chrono function is disabled all the tabs are grey.





To edit the time slots, press on the corresponding Frame Time.




Scroll Up or Down to change the System on/off Time

5. INTERNAL MENU STRUCTURE

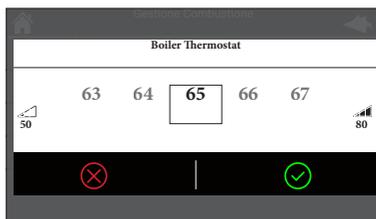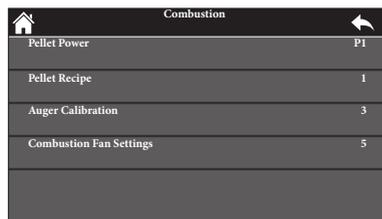

Here are the types of interface used to access, select and modify menu items.

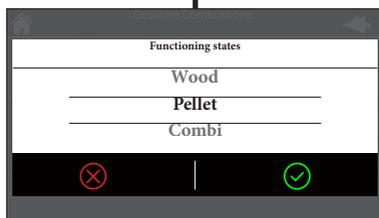

5. INTERNAL MENU STRUCTURE



From the display Menu the user can access the panel settings and select one of 24 languages.



Brightness.



Minimum brightness: this function allows you to choose the minimum brightness level which the device automatically sets to after 30 sec. of inactivity.



Standby display: if enabled, this function will set the screen to standby after 1 minute of inactivity.



Control panel address: password-protected menu (1810) and used to set the control panel address.
In modbus, the address reserved for the local control panel is 16. The address of the first remote control panel is 17 and subsequently the others according to the number provided by the system.



Control panel restart: this function allows the control panel to be restarted.



Sound: this function allows the user to enable / disable the sounds emitted from the control panel.



Delete error list: this password protected function (the same as in the technical menu) allows the user to delete the list of errors recorded by the control panel. The errors recorded are 64.

Nodes list: this menu allows the user to view all the devices connected via Modbus, with their related firmware and revision.

Wallpaper: menu used to select wallpapers loaded in the device. 8 backgrounds are available.

Control panel info: this menu allows the user to view the firmware and revisions that make up the control panel in detail.

DIAGRAM FOR ECOSTAR 12/18/24/30/35 KW

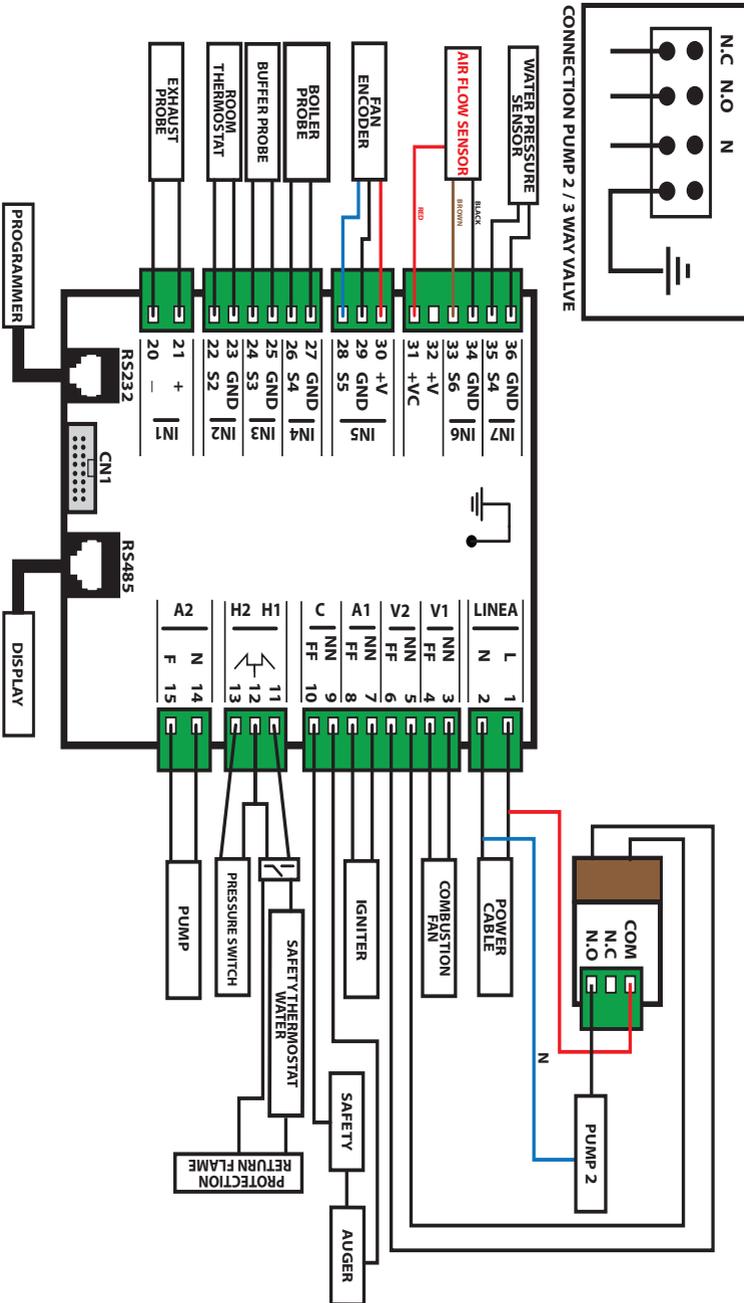


DIAGRAM FOR ECOSTAR AUTO 12/18/24/30/35 KW


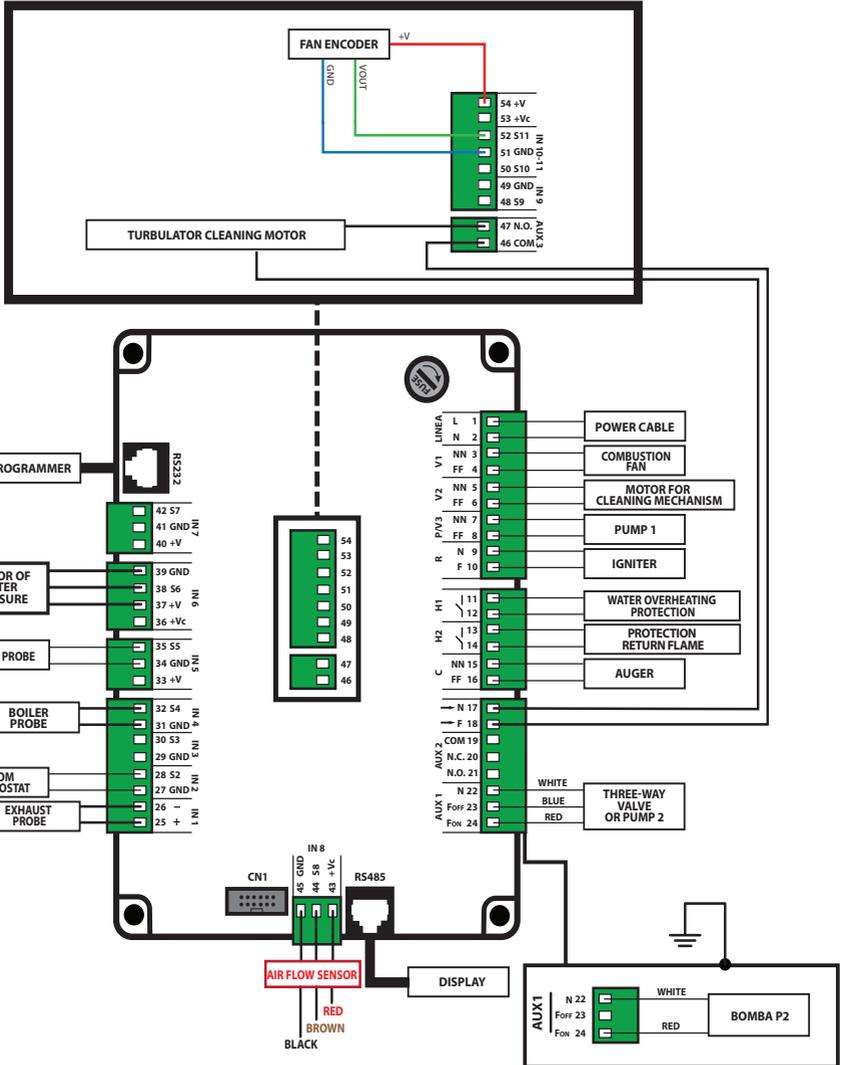


DIAGRAM FOR ECOSTAR AUTO (NG21)

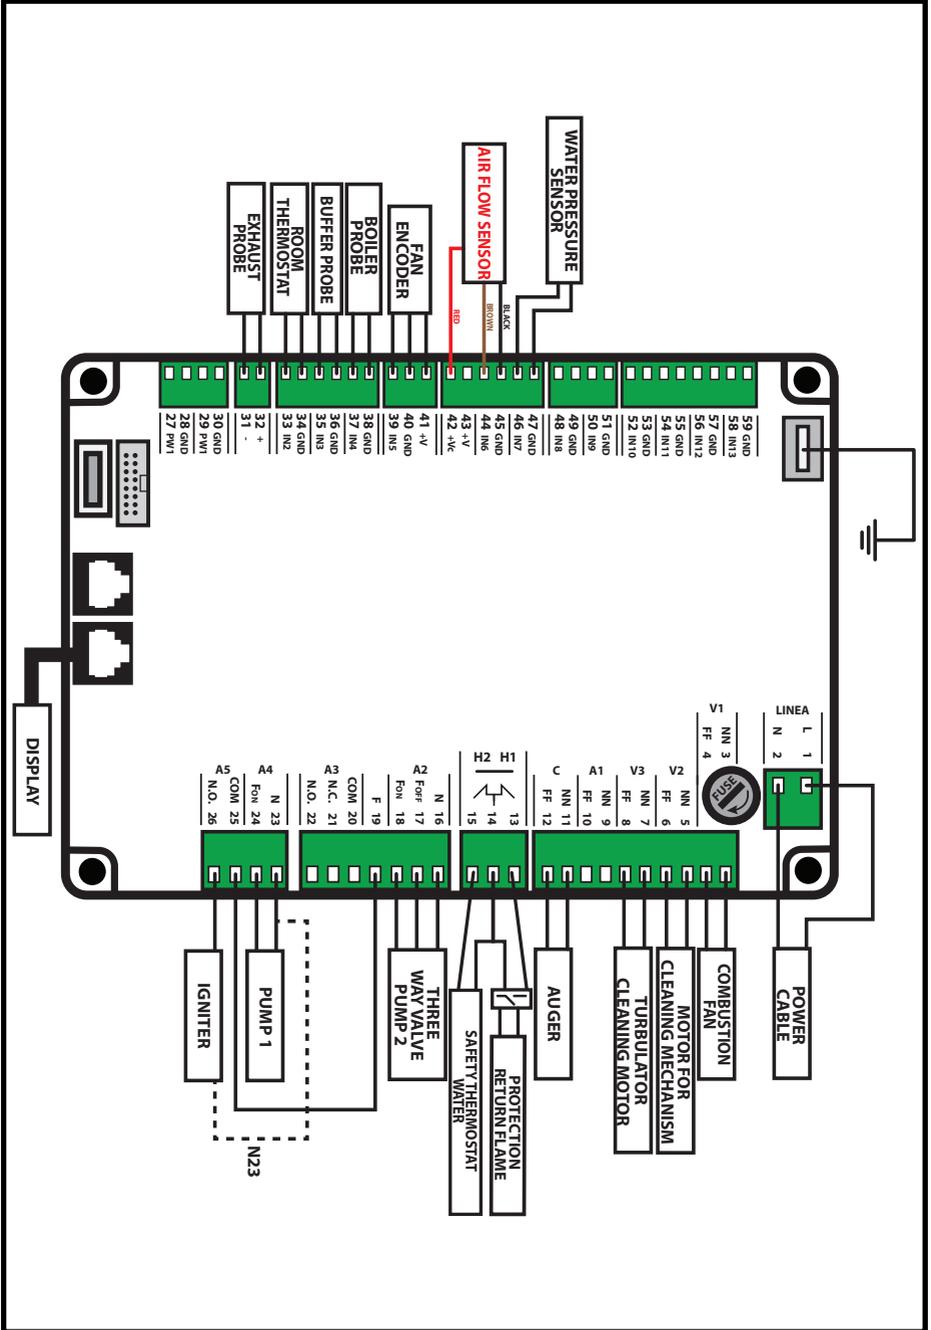

Mareli Systems

Mareli Systems

Industrial Zone
Simitli, 2730
Region Blagoevgrad
Bulgaria

info@mareli-systems.com
www.mareli-systems.com

MARELI SYSTEMS disclaims any responsibility for possible inaccuracies contained in this manual if they are due to printing or transcription errors. We reserve the right to make any change that appears to be necessary or useful without harm the essential characteristics.
